

Lenovo Laptop Batteries (Replacement | Genuine)

[AU Laptop battery](#) >> [Au Laptop Computer Batteries](#) >> [LENOVO Batteries](#)

By Brand: << [Prevpag](#) | [KUNSHAN](#) | [LEADER](#) | [LEMEL](#) | [LENOV](#) | [LENOVO](#) | [LG](#) | [LIFETEC](#) | [LION](#) | [Nextpage](#) >>

All the Lenovo Laptop Batteries

1. [AU Genuine Lenovo L17L3P52 Battery 01AV463 SB10K97610 11.1V 45Wh](#)
2. [AU battery for 2964mAh LENOVO 5B10S73501, ThinkBook 13s-20R900D2CD, 4ICP4/41/110, ThinkBook 13s-20R900CXCD,](#)
3. [AU Genuine Lenovo L18L3PF2 Battery 3ICP6/42/85 For S340 Series Li-Polymer](#)
4. [AU Genuine Lenovo L18D3PF1 Battery Rechargeable 5B10T03400 Li-Polymer 36Wh](#)
5. [AU Genuine Lenovo L18C3PF1 Battery 3ICP6/54/90 Rechargeable Li-Polymer 45Wh](#)
6. [AU Genuine Lenovo L18L4P71 Battery 02DL004 For X1C 2019 Series 51Wh Li-Polymer](#)
7. [AU Original Lenovo L18L3PF4 Battery 3ICP6/55/90 Li-Polymer Rechargeable 52.5Wh](#)
8. [AU Genuine Lenovo L18L3PF3 Battery 3ICP6/55/90 Li-Polymer 11.34v 52.5Wh](#)
9. [AU Genuine Lenovo L18M4PF3 Battery 4ICP4/41/110 Li-Polymer 45Wh Rechargeable](#)
10. [AU Genuine Lenovo L19D4PD1 Battery 2ICP5/44/128-2 Li-Polymer Rechargeable 60Wh](#)
11. [AU Genuine Lenovo L18C6P90 Battery 02DL029 Rechargeable Li-Polymer 11.25V 90Wh](#)
12. [AU Genuine Lenovo L19M4PG0 Battery 4ICP5/44/129 For Y9000X Series Li-Polymer](#)
13. [AU Genuine Lenovo L18C3PD1 Battery Li-Polymer 02DL016 11.52v 57Wh](#)
14. [AU Genuine Lenovo L17S6P72 Batteries 01AV485 Li-Polymer 11.4v 48Wh](#)
15. [AU Genuine Lenovo 02DL031 Battery L18C4P90 Li-Polymer Rechargeable 46Wh](#)
16. [AU Genuine Lenovo L18M4PE0 Battery Rechargeable For Yoga C740 Series](#)
17. [AU Genuine Lenovo L18M6PD2 Battery 02DL018 Li-Polymer Rechargeable 48Wh](#)
18. [AU Genuine Lenovo L19M4PD2 Battery L19L4PD2 Li-Polymer Rechargeable 62Wh](#)
19. [AU Genuine Lenovo L17M2P54 Battery Rechargeable SB10K97633 Li-Polymer 7.68v](#)
20. [AU Genuine Lenovo L18M3PF1 Battery For Ideapad L340 Series 11.4v Rechargeable](#)
21. [AU Genuine Lenovo L18D3PF2 Battery Li-Polymer 3ICP4/67/140 11.52v 5235mah](#)
22. [AU Genuine Lenovo L18L3PF7 Battery 5B10U95571 Rechargeable Li-ion 42Wh](#)
23. [AU Genuine Lenovo L18M3PFA Battery 5B10T83739 For YOGA C740 Series Rechargeable](#)
24. [AU Genuine Lenovo L18M4PC0 Battery 5B10T07386 Li-Polymer Rechargeable 7.72v](#)
25. [AU Genuine Lenovo L18M4PH0 Battery 5B10T11586 Li-Polymer 7.68v 60Wh Rechargeable](#)
26. [AU Original Lenovo L152PB2 Battery Li-Polymer Rechargeable 29Wh 7.6v](#)
27. [AU Genuine Lenovo L13M3F01 Battery For IdeaPad S215 S210 Rechargeable](#)
28. [AU Genuine Lenovo L19C3PF1 Battery SB10V25242 Rechargeable 11.52V 45Wh](#)
29. [AU Genuine Lenovo L18C6PD2 Battery SB10K97663 Rechargeable 02DL027 Li-ion](#)
30. [AU Genuine Lenovo L19M3P71 Battery SB10V03234 Rechargeable Li-Polymer 50Wh](#)
31. [AU Genuine Lenovo L19M2PF0 Battery Rechargeable Li-Polymer 7.5v 35Wh](#)
32. [AU Genuine Lenovo L18D4PF1 Battery 5B10T83737 Rechargeable Li-Polymer 67.5Wh](#)
33. [AU Genuine Lenovo L18M3PFB Battery Rechargeable 5B10U95573 Li-Polymer 42Wh](#)
34. [AU Genuine Lenovo L18M6P90 Battery 02DL028 For ThinkPad P53 Li-Polymer](#)
35. [AU Genuine Lenovo L18M6PD3 Battery Rechargeable SB10K97662 Li-Polymer 48Wh](#)

36. [AU Genuine Lenovo L19C3PF0 Battery SB10V25232 Rechargeable Li-Polymer 36Wh](#)
37. [AU Genuine Lenovo L19C4PG0 Battery SB10V26972 Li-Polymer Rechargeable 60Wh](#)
38. [AU Genuine Lenovo L19D3PF0 Battery SB10V25243 Li-Polymer Rechargeable 36Wh 11.25v](#)
39. [AU Genuine Lenovo L19D3PF1 Battery SB10V25236 Li-Polymer 11.4V 45Wh](#)
40. [AU Genuine Lenovo L19D3PF2 Battery Li-Polymer Rechargeable 11.52v 57Wh](#)
41. [AU Genuine Lenovo L19L3PF2 Battery SB10W86961 Rechargeable Li-Polymer 57Wh](#)
42. [AU Genuine Lenovo L19M3PF0 Battery Li-Polymer Rechargeable SB10V25234](#)
43. [AU Genuine Lenovo L19M3PF1 Battery SB10V25248 Rechargeable Li-Polymer 11.4v](#)
44. [AU Genuine Lenovo L19M3PF2 Batteries Li-Polymer 11.52v SB10V25233 Rechargeable](#)
45. [AU Genuine Lenovo L15M3PB0 Battery For FLEX4-1580 Series](#)
46. [AU Genuine Lenovo SB10H45077 Battery 00NY492 For ThinkPad P51 Series Laptop 90Wh](#)
47. [AU Genuine Lenovo L17C6PF0 Battery Li-ion 5B10R38648 4220mah 48Wh](#)
48. [AU Genuine Lenovo L18L3P72 Battery SB10K97659 02DL021 Li-Polymer 11.55V 51Wh](#)
49. [AU Genuine Lenovo L18M4P71 Battery 01YU911 01YU99 Li-Polymer 80Wh](#)
50. [AU Genuine Lenovo L18M6P71 Battery 02DL023 Li-ion 11.52v 48Wh](#)
51. [AU Lenovo L15C2PB7 Battery For IdeaPad 310-15IKB Series Li-Polymer 39Wh](#)
52. [AU L17M4PH2 Battery L17M4PH1 For Lenovo YOGA 930-13IKB Series Laptop](#)
53. [AU Lenovo L19L3PF1 Laptop Battery 3ICP6/55/90 Li-Polymer 11.55v 57Wh](#)
54. [AU LENOVO L17C4PH3 Battery For Yoga X630 Series Laptop 61Wh Li-Polymer](#)
55. [AU Lenovo L18D4P90 Battery 02DL032 SB10T83121 Li-Polymer 15.36V 46Wh](#)
56. [AU Lenovo L18M3PF2 Battery 5B10T03404 Li-Polymer 36Wh 11.25V](#)
57. [AU L18M4P72 Battery SB10K97643 For Lenovo ThinkPad X1 Carbon 2019](#)
58. [AU L18M4PF4 Battery For Lenovo Ideapad S540 Laptop Li-Polymer 15.44v](#)
59. [AU Lenovo L18M4PF5 Laptop Battery Li-Polymer 15.2v 4610mah](#)
60. [AU Lenovo L15L3PB0 Battery For IdeaPad 320s-14IKB Ideapad FLEX4 Type 2](#)
61. [AU Genuine Lenovo 42T4857 42T4806 Battery For E30 E31 Laptop 2.8Ah 42Wh](#)
62. [AU Original Battery For Lenovo Yoga 520-14isk 520-14ikb 520-14ast Series L15C3PB1](#)
63. [AU L10S6F01 Battery For Lenovo IdeaPad Y570 Laptop Li-ion 62Wh](#)
64. [AU L10P6F1 Battery L10S6F01 For Lenovo Y470 Y570 6cells Li-ion](#)
65. [AU Genuine L17M2PB5 L17L2PB5 DVD Ultrabay Li-Polymer Battery For Lenovo V330-14IKB 15](#)
66. [AU Genuine 45N1040 45N1041 DVD Ultrabay Battery For Lenovo T60 T61 T420S T430S T500](#)
67. [AU 42T4967 Genuine Slice Battery For Lenovo ThinkPad X220T X220 X220i X220s Tablet](#)
68. [AU Lenovo L15M4P23 Battery L15M4P21 For Yoga 910 Laptop 78Wh Li-ion](#)
69. [AU Lenovo Mobile Phone 8.4Wh L17D1P35 Battery 2200mah 8.4Wh Li-Polymer](#)
70. [AU L17C2PF1 Battery For Lenovo Miix 330 Li-Polymer 5070Mah 7.7V](#)
71. [AU Lenovo L18C3PF2 Battery For IdeaPad L340 Series Li-Polymer 11.25V 36Wh](#)
72. [AU Lenovo L18C3PF7 Battery Li-Polymer 11.4v 52.5Wh L18C3PF6](#)
73. [AU L18C3PF6 Battery Lenovo 5B10T09092 Li-Polymer 11.25V 36Wh 3cells](#)
74. [AU Lenovo L18M3PF7 L18M3PF6 Battery For IdeaPad S340 Series Li-Polymer 52.5 Wh](#)
75. [AU Lenovo L18M3PF8 Battery Li-ion 11.4V 52.5Wh 3ICP6/54/90](#)
76. [AU L18C4P71 Battery Lenovo SB10K97644 Li-Polymer 15.36v 51Wh](#)
77. [AU L18C4PC0 Battery Pack Li-Polymer Lenovo 5B10T07385 7.72V 52Wh](#)
78. [AU L18C6PD1 Battery L18M6PD1 For Lenovo ThinkPad X390 Laptop Li-Polymer 48Wh](#)
79. [AU Lenovo L18L3PF4 Batteries Pack Li-Polymer 11.34v 52.5Wh](#)
80. [AU Lenovo L18L3PF6 Battery 3ICP6/55/90 Li-Polymer 11.34V 4630Mah](#)

81. [AU L18M3P52 Battery Lenovo SB10K97640 Li-Polymer 11.25v 42Wh](#)
82. [AU Lenovo L18M4PF0 Battery Li-ion 4ICP4/41/110 15.36V 45Wh 2965mah](#)
83. [AU Lenovo L18M3PG2 Battery Pack Li-ion 11.52V 57Wh 4955mah](#)
84. [AU Lenovo L13M2P21 Battery For Ideapad A10 Series Li-Polymer 22.6Wh](#)
85. [AU Genuine 45N1016 External Battery For 45N1017 Lenovo Thinkpad T410 T420 T430 T510 28+](#)
86. [AU Lenovo L17C3PG0 Battery L17L3PB0 L17M3PB0 Li-Polymer 42Wh](#)
87. [AU L17C4PG2 Battery For Lenovo Laptop Li-Polymer 15.4v 74Wh](#)
88. [AU L15M2PB5 Battery L15C2PB5 Lenovo Li-Polymer 7.4v 39Wh](#)
89. [AU L17M3PG2 Battery Lenovo 928QA229H Batteries Li-Polymer 11.52v 57Wh](#)
90. [AU L17C4PE1 Battery Lenovo 5B10R32748 For Yoga S730 Laptop Li-Polymer](#)
91. [AU L17M2PB7 Battery For Lenovo Li-Polymer 7.56v 4000mAh](#)
92. [AU L17M6P72 Battery SB10K97628 Lenovo 01AV484 Li-Polymer 48Wh](#)
93. [AU L18D3PG1 Battery For Lenovo Laptop Li-Polymer 11.25v 42Wh](#)
94. [AU L18D4PF0 Battery For Lenovo Laptop Li-Polymer 15.36v 45Wh](#)
95. [AU L18L3PD1 Battery 3ICP5/88/73 Lenovo Li-Polymer 11.58V 57Wh](#)
96. [AU L18M4PG0 Battery Lenovo 928QA237H Li-Polymer 7.5v 56wh](#)
97. [AU 3UR18650F-2-LNV-2 Battery For Lenovo F20 F21 Laptop 11.1v Li-ion](#)
98. [AU 5B10N38140 Battery LENOVO BBLD3372D8 Li-Polymer 3.7v 33.3Wh](#)
99. [AU 01AV459 Battery Lenovo Li-Polymer L16M3P71 11.46V 24Wh](#)
100. [AU 01AV495 Battery Li-ion 01AV496 Lenovo 11.25v 90Wh](#)
101. [AU LENOVO L15D1P31 Battery Li-Polymer SB18C01830 3.8v 15.2Wh](#)
102. [AU 31507325 Battery Li-Polymer Lenovo 3INR19/65-2 10.8v 48Wh](#)
103. [AU L17M3P55 Battery Li-Polymer Lenovo 01AV482 11.1v 45wh](#)
104. [AU Genuine L17L3P51 Battery Lenovo 01AV445 Li-Polymer 11.1v 45Wh](#)
105. [AU L8C4PF3 Battery Lenovo Li-Polymer 4ICP4/41/110 15.36v 2964mAh](#)
106. [AU 5B10R61073 Battery Li-Polymer Lenovo 2ICP4/58/146 7.5v 32Wh](#)
107. [AU 0813008 Battery Li-Polymer Lenovo 3.7v 34wh](#)
108. [AU 121001787 Battery Lenovo Li-Polymer 10.8v 9930mAh 108Wh](#)
109. [AU LENOVO BSNO3372D8 Battery Li-Polymer 3.7v 34.3Wh](#)
110. [AU SN03558E5 Battery Lenovo Li-Polymer 2ICP4/58/145 7.6v 31Wh](#)
111. [AU L14M4PA0 Battery Lenovo SB10K10386 Li-Polymer 14.8v 50Wh](#)
112. [AU L16D1P31 Battery For Lenovo SB18C06924 Li-Polymer 3.82v 15.4Wh](#)
113. [AU L16D1P32 Battery Li-Polymer 1ICP4/78/97 Lenovo 3.82v 15.5wh](#)
114. [AU L16D1P34 Battery Li-Polymer Lenovo 3.85V 18.7Wh](#)
115. [AU L16D2P31 Battery Lenovo SB18C15128 Li-Polymer 3.85v 27Wh](#)
116. [AU L16D3P32 Battery Li-Polymer Lenovo 11.5v 46.4Wh 3ICP4/79/97](#)
117. [AU L17D2P31 Battery Li-Polymer Lenovo 7.7v 4650mAh 35.8wh](#)
118. [AU L18C4PG0 Battery Lenovo Li-Polymer 7.5v 56wh 2ICP5/54/90-2](#)
119. [AU L18L3PF1 Battery Lenovo 5B10T03403 Li-Polymer 11.34v 36Wh](#)
120. [AU L18L4PF0 Battery Lenovo Li-Polymer 15.12v 70Wh 5B10T09088](#)
121. [AU SB10K97637 Battery Lenovo L17C6P51 Li-Polymer 11.4v 99Wh](#)
122. [AU SB10K97639 Battery Lenovo L18L3P51 Li-Polymer 11.25v 42Wh](#)
123. [AU SB10K97645 Battery Li-Polymer L18C3P73 Lenovo 11.55v 51wh](#)
124. [AU SB10K97649 Battery Lenovo L18L3P71 Li-Polymer 11.58v 57wh](#)
125. [AU SB10K97658 Battery Li-Polymer Lenovo L18D6PD1 11.46v 48Wh](#)

126. [AU SMP-SVEXXXBKA3 Battery Lenovo SVEXXXBKA3 Li-Polymer 11.1v 24.42Wh](#)
127. [AU TABLET01 Battery Li-Polymer Lenovo 1ICP3/72/138-2 3.7v 7000mAh](#)
128. [AU FRU42T4522 42T4519 Battery For Lenovo ThinkPad X300 X301 Series](#)
129. [AU L12L4P61 Battery Li-Polymer For LENOVO U410 U430P](#)
130. [AU 42T4966 42T4985 Battery For Lenovo Thinkpad 1838 Tablet](#)
131. [AU LENOVO 45N1762 Battery Li-ion 45N1759 4400mAh 48Wh](#)
132. [AU SB10L84121 Battery 01AV493 Li-Polymer Lenovo 15.2V 2100mAh](#)
133. [AU Lenovo Thinkpad S3 431 S440 45N1140 45N1141 Laptop Battery](#)
134. [AU L16L4PB3 Battery Li-Polymer Lenovo L16C4PB3 48Wh 7.72V](#)
135. [AU BSN0427488 Battery Lenovo Li-Polymer 7.4V BSN0427488-01](#)
136. [AU LENOVO 00HW041 Battery SB10J78989 Li-Polymer 11.4V 47Wh](#)
137. [AU LENOVO L15L2PB3 Battery Li-Polymer 7.72V 5B10K90806](#)
138. [AU L17L2PB5 Battery L17C2PB5 Li-Polymer LENOVO V130 V330 39Wh](#)
139. [AU L15D1P32 Battery Li-Polymer Lenovo SB18C03200 16Wh 3.8V](#)
140. [AU L14M4E01 Battery Li-ion LENOVO L14L4E01 14.8V 41Wh](#)
141. [AU lenovo 5B10L54987 Battery Xiaoxin Air 12 6Y54 Laptop 5000mah](#)
142. [AU LENOVO 45N1730 Battery Li-Polymer 42N1731 3.7V 8720mAh](#)
143. [AU LENOVO 31504217 Battery Li-ion 41CP5/57/122 14.8V 46Wh](#)
144. [AU 31504218 Battery For Lenovo IdeaCentre Flex 20 41CP5/48/122](#)
145. [AU 31504999 Battery For Lenovo 3INP6/60/80 Li-Polymer 45Wh](#)
146. [AU BSNO4710A5-AT Battery Lenovo Li-Polymer BSN04710A5 7.68V](#)
147. [AU 121000620 Battery BATIGT10L6 Li-Polymer Lenovo E41G K41 E41L E41](#)
148. [AU L10M2I21 Battery Li-Polymer Lenovo IdeaPad Tablet K1 S1](#)
149. [AU LENOVO L10S2P22 Battery Li-Polymer 2ICP5/57/122 24Wh 7.4V](#)
150. [AU L15M4PC3 Battery Li-Polymer Lenovo 5B10L72502](#)
151. [AU LENOVO L15S6PA1 Battery Li-Polymer SB10K10388 11.1V 88Wh](#)
152. [AU LENOVO L16M4P60 Battery Li-Polymer L16C4P61 70Wh 7.68V](#)
153. [AU LENOVO L16L8T2A Battery Li-Polymer 7.6V 44Wh](#)
154. [AU LENOVO L16L8TA2 Battery Li-Polymer 7.6V 45Wh](#)
155. [AU L17D2PF2 Battery LENOVO Li-Polymer 5B10Q93736 7.68V](#)
156. [AU L17M2P52 Battery Lenovo 01AV468 Li-Polymer 38Wh 7.68V](#)
157. [AU L17M3PB1 Battery Lenovo 928QA221H Li-Polymer 45Wh 11.34V](#)
158. [AU L17M3PH0 Battery 928QA210H Lenovo Li-Polymer 48Wh 11.52V](#)
159. [AU L17C4PB2 Battery Li-Polymer Lenovo 3ICP4/41/110 34Wh 11.52V](#)
160. [AU L17M4PH3 Battery 928QA235H Li-Polymer Lenovo 60wh 7.68V](#)
161. [AU LENOVO L18D4PG0 Battery Li-Polymer 5B10R51234 56Wh 7.5V](#)
162. [AU SB10K97638 Battery L17M4P73 Lenovo 01AV499 Li-Polymer 54Wh 15.36V](#)
163. [AU 01AV436 Lenovo Battery Li-Polymer SB10K97593 42wh 11.25v](#)
164. [AU LENOVO 01AV467 Battery Li-Polymer L17M2P51 SB10K97614](#)
165. [AU 01AV403 Battery Li-Polymer O1AV403 Lenovo SB10J79000 40Wh](#)
166. [AU 00HW037 Battery Li-Polymer lenovo SB10F46475 24Wh 11.4V](#)
167. [AU L14M3PB0 Battery L14M3PBO Li-Polymer For Lenovo Notebook](#)
168. [AU L16L4PB2 Battery For Lenovo IdeaPad 720s Series Laptop Li-Polymer](#)
169. [AU L15M2PB6 Battery Li-Polymer For Lenovo YOGA 310 Series Laptop](#)
170. [AU L17C3PE0 Battery Li-Polymer 3ICP6/54/90 For Lenovo Laptop](#)
171. [AU Genuine Li-Polymer L17M2PB3 Battery For Lenovo V130 V330 Series Laptop](#)

172. [AU L17M2PF0 Battery For Lenovo 928QA233H 2ICP6/54/90](#)
173. [AU L16C2PB1 Battery Li-Polymer Lenovo L16S2PB1 7.6V 35Wh](#)
174. [AU LENOVO SB10K97621 Battery 01AV479 Li-Polymer 11.52V 57Wh](#)
175. [AU LENOVO SB10K97627 Battery Li-Polymer For ThinkPad L380 Yoga](#)
176. [AU L17M3P52 Battery 01AV447 For Lenovo ThinkPad R480 Laptop](#)
177. [AU L17M3PB0 Battery Li-Polymer Lenovo 5B10Q13162 5B10Q13164](#)
178. [AU LENOVO SB10K97623 Battery Li-Polymer L17M4P71 54Wh](#)
179. [AU LENOVO SB10K97611 Battery Li-Polymer 01AV466 01AV464](#)
180. [AU Lenovo SB10K97607 Battery Li-Polymer L17M3P51 01AV446](#)
181. [AU L17C3P51 Battery Li-Polymer For Lenovo ThinkPad E580 Series](#)
182. [AU Genuine Lenovo SB10K97595 Battery Li-Polymer 01AV442 01AV443](#)
183. [AU Lenovo L17L3PG1 Battery Li-Polymer For Y7000P Laptop 52Wh](#)
184. [AU L17C3PG2 Battery For Lenovo Legion Y730 Y7000P Laptop Li-Polymer](#)
185. [AU LENOVO L17M6PF0 Battery Li-ion 928QA236H 5B10R33000](#)
186. [AU LENOVO L17M4PG2 Battery Li-Polymer For Legion Y730 4840mah](#)
187. [AU L17C4PF0 Battery For Lenovo xiaoxin Air 13 Li-Polymer](#)
188. [AU L17M4PE1 Battery For Lenovo 928QA232H Li-Polymer 42Wh](#)
189. [AU L17M4PB1 Battery For Lenovo IdeaPad 720S Series Li-Polymer 79wh](#)
190. [AU L17M3PG3 Battery For Lenovo L17L3PG3 Li-Polymer 52.5wh](#)
191. [AU Genuine L17M3P72 Battery Li-Polymer 01AV480 For Lenovo Laptop](#)
192. [AU L17M2PF3 Battery Li-Polymer L17L2PF3 For Lenovo IdeaPad D330](#)
193. [AU L17L2PB6 Battery Li-Polymer L17M2PB6 For Lenovo V330-14](#)
194. [AU L17L2PB4 Battery Li-Polymer L17C2PB4 For Lenovo Laptop 39wh](#)
195. [AU L17L3PH0 Battery Li-Polymer 5B10Q41209 For Lenovo Laptop](#)
196. [AU L17L2PF1 Battery For Lenovo Ideapad 330 Series Laptop Li-Polymer](#)
197. [AU L17D3PB0 Battery For Lenovo 5B10R46704 Li-Polymer 5B10Q71254](#)
198. [AU Genuine L17C4PB0 Battery For Lenovo IdeaPad 530s Series Li-Polymer](#)
199. [AU L17C3PG0 Battery Li-Polymer Lenovo 5B10Q38232 42Wh](#)
200. [AU Lenovo L17C2PB1 Battery Li-Polymer 30Wh 7.6V 4030mAh](#)
201. [AU L17S2P51 Lenovo Battery 01AV469 Li-Polymer 39Wh 7.68V](#)
202. [AU L16M4PB3 Battery For lenovo Ideapad 720S laptop Li-Polymer 7.68V](#)
203. [AU L16L4P91 Battery L16M4P91 Li-Polymer For Lenovo ThinkPad X1 Tablet GEN 3](#)
204. [AU L16D1P33 Battery lenovo 1ICP3/84/94 Li-Polymer 3500mAh 3.85V](#)
205. [AU Lenovo ASM P/N 888007014 Battery Li-ion 10.8V 87Wh](#)
206. [AU L17M2PF2 Battery Lenovo Li-Polymer 5B10Q62138 5B10Q62139 30Wh](#)
207. [AU LENOVO L17L2PB2 Battery L17M2PB2 Li-Polymer 39Wh 7.72V](#)
208. [AU 5B10P23790 Battery Li-Polymer For Lenovo IdeaPad 120S Laptop 27Wh](#)
209. [AU LENOVO 01AV487 Battery Li-Polymer L17L3P56 L17M3P56](#)
210. [AU 01AV470 Battery Lenovo L17C6P71 Li-ion For ThinkPad X280 Series](#)
211. [AU 45N1063 45N1056 Battery For Lenovo ThinkPad E145 X131E Series](#)
212. [AU 100S-14IBR Battery For lenovo NC140BW1-2S1P 2ICP4/58/145 100S14IBR](#)
213. [AU Genuine 0813007 5B10P23779 Battery For Lenovo IdeaPad 120S 120S-14IAP](#)
214. [AU FRU 42T4654 ASM 42T4555 Battery For Lenovo T400 R400 R500 Laptop](#)
215. [AU L14D2P31 Battery For Lenovo TAB 2 A10-70 70F Series](#)
216. [AU Genuine L16S3P24 Battery For Lenovo R720 xiaoxin700 series Laptop](#)
217. [AU BSNO4170A5-AT Battery For Lenovo Miix 510 520 series Laptop](#)

- 218. [AU SB10K97589 Battery For lenovo 00HW026 00HW027 Yoga 260](#)
- 219. [AU Genuine L14M3P22 Battery For Lenovo K41-70 M41-70 Series Laptop](#)
- 220. [AU Genuine Lenovo L15L6A01 Battery L15L6A01 10.8V 48Wh](#)
- 221. [AU Genuine SB10K97590 01AV433 Battery For Lenovo Yoga 370 series Laptop](#)
- 222. [AU Genuine Lenovo L12M4P61 Battery For IdeaPad U330 Series](#)
- 223. [AU Lenovo L17L2PB1 Battery 36Wh 7.6V](#)
- 224. [AU Genuine Lenovo LENM1029CWP Battery For MIIX 310 Series](#)
- 225. [AU Genuine Rechargeable Lenovo L17L3P61 L17M3P61 Battery](#)
- 226. [AU Genuine Lenovo L15M2PB1, L15L2PB1 Battery For YOGA 510 Series](#)
- 227. [AU Genuine Lenovo L15C3A01 L15L3A02 Battery L15C4E01 32Wh](#)
- 228. [AU Genuine Lenovo L15L2PB2 5B10K90806 Battery For IdeaPad 310-14ISK](#)
- 229. [AU 99Wh Genuine Lenovo L15M6PA1 Battery Pack 11.25V](#)
- 230. [AU Genuine lenovo SB10J78995 Battery Pack 00HW047 24Wh](#)
- 231. [AU Genuine Lenovo 01AV415 Battery For ThinkPad E570 Series](#)
- 232. [AU Genuine Lenovo SB10K97587 01AV430 Battery For ThinkPad X1 Carbon 2018](#)
- 233. [AU Genuine Lenovo L15C4P22 Battery L15M4P23 L15M4P21 78Wh](#)
- 234. [AU Genuine Lenovo L15C4PBO Battery Pack L15C4PB0 23Wh](#)
- 235. [AU Genuine Lenovo L15L2PB4 Battery For IdeaPad 310-15ISK 310-15IAP](#)
- 236. [AU 39Wh Genuine Lenovo L15L2PB5 Battery 5B10K87720](#)
- 237. [AU Genuine Lenovo L15L3A03 Battery For Ideapad 300-14ISK 300-15ISK 110-15ACL](#)
- 238. [AU 53Wh Genuine Lenovo L15L3PB0 L15L3PBO Battery Pack](#)
- 239. [AU Genuine Lenovo L15M2PB0 Battery 21CP6/55/90](#)
- 240. [AU Genuine Lenovo L16D3P31 Battery L16C3P31](#)
- 241. [AU Genuine Lenovo L16M4PB1 Battery L16M4PB1 5B10M52740](#)
- 242. [AU Genuine lenovo L17L2PB5 Battery For V330-14IKB 15](#)
- 243. [AU Genuine Lenovo L17L3P54 01AV486 Battery 42Wh](#)
- 244. [AU Genuine Lenovo NE116BW2 5B10M53638 Battery Pack](#)
- 245. [AU Genuine Lenovo L14M4PB0 Battery For 14-ISK 15-ISK Series](#)
- 246. [AU Genuine lenovo L14M4P23 L14M4P22 Battery 60Wh Li-ion](#)
- 247. [AU Genuine Lenovo L14C3P60 Battery Pack 3ICP7/41/96](#)
- 248. [AU Genuine lenovo 14M3P23 Battery 3300mah 36wh](#)
- 249. [AU Genuine Lenovo L14D4K31 Battery L14C4K31 For LENOVO Tablet 2-1371F](#)
- 250. [AU Genuine lenovo L14S3P24 L14M3P24 Battery For R720 Series](#)
- 251. [AU Genuine lenovo L14M6AA0 L14M6AAO Battery For Horizon 2e](#)
- 252. [AU Genuine Lenovo L14M6P21 Battery For IdeaPad Y900 Y910](#)
- 253. [AU Genuine L15C2P31 Battery For Lenovo YOGA BOOK YB1-X91F SB18C04740](#)
- 254. [AU Genuine lenovo L11C2P32 Battery For IdeaTab S6000](#)
- 255. [AU Genuine 6000mah Lenovo H12GT201A Battery For IdeaTab A2109A](#)
- 256. [AU Genuine lenovo L13D2E31 L13C2E31 Battery Pack 23Wh](#)
- 257. [AU Genuine Lenovo L15M3PB0 Battery For FLEX 41470 Series Laptop](#)
- 258. [AU Genuine 42Wh Lenovo L10M6H21 Battery Pack](#)
- 259. [AU 27Wh Genuine Lenovo L10M2121 Battery For IdeaPad K1 Tablet PC](#)
- 260. [AU Genuine lenovo L11C4P32 Battery 29wh Li-ion](#)
- 261. [AU Genuine lenovo L12M2P31 Battery Pack 6800mah](#)
- 262. [AU Genuine lenovo 01AV422 Battery For ThinkPad T470 T570](#)
- 263. [AU Genuine Lenovo 01AV425 Battery For ThinkPad T470 T570](#)

264. [AU Genuine lenovo 00HW026 Battery SB10F46464 SB10F46465](#)
265. [AU Genuine Lenovo 00HW028 Battery SB10F46466 01AV409](#)
266. [AU Genuine lenovo 00HW007 Battery SB10F46445](#)
267. [AU Genuine Lenovo 01AV457 Battery 01AV409 01AV441](#)
268. [AU Genuine Lenovo 00HW040 Battery SB10J78988](#)
269. [AU Genuine Lenovo L15C2PB5 Battery For IdeaPad 31015IKB](#)
270. [AU Genuine Lenovo L15L4P20 Battery Pack 53Wh](#)
271. [AU Genuine Lenovo L16M2PB1 Battery For IdeaPad 320-15IKBRN series](#)
272. [AU Genuine Lenovo L16M4PB0 rechargeable Battery Pack](#)
273. [AU Genuine Lenovo L17L3PE0 Battery Pack rechargeable](#)
274. [AU Genuine Lenovo 00UR892 Battery SB10L84122](#)
275. [AU Genuine Lenovo 31502371 Battery 4ICP5/57/122-2 For Horizon 27](#)
276. [AU Genuine lenovo 31506605 Battery 3ICP5/56/120-2](#)
277. [AU Genuine Lenovo 31505000 Battery 3ICP5/46/75-2](#)
278. [AU Genuine Lenovo L13S2P21 Battery 2ICP5/67/123 For Miix2 11-ITH series](#)
279. [AU 24Wh Genuine Lenovo 00HW048 Battery SB10J78996](#)
280. [AU 25Wh Genuine Lenovo 42T4963 Battery 42T4964 For ThinkPad 1838 Tablet](#)
281. [AU 49Wh Lenovo 31507327 Battery AIO PC HORIZON 2S F0AT](#)
282. [AU Genuine lenovo 11M3P02 Battery 3ICP4/61/69-2](#)
283. [AU Genuine Lenovo L14C1P21 Battery For miix 3 miix3-830 series](#)
284. [AU Lenovo L15S3A02 Battery L15C3A03 For IdeaPad 110-14](#)
285. [AU 54Wh Genuine Lenovo L16M4PA2 Battery Pack](#)
286. [AU Genuine Lenovo L17L2PB3 Battery L17C2PB3 L17M2PB4 2ICP6/55/90](#)
287. [AU 50Wh Genuine LENOVO 00HW003 00HW002 Battery For X1 Carbon3](#)
288. [AU Genuine Lenovo L14D3K32 Battery For YOGA 105F 1051F Series](#)
289. [AU Genuine Lenovo 45N1754 45N1755 Battery For E450 E460 E460C](#)
290. [AU Genuine Lenovo L14D2K31 L14C2K31 Battery For YOGA Tablet2 830LC L851f 830F](#)
291. [AU Ultrabay DVD Lenovo L15C2P01 Battery For V310-14 V310-15 Series](#)
292. [AU Lenovo L15M2PB3 Battery For 310-15ABR 310-15ISK Series Laptop](#)
293. [AU Lenovo L15M2PB4 L15M2PB2 Battery For Chromebook 100s](#)
294. [AU Lenovo IdeaPad Flex 4-1130 Li-ion Battery L15M2PB6 7.5v 4000mah 30wh](#)
295. [AU Lenovo 45N1743 45N1742 Battery For ThinkPad P50 T550 series](#)
296. [AU Lenovo L14M2P23 Battery For IdeaPad 100-14IBY](#)
297. [AU Genuine Lenovo 01AV434 SB10K97591 Battery 51Wh](#)
298. [AU Lenovo 45N1717 45N1716 Battery for ThinkPad Tablet 8 series](#)
299. [AU Lenovo L13N4P01 Battery For Y50-70 Series Laptop](#)
300. [AU Lenovo L14M2P22 Battery For Flex3 Series Laptop](#)
301. [AU Lenovo L14M4P21 L14S4P21 Battery For M41-80 Laptop](#)
302. [AU Genuine LENOVO L14M4P22 Battery For S21e-20 Series Laptop 7.4V 23Wh](#)
303. [AU Genuine Lenovo 01AV404 SB10J79001 Battery 5.34Ah](#)
304. [AU Lenovo SB10H45071 00NY488 00NY489 Battery For ThinkPad L560](#)
305. [AU Genuine Lenovo 00HW024 SB10F46462 Battery 11.1v 24Wh](#)
306. [AU Genuine Lenovo SB10F46438 00HW000 Battery For ThinkPad Yoga 14](#)
307. [AU Genuine Lenovo 00HW044 SB10J78992 Battery For Yoga 11e Series](#)
308. [AU Genuine Lenovo 00HW008 Battery For ThinkPad Yoga 15 Series Laptop](#)
309. [AU Genuine Lenovo 01AV419 01AV420 Battery For ThinkPad T470 series](#)

- 310. [AU Genuine Lenovo 01AV401 SB10J78998 Battery For ThinkPad New S2](#)
- 311. [AU Genuine Lenovo 01AV412 SB10K97569 Battery 45Wh 11.1V](#)
- 312. [AU Genuine Lenovo 13M4A61 L13S4A61 Battery For FLEX2 15 Series Laptop](#)
- 313. [AU Lenovo L13M4P61 Battery For Flex 2 Pro-15 Series Laptop](#)
- 314. [AU Genuine Lenovo L15L4A02 Laptop Battery 14.4v 32Wh](#)
- 315. [AU Genuine Lenovo 15M6PC0 15M6PC0 Battery 46wh 7.5v](#)
- 316. [AU Genuine Lenovo L16C4PB1 Battery For Yoga 720 13 Series Laptop](#)
- 317. [AU Genuine Lenovo NB116 Battery For IdeaPad 100S](#)
- 318. [AU Genuine Lenovo SB10F46455 00HW016 Battery 32Wh](#)
- 319. [AU Genuine Lenovo SB10F46465 00HW027 Battery For ThinkPad Yoga 260](#)
- 320. [AU Lenovo SB10F46467 FRU 00HW029 Battery For ThinkPad X1 Carbon 20FB](#)
- 321. [AU Genuine LENOVO SB10F46468 00HW030 For ThinkPad P70](#)
- 322. [AU Genuine lenovo 00HW045 SB10J78993 Battery For ThinkPad X1 Tablet](#)
- 323. [AU New Genuine 01AV413 01AV412 Battery For Lenovo ThinkPad E470 E475 Laptop](#)
- 324. [AU Lenovo L14L4P24 L14M4P24 Battery For Yoga 900 Laptop](#)
- 325. [AU Lenovo SB10K97578 01AV421 Battery 24Wh 11.46V](#)
- 326. [AU Genuine Lenovo L15L3PB1 L15M3PB1 Laptop Battery 45Wh 11.1V](#)
- 327. [AU Lenovo 01AV400 SB10J78997 Laptop Battery 42Wh 11.4V](#)
- 328. [AU Lenovo L15M4PC2 Battery Rechargeable For YOGA 710-14 Series](#)
- 329. [AU Lenovo L15C3PB1 Rechargeable Li-ion battery 52.5Wh](#)
- 330. [AU Lenovo L14S3A01 Battery For Ideapad 100-15IBY Series 24wh](#)
- 331. [AU Lenovo L15M3PB2 L15C3PB0 Battery 45Wh 11.25V Li-ion](#)
- 332. [AU Lenovo L15M4PC0 Battery For IdeaPad 710S series Laptop Li-ion](#)
- 333. [AU Lenovo L16L6PC1 Battery Rechargeable Li-Polymer 72wh 11.58V](#)
- 334. [AU LENOVO L16M4PB2 Battery 15V 3675mAh 55Wh Li-ion](#)
- 335. [AU Lenovo YOGA 900S Laptop Battery L15M4P20 Genuine](#)
- 336. [AU Genuine Lenovo ThinkPad Yoga 11E Laptop Battery 45N1750 45N1751](#)
- 337. [AU Genuine Lenovo MIIX2 10 Inch Laptop Battery L13M2P22 L13N2P21](#)
- 338. [AU Genuine Lenovo SB10F46444 Laptop Battery](#)
- 339. [AU Genuine Lenovo ThinkPad Yoga 460 Laptop Battery SB10F46459](#)
- 340. [AU Lenovo L15M6P11 L15C6P11 Battery For ideapad 700S](#)
- 341. [AU Original Lenovo 45N1728 45N1729 45N1726 45N1727 Battery](#)
- 342. [AU Genuine L14M3P21 battery for Lenovo Ideapad Flex 4 1470 Yoga 500](#)
- 343. [AU Genuine L14M4P73 Battery For Lenovo Yoga 700 Series](#)
- 344. [AU Lenovo ThinkPad Yoga 15 00HW008 00HW009 SB10F46447 PC Battery](#)
- 345. [AU L12N2P01 L12M2P01 Battery For Lenovo IdeaPad Miix 10 Tablet](#)
- 346. [AU L14M2P24 L14S2P22 Battery For Lenovo E31 U31 Series Laptop](#)
- 347. [AU Genuine L15C2PB1 Battery For Lenovo Yoga 510 Series](#)
- 348. [AU Lenovo L13M6P61 Battery l13m6p61 34.8Wh 11.1V](#)
- 349. [AU Lenovo L13M4P01 L13L4P01 Battery For Lenovo Y40 Series](#)
- 350. [AU Lenovo L14L4A01 Battery For Z41-70 Series Laptop](#)
- 351. [AU LENOVO L15L4PC1 Battery 40Wh 5264mah For Yoga 710](#)
- 352. [AU Lenovo L15L4PC3 Battery 41Wh 7.72V](#)
- 353. [AU Lenovo L16L4PB1 Battery For Laptop 48wh 7.2v](#)
- 354. [AU Lenovo SB10F46452 00HW014 Battery For ThinkPad Yoga 15](#)
- 355. [AU Lenovo 45N1166 45N1167 battery For ThinkPad S531 S540 Laptop](#)

- 356. [AU L14L4P71 L14M4P71 Battery For Lenovo Yoga 3 11 Series Laptop](#)
- 357. [AU Lenovo L14S4P22 4ICP6/54/90 Battery For IdeaPad Y700 Laptop](#)
- 358. [AU Lenovo L143PB0 Battery 11.4v 52.5Wh L14L3PBO](#)
- 359. [AU Lenovo L16S4TB0 Battery 14.6V 60Wh L16S4TBO Black](#)
- 360. [AU Lenovo SB10J78991 00HW043 Battery For ThinkPad Yoga 11e Laptop](#)
- 361. [AU Lenovo 00HW010 SB10F46448 Battery For Thinkpad Helix 2 Series](#)
- 362. [AU Lenovo L14L4P72 Battery For YOGA 700 Series Laptop](#)
- 363. [AU Original / Genuine LENOVO Yoga 11S, L11M4P13, IdeaPad Yoga 11S Model 20246, Yoga 11,](#)
- 364. [AU Lenovo ThinkPad P50 SB10H45075 00NY490 77+ Laptop Battery](#)
- 365. [AU Genuine Lenovo ThinkPad P50 P51 Battery SB10H45078 90Wh 9cell](#)
- 366. [AU Genuine Lenovo L13M2P23 Miix 2 11 MIIX 211-TAB Laptop battery](#)
- 367. [AU Genuine laptop battery for lenovoablet 2 1050F 1051F L14C3K31](#)
- 368. [AU SB10F46439 00HW001 Battery For Lenovo ThinkPad S3 Yoga 14](#)
- 369. [AU New 40Y6999, 40Y7001, 40Y7003, Replacement Battery For Lenovo ThinkPad X60 1702, ThinkPad X60 2510, ThinkPadX60s 1709 Laptop 14.4v 8cell](#)
- 370. [AU New 40Y6799 42T4504 Battery For Lenovo ThinkPad R60 R61 Laptop](#)
- 371. [AU New 42T4857, 57Y4564, 57Y4565, Replacement Battery For Lenovo ThinkPad Edge E30, ThinkPad Edge E31, 14.8v](#)
- 372. [AU New 45K1275, 51J0399, 51J0398, Replacement Battery For Lenovo, IdeaPad S10 4231, IdeaPad S10C, IdeaPad S10e4068, IdeaPad S10e 4187, white, 9cell](#)
- 373. [AU New 45K1275, 51J0399, 51J0398, For Lenovo IdeaPad S9e, Idea Pad S10e, IdeaPad S10e4187, deaPad S10e4068, Black 9cell](#)
- 374. [AU New Lenovo IdeaPad Y460 Y470 Y470N Y470G Y570A B560 B560A Replacement Laptop Battery 6-Cell L09N6D16 L10N6Y01](#)
- 375. [AU 42T4895, 42T4897, 57Y4558, 57Y4559, Battery For lenovo ThinkPad Edge E10, ThinkPad mini10, ThinkPad X100e, ThinkPad Edge 11 Battery](#)
- 376. [AU New L09M6Y23, L09M6D21, L09P6D21, L10P6Y21, For Lenovo E46, K46, E46A, K46A, E46L, E46G, battery Black 6cell](#)
- 377. [AU Lenovo Replacement Laptop Battery T420S T430S 42T4847 42T4846 6cells](#)
- 378. [AU Lenovo T420S T430S 42T4847 42T4846 Laptop Battery 6cells](#)
- 379. [AU Genuine Lenovo L15S2P01 Laptop Battery](#)
- 380. [AU Genuine L13S4A01 L13M4A01 L13L4A01 Battery for Lenovo M4400 M4500 G550S B40 B40-70 series laptop](#)
- 381. [AU Lenovo ThinkPad X220 X220i X220s Series Replacement Laptop Battery 42T4873 42Y4874](#)
- 382. [AU New LO8L6D13 LO8O6D13 Replacement Battery For Lenovo IdeaPad Y450 IdeaPad Y450 20020 Laptop](#)
- 383. [AU New Lenovo ThinkPad T410 ThinkPad T510 Laptop Battery 42T4817](#)
- 384. [AU New Lenovo ThinkPad T410 T510 T520 Replacement Laptop Battery 45N1010 45N1011](#)
- 385. [AU Lenovo Thinkpad Edge E430 E435 Replacement Laptop Battery L11S6F01 L11N6Y01](#)
- 386. [AU Replacement Battery For IBM LENOVO ThinkPad X220 X220i X220t X230 Tablet 0A36286 42T4879](#)
- 387. [AU New Lenovo ThinkPad X230 X230i Replacement Laptop Battery 45N1027 45N1023](#)
- 388. [AU 72Wh New Genuine 45N1124 45N1125 68+ Battery For Lenovo ThinkPad X240 T440 T440S Series Laptop](#)
- 389. [AU New Genuine Lenovo ThinkPad X230 X230S X230i Laptop Battery 42T4861 44+](#)

- 390. [AU New Genuine LENOVO YOGA2 13 Laptop Battery L13M6P71 L13S6P71](#)
- 391. [AU New L14S4PB0 Genuine Battery For Lenovo 14-ISK 15 Laptop](#)
- 392. [AU Original LENOVO L15C4P71 Battery, 7.6V, 40WH](#)
- 393. [AU New Genuine Lenovo L15M4P20 Laptop Battery](#)
- 394. [AU New Genuine L15M4A01 L15L4A01 Battery For Lenovo Ideapad 100 80QQ series Laptop](#)
- 395. [AU New Genuine L09L6Y02 L09M6Y02 Battery For Lenovo IdeaPad G460 Series Laptop](#)
- 396. [AU New OEM L12M4E01 L12S4E01 Battery For Lenovo IdeaPad G400s G510s Series Laptop](#)
- 397. [AU New OEM L11S6R01 L12L6E01 Battery for Lenovo IdeaPad Y400 Y490A Y490N Y500P Y590N Laptop](#)
- 398. [AU New Genuine 45N1117 45N1116 Battery For Lenovo Thinkpad X230s X240s Touchscreen series](#)
- 399. [AU New Genuine 45N1120 45N1121 Battery for Lenovo ThinkPad T431s Laptop](#)
- 400. [AU Genuine New 45N1705 45N1706 45N1707 Battery For Lenovo Thinkpad 12.5inch S1 Yoga Laptop](#)
- 401. [AU New Genuine 45N1760 45N1761 Battery For Lenovo ThinkPad E555 E550 E550C Series Laptop](#)
- 402. [AU New Genuine L12L4P62 Battery Fro Lenovo Ideapad U430 U530 Touch Laptop](#)
- 403. [AU New Genuine L12C3A01 L12M3A01 Battery for Lenovo IdeaPad S210 IdeaPad S215 Laptop](#)
- 404. [AU NEW L13L3P61 ORIGINAL Battery For Lenovo Chromebook N20p Laptop](#)
- 405. [AU New Genuine L13L4P61 Battery for LENOVO EDGE 15 Laptop](#)
- 406. [AU New L13M4P21 Genuine Battery For Lenovo Yoga2 11 Series Laptop](#)
- 407. [AU New Genuine L14L4P71 Battery for Lenovo YOGA 3 11 Series Laptop](#)
- 408. [AU Genuine New L14L2P21 Battery for Lenovo Ideapad 300s Laptop](#)
- 409. [AU New Genuine Original L14M4P24 66Wh Battery for Lenovo YOGA 4 PRO YOGA 900 Laptop](#)
- 410. [AU Genuine L14M4P72 Battery For Lenovo Lenovo Yoga3 14 Laptop](#)
- 411. [AU New Genuine L14S4P72 7.5V 45WH Battery For Lenovo Yoga 3 14 Laptop](#)
- 412. [AU New L13M4P71 5900mah Battery For Lenovo Yoga 3 Pro 1370 Series Laptop](#)
- 413. [AU Genuine New Lenovo ThinkPad 00HW025 SB10F46463 Laptop Battery 11.4V 24WH](#)
- 414. [AU New Genuine LENOVO SB10F46460 00HW022 Laptop Battery 11.25V 24Wh](#)
- 415. [AU Genuine LENOVO 0NY491 SB10H45076 66Wh Battery For ThinkPad P50 Series](#)
- 416. [AU New 42T5239 42T5238 Replacement Battery For Lenovo 3000 N200 15.4 Inch Laptop](#)
- 417. [AU New Lenovo 3000 N200 0769 Laptop Battery 42T5252 42T5235 9cells](#)
- 418. [AU New Battery 45N1127 45N1128 Lenovo ThinkPad X240 X240s T440 Laptop](#)
- 419. [AU New 42T4881 42T4882 Replacement Battery For LENOVO X220T X220 Tablet](#)
- 420. [AU New L12L4K01 L12S4E21 Replacement Battery For Lenovo ThinkPad X240s ThinkPad Z400A Laptop](#)
- 421. [AU New L12S4Z01 Replacement Battery for Lenovo IdeaPad S300 IdeaPad S400 Laptop](#)
- 422. [AU New L12L4K01 L12S4K01 Battery For LENOVO IdeaPad P500, P500 TOUCH Laptop](#)
- 423. [AU New L11N6R01 L11P6R01 Replacement Battery For Lenovo IdeaPad Y480 Y580 Z480 Thinkpad E530 Laptop](#)
- 424. [AU Brand New Lenovo ThinkPad X1 Laptop Battery 42T4936 42T4977 14.8V 39Wh](#)
- 425. [AU Genuine Built-in Battery 45N1108 45N1109 45N1110 45N1111 Lenovo ThinkPad T440S T440 X230s X240 S440 S540 Series Laptop](#)
- 426. [AU Genuine LENOVO T431S S230u Twist Laptop Battery 45N1094 45N1095 14.8V 43Wh](#)
- 427. [AU Genuine New LENOVO U260 L09M4P16 Battery 14.8V 39Wh](#)

428. [AU Genuine L12S4Y51 battery for Lenovo M490s B4400SA K4350A K4450 B490S Laptop](#)
429. [AU Genuine L12L4K01 L12S4E21 L12S4K01 Battery For Lenovo IdeaPad P500 P500 TOUCH ThinkPad X240s Z400A Z500 Z500A Z400 TOUCH Laptop](#)
430. [AU Genuine Lenovo IdeaPad S2010 Tablet PC Battery L10M4P21](#)
431. [AU Genuine Lenovo S5000 S5000-H S5000-F Tablet PC Battery L13D1P31](#)
432. [AU Genuine L12C4P11 Battery for Lenovo Laptop 6480mAh](#)
433. [AU Genuine Lenovo A8-50 A5500 A5500-HV Tablet PC Battery](#)
434. [AU Genuine LENOVO L10M4P22 rechargeable Li-Polymer Battery 3.7V 28Wh](#)
435. [AU Genuine Lenovo L10M2P22 KB3073 3840mAh battery](#)
436. [AU Genuine Lenovo IdeaTab A2109 A2109A-F Battery](#)
437. [AU Genuine New L12M4P21 54Wh Battery For Lenovo Yoga 2 Pro 13 Y50-70AS-ISE Laptop](#)
438. [AU Genuine L13C2E31 Lenovo Yoga B6000 8 inch Tablet battery](#)
439. [AU Genuine New Lenovo A3000 A3000-H A5000 IdeaTab PC Battery L12D1P31](#)
440. [AU Genuine 45N1096 45N1097 Battery for LENOVO IBM Tablet 2](#)
441. [AU L09S6Y21 L09M6Y21 Battery For Lenovo B450 B450A 4400mah](#)
442. [AU L12S4A01 L12S4K51 L12M4K51 battery for lenovo IdeaPad Flex14AT Flex14AP Flex15 FlexM Flex15D S500](#)
443. [AU Genuine lenovo Flex 14M 15 15M L12S4A01 L12S4K51 L12M4K51 IdeaPad S500 battery](#)
444. [AU Genuine L12S4Z01 Battery for Lenovo IdeaPad S300 S300-a Series Laptop](#)
445. [AU Genuine L13D3E31 L13C3E31 L13D3E31 Battery for Lenovo YOGA B8000 10-inch Tablet PC](#)
446. [AU Genuine L10M2P21 Battery for Lenovo IdeaPad S2007A PAD 7.0 inch Tablet PC S2007A S2007A-D](#)
447. [AU Genuine L11M3P01 battery for lenovo IdeaPad U310 13.3 inch laptop](#)
448. [AU battery for 0mAh LENOVO FOAO5AV.](#)
449. [AU Genuine L12S4K01 L12L4K01 L12S4E21 Battery For Lenovo ThinkPad Z400 TOUCH Z500 Z500A P500 Z400A X240s P500 TOUCH Laptop](#)
450. [AU Genuine Lenovo A2107 A2207 A2107A A2207A-H BL195 Tablet PC Battery](#)
451. [AU Genuine L12S4Z01 Battery For Lenovo IdeaPad S300 S400 S300-bni S400 s400-ith S405 S405-asi Series Laptop](#)
452. [AU Genuine Laptop Battery for LENOVO ThinkPad T410i SL410K E50 E40 T510 T420 T430 E520 W510 W530 L410 T530 94Wh](#)
453. [AU Genuine 45N1100 45N1101 battery for LENOVO ThinkPad laptop 14.8V 1.895Ah 28WH](#)
454. [AU LENOVO 0C52861 45N1126 45N1129 Battery For Lenovo T440S X240 Series](#)
455. [AU New Genuine Lenovo ThinkPad X1 Carbon Touch Laptop battery ASM 45N1070 FRU P/N 45N1071 14.8V 3.11Ah 46Wh](#)
456. [AU Genuine Lenovo 45N1152 45N1153 T440P T540P Battery 9 Cells 100Wh](#)
457. [AU Genuine Lenovo 45N1160 45N1161 Battery For ThinkPad T440p T540P W540 L440 ThinkPad L540 Series](#)
458. [AU Ultrabay 51J0508 51J0507 Replacement Battery For Lenovo Thinkpad R400 R500 T61 T60p T400 T400s T500 51J0508](#)
459. [AU Genuine 45N1102 45N1103 Battery For Lenovo ThinkPad X1 Battery 42Wh](#)
460. [AU Genuine Lenovo battery for IdeaTab B6000-F IdeaTab S6000 IdeaTab S600H S6000-H](#)
461. [AU 70++ Lenovo 45N1173 45N1006 Battery For ThinkPad L410 L520 T420 T430](#)
462. [AU Genuine LENOVO X220T X220 Tablet Battery laptop 42T4881 42T4882 11.1V 5.6AH 63WH](#)

463. [AU LENOVO L10C1P22 PAD A1 A1-07 H11GT101A Battery, 13Wh,3700mah](#)
464. [AU 0A36304 40Y7625 Battery For LENOVO ThinkPad T410 T420 T430 T510 T520 Series 94Wh 8.4AH](#)
465. [AU Genuine Lenovo 42T4873 Battery For Lenovo ThinkPad X220 X220i X220s Series 9 Cells](#)
466. [AU Genuine 45N1042 45N1043 L11L6F01 L11S6Y01 Battery for Lenovo V380 V585 Y480 Z380 Z585 M480 K49 series](#)
467. [AU Genuine L10M4P11 Battery for Lenovo IdeaPad U410-IFI U410 Laptop 59Wh 7.4V](#)
468. [AU L11L6R01 L11L6Y01 L11M6Y01 L11N6R01 battery for LENOVO Z480 G480 G485 B480 B490 V480 E49 Battery](#)
469. [AU Genuine LENOVO IdeaPad U460 L09P8Y22 L09C8Y22 63WH Laptop Battery](#)
470. [AU LENOVO L13L1P21 Battery 3.7V 17.5Wh 4730Mah](#)
471. [AU Genuine Lenovo Yoga 11 11S Series Laptop L11M4P13 42Wh 4 cells battery](#)
472. [AU Genuine 45N1125 0C52862 45N1129 Battery for Lenovo Thinkpad T440S T440 X240 Series 24Wh](#)
473. [AU LENOVO 42T4966 battery for Lenovo THINKPAD Tablet 1 1838 10.1IN](#)
474. [AU LENOVO ThinkPad T410S T420S T430S 0A36310 Battery 2.9AH 32WH](#)
475. [AU LENOVO L12L3P51, 45N1114, 45N1115 Battery,4.25Ah,47WH](#)
476. [AU LENOVO L10M4P21 1ICP04/45/107-4 Battery 3.7V 28Wh](#)
477. [AU LENOVO 10M6A21 Battery,11.1V, 26wh](#)
478. [AU Genuine L12L4A02 L12M4E01 L12S4E01 battery Lenovo IdeaPad Z710 Z40 Z40-70 Z50-70 G500 G500S G400 G400S S410P S510P TOUCH laptop 14.4V](#)
479. [AU 24Wh lenovo LENOVO 45N1113 45N1112 battery](#)
480. [AU lenovo 45N1119 45N1118 Battery 2.06Ah/24WH](#)
481. [AU Lenovo L12L4E55 45N1185 45N1184 121500191 Battery](#)
482. [AU Genuine Lenovo L10N6P11 3ICP5/67/64-2 laptop battery 54wh 4950mah](#)
483. [AU New Genuine L11S6R01 Battery For Lenovo Y400 Y410 Y490 Laptop](#)
484. [AU Lenovo LBL-60X a600 laptop battery 11.1v 6cells](#)
485. [AU Original L11S2P01 L11M2P01 Battery For lenovo S200 S206 Laptop 7.4V 27WH](#)
486. [AU LENOVO 57Y6265 L09C4901 L09C4P1 Battery For Lenovo IdeaPad U350 IdeaPad U350 20028 2963 U350W](#)
487. [AU LENOVO 42T4806 42T4812 57Y4565 Battery For Lenovo ThinkPad 0196RV 4 5 6 7 ThinkPad Edge Edge 13 E31](#)
488. [AU LENOVO L09M6H21 Laptop Battery 42WH](#)
489. [AU L09C6Y12 L09S3B11 L09S6Y11 L09M3Z11 Battery For Lenovo IdeaPad S10-2 20027 2957 Series](#)
490. [AU Genuine 42T4934 42T4935 42T4932 42T4976 Battery For Lenovo ThinkPad Edge E220S Laptop 44WH 14.8V](#)
491. [AU LENOVO L08C3B21 L08C6C21 42T4682 Replacement Battery For Lenovo Ideapad S10 S9 Series](#)
492. [AU LENOVO L08C3B21 42T4682 Battery For Lenovo Ideapad S10 S9 Series](#)
493. [AU Lenovo THINKPAD T40 T42 OEM Laptop Battery 08K8194 FRU 92P1069](#)
494. [AU Lenovo FRU 92P1073, 92P1067, THINKPAD T41 2374 Laptop Battery, THINKPAD T42P 2679 6600mah, 9cells](#)
495. [AU LENOVO L09S8L09,L09S4T09,IdeaPad S10-3t Series Laptop Battery 68WH](#)
496. [AU battery for 5200mAh LENOVO ASM 92P1174, FRU 92P1171, 40Y7003, FRU 92P1167,](#)
497. [AU New L08C3B21 L08C6C21 L09C3B11 Replacement Battery For Lenovo IdeaPad M10 M9](#)

[S9 S10 S10C S12 S9 S10-2 Laptop](#)

- 498. [AU LENOVO L09L4B21 L09L8D21 L09S4B21 L09S8D21 Battery For Lenovo IdeaPad U450 U450p Series](#)
- 499. [AU Genuine 42T4839 42T4838 Battery For Lenovo IBM ThinkPad SL410 SL510 E40 E50 Series 32Wh](#)
- 500. [AU L10C6Y11 L10M6Y11 Battery for Lenovo B465 B465A B465c Series Laptop 4400mah](#)
- 501. [AU LENOVO 57Y4558,ASM 42T4784,ThinkPad X120e Series Laptop Battery 2200MAH](#)
- 502. [AU Advent 7000 7087 Battery For Lenovo 125C 410 E280 E290 E660 Series](#)
- 503. [AU LENOVO L08C3B21 TF83700068D 1BTIZZZ0LV1 Battery For Lenovo Ideapad S9 S10 UMPC Ideapad S9e S10e](#)
- 504. [AU LENOVO L10M2122 Laptop Battery 27WH ThinkPad Edge E220S E420S Series](#)
- 505. [AU LENOVO 57Y4565,42T4813,ThinkPad 0196RV 4 Series Laptop Battery 2800MAH](#)
- 506. [AU New L06L6Y02 L08O6C02 42T4585 Replacement Battery For Lenovo IdeaPad G430 G450 V460 Series Laptop](#)
- 507. [AU LENOVO L09S3E31 Laptop Battery 2800MAH Black](#)
- 508. [AU Laptop battery Lenovo 6500821, 4UF103450P-2-QC-OA8, 8cells, White](#)
- 509. [AU Genuine 08O6C02 42T4585 42T4586 Battery For Lenovo G430 G550 G430A G450 L3000 Series Laptop 5200mah](#)
- 510. [AU SQU-521 3UR18650 Battery For LENOVO CW3 F30 F30A F31 F31A Series](#)
- 511. [AU LENOVO 3UR18650-2-QC-CW3,SQU-521,Lenovo F30, F30A Series Laptop Battery 4400MAH](#)
- 512. [AU LENOVO SQU-504 916C4340F 411181429 Battery For Lenovo 125C 410 E280 E290 E660](#)
- 513. [AU LENOVO SMP CMXXLG6 CMXXSN6 CRXXSR6 Battery For Lenovo 210 Series](#)
- 514. [AU LENOVO ASM 121000604,FRU 121SM000Q,C430 Series Laptop Battery 4400MAH](#)
- 515. [AU LENOVO ASM BATIGT30L6,43R1955,Lenovo 3000 Y400 Series Laptop Battery 4400MAH](#)
- 516. [AU battery for 4300mAh LENOVO IdeaPad U550, IdeaPad U450P 20031, IdeaPad U450P 3389,](#)
- 517. [AU LENOVO 42T4928 42T4929 42T4930 42T4931 Battery For Lenovo ThinkPad Edge E220S E220s E420s Series](#)
- 518. [AU 43R1954 ASM 121000614 121TS050Q Battery For Lenovo 3000 Y310 Series laptop 4400mah 6cells](#)
- 519. [AU Laptop Battery Lenovo MB06 for S160 N203 160 Series 4400mah](#)
- 520. [AU Laptop battery Lenovo MB06 for S160 160 N203 Series Grey 4400mah](#)
- 521. [AU Lenovo MB06 Lenovo 160 S160 S160 N203 Series laptop battery Red 4400mah](#)
- 522. [AU L10N6P11 Battery For Lenovo IdeaPad U470 Series 54WH](#)
- 523. [AU LENOVO 42T4951 42T4952 For ThinkPad Edge E120 Series 11.1V 5.6AH Laptop Battery](#)
- 524. [AU LENOVO L09M8Y21 L09N4B21 L09N8Y21 Battery For LENOVO K26 K27 K29 Series](#)
- 525. [AU lenovo L10N4E21 laptop battery, 41wh](#)
- 526. [AU Genuine 42T4807 42T4806 Battery For Lenovo ThinkPad 0196RV Series 15.0V 2.8Ah](#)
- 527. [AU LENOVO LBF-TS60 LBF-TS61 Battery For Lenovo 420 420A 420L 420M E390 Series](#)
- 528. [AU LENOVO L08O6D01 L08S6D01 Ideapad Y430 Series Replacement Laptop Battery 11.1V](#)
- 529. [AU LENOVO L08C3B21 Ideapad S9 S10 Series Laptop Battery](#)
- 530. [AU LENOVO L08C3B21,TF83700068D,Ideapad S9 S10 Series Laptop Battery](#)
- 531. [AU battery for 5200mAh LENOVO THINKPAD R51E,](#)
- 532. [AU Genuine 42T4939 42T4938 Battery For lenovo ThinkPad X1 Laptop 36Wh](#)
- 533. [AU 42T4863,42T4864 lenovo X220 laptop battery,63wh](#)

- 534. [AU Genuine Lenovo ThinkPad 42T4739 42T4740 94wh Extended Battery Pack](#)
- 535. [AU LENOVO ASM 93P5032 42T5209 for ThinkPad X60 Tablet PC Laptop Battery 14.4V 4550mah](#)
- 536. [AU Lenovo L08S6D12, IdeaPad U330 Series Replacement Laptop Battery 6-Cell](#)
- 537. [AU Lenovo L09S6D21, 57Y6309, IdeaPad U450P 20031, IdeaPad U450P 3389, IdeaPad U550 Battery 6-Cell](#)
- 538. [AU Lenovo FRU 42T4789 42T4787 ASM 42T4786 ThinkPad X100e ThinkPad Edge 11 Laptop Battery](#)
- 539. [AU battery for 5200mAh LENOVO ThinkPad W510\(4319A36\), ThinkPad T61 7665, ThinkPad W510\(4319A29\), ThinkPad T61 7659,](#)
- 540. [AU battery for 5200mAh LENOVO E42L, E42, K42, E42G,](#)
- 541. [AU Lenovo ASM 42T4770 FRU 42T4769 Laptop Battery](#)
- 542. [AU Lenovo IdeaPad Y460 Y470 Y570A Genuine Battery L09N6D16 L10N6Y01](#)
- 543. [AU Lenovo L08S6D11 IdeaPad Y330 Replacement Laptop Battery 6-Cell](#)
- 544. [AU LENOVO L08S6Y21 L09C6Y02 57Y6454 L10M6F21 Replacement Battery For Lenovo IdeaPad Z560 G460 B470A B570 Z570A Z460 Series](#)
- 545. [AU L09M3P13 L09M6D13 PP31AT128 Battery For Lenovo IdeaPad U150 SFO STW Series IdeaPad U150-690968U](#)
- 546. [AU Lenovo L09M4B21, L09N4B21 K26 Laptop Battery 14.8V 4-Cell](#)
- 547. [AU Genuine 42T4646 42T4535 Battery For Lenovo Thinkpad X200 X200S Series 29Wh](#)
- 548. [AU Lenovo FRU 42T4819 42T4817 42T4753 42T4737 Replacement Battery For ThinkPad E50 SL410 SL510 W510 T410 E40, ThinkPad Edge 14-inch Series Laptop](#)
- 549. [AU Lenovo L10C6Y11, 3ICR19/66-2 Laptop Battery 11.1v 48WH](#)
- 550. [AU LENOVO L09C6D21 L09S6D21 57Y6309 Battery For Lenovo IdeaPad U450P 20031 IdeaPad U450P 3389 U450P U550 Series](#)
- 551. [AU New 42T4690 42T4688 42T4691 Replacement Battery For Lenovo ThinkPad T400s T410s Series Laptop](#)
- 552. [AU FRU 42T4504, 42T4511, 42T451, 42T4569, 42T5233 Laptop Battery For Lenovo ThinkPad R60 R60e R61 T60 T60p T61 Series](#)
- 553. [AU battery for 7800mAh LENOVO ThinkPad R61 8932, ThinkPad R61e 7649, ThinkPad R61i 8918, ThinkPad T61 6457,](#)
- 554. [AU battery for 4400mAh LENOVO ThinkPad R32, ThinkPad R40,](#)
- 555. [AU Genuine Lenovo 42T4702 ThinkPad SL410 SL510 Laptop Battery](#)
- 556. [AU LENOVO L08S4X03 L08S7Y03 Battery For Lenovo IdeaPad U110 11306 2304 Series](#)
- 557. [AU Lenovo L09S8D21 L09L8D21 L09S4B21 IdeaPad U450 Series Battery](#)
- 558. [AU Lenovo L09S6Y14 L09C6Y14 IdeaPad S10-3 Series Battery WHITE](#)
- 559. [AU LENOVO L08M4B21 L08M6D25 Battery For Lenovo K23 ZhaoYang K23 series](#)
- 560. [AU Lenovo L08M6D25 ZhaoYang K23 Replacement battery](#)
- 561. [AU Lenovo IdeaPad S10-3 L09C6Y14 3ICR19/66 Battery 6CELLS](#)
- 562. [AU LENOVO L08S4X03 L08S7Y03 Battery For Lenovo IdeaPad U110 11306 2304 Series](#)
- 563. [AU Lenovo L09C4P01, IdeaPad U350 2963, IdeaPad U350 Series Battery](#)
- 564. [AU Lenovo ThinkPad X200 7454 7458 X200s Replace Laptop Battery](#)
- 565. [AU battery for 4400mAh LENOVO Y200 Series,](#)
- 566. [AU battery for 4400mAh LENOVO Y200 Series,](#)
- 567. [AU IBM 40Y7001 40Y7003 ASM 92P1170 92P1172 92P1171 Replacement Battery for Lenovo ThinkPad X60 X60s ThinkPad X61 X61s Series](#)

- 568. [AU battery for 2200mAh LENOVO ASM 92P1174, FRU 92P1227, 40Y7003, FRU 92P1171,](#)
- 569. [AU Lenovo IBM FRU 42T4538 ASM 42T4539 Thinkpad X200 Replacement Laptop Battery](#)
- 570. [AU Lenovo 42T4575, 42T4576, L08S6T13, IdeaPad Y650 Series Battery](#)
- 571. [AU Lenovo L09M6D13, L09M3P13 IdeaPad U150 Battery 11.1V](#)
- 572. [AU New Lenovo L09M4T09, L09S4T09, IdeaPad S10-3T Battery 7.4V 29WH](#)
- 573. [AU battery for 2000mAh LENOVO ASM 42T4565, ThinkPad X200 Tablet 2263, ThinkPad X200 Tablet 7450, 43R9257,](#)
- 574. [AU Lenovo BATHGT31L6, F40, F41, F50, Y400, Y410 Series Battery](#)
- 575. [AU Lenovo BATHGT31L6, F40, F40A, F40M, F41, F50, Y400, Y410 Series Battery](#)
- 576. [AU Lenovo BATEFL31L9, Y100, E370 Series Battery 6600mAh 9-Cells](#)
- 577. [AU Lenovo L08M6D24, K43, E43A, E43G, E43L, E43 Series Battery](#)
- 578. [AU BATCL10L8 BATCT10L BATCT10L8 Battery For LENOVO E320 V71 V71 Series](#)
- 579. [AU Lenovo 42T4556, 42T4557, 42T4558, 42T4559, ThinkPad W700 Series Battery](#)
- 580. [AU Lenovo BATEFL31L6 Y100 E370 Replacement Laptop Battery](#)
- 581. [AU Lenovo IdeaPad S10-2 Series, L09C6YU11, L09C3B12 Laptop Battery 48WH](#)
- 582. [AU Lenovo L09C6YU11, IdeaPad S10-2 Series, L09C3B12 Battery 28WH](#)
- 583. [AU Lenovo IdeaPad S10-2 Series, L09C6YU11, L09C3B12 Laptop Battery 48WH White](#)
- 584. [AU Lenovo LBS81S1 BP-8X81 Battery For E260 E255 Series](#)
- 585. [AU battery for 4400mAh LENOVO E255 Series, 120, E255, E260 Series,](#)
- 586. [AU battery for 4400mAh LENOVO FRU 92P1180, 40Y8313, FRU 92P1182, ASM 92P1179,](#)
- 587. [AU battery for 6600mAh LENOVO K42, E42, E42G,](#)
- 588. [AU battery for 4400mAh LENOVO L510, Y510, Y520,](#)
- 589. [AU Lenovo IdeaPad Y530 Y510 IdeaPad Y710 Y730 L08P6D11 Replacement Laptop Battery](#)
- 590. [AU LENOVO 121SS080C BAH00L65 BAH00L6S Battery For Lenovo 3000 G400 G410 C460 14001 59011 C460M C461 C465 C510](#)
- 591. [AU Lenovo IdeaPad Y450 IdeaPad Y550 Y550A L08S6D13 Replacement Battery](#)
- 592. [AU Lenovo 3000 N200, 3000 N440, 41U5025, 42T5237, 42T5239, 42T5240 Laptop Battery](#)
- 593. [AU IBM Lenovo 42T4522, 42T4523, 43R1967, ThinkPad X300 Series, ThinkPad X301 Series Laptop Battery](#)
- 594. [AU Lenovo L08S6D21, IdeaPad G230, 3000 G230G, 3000 G230 Series Laptop Battery](#)
- 595. [AU LENOVO LB42212C Battery For Lenovo LT20 LU-20 LU20-56NA S620 Series](#)
- 596. [AU Lenovo A500, E600 Series, BATDAT20 Laptop Battery 11.1V 3800mAh](#)
- 597. [AU Lenovo 3000 V100 0763, 3000 V200 Series 40Y8319, FRU 92P1220 Replacement Laptop Battery](#)
- 598. [AU Lenovo 3000 N100 Series FRU 92P1184 92P1183 Replacement Laptop Battery](#)
- 599. [AU Lenovo 3000 N100 Series C200 Series 40Y8322 FRU 92P1184 Replacement Laptop Battery 6600mAh](#)

LENOVO Notebook Batteries List By Battery Model

[00HW000](#), [00HW001](#), [00HW002](#), [00HW003](#), [00HW004](#), [00HW005](#), [00HW006](#), [00HW007](#), [00HW008](#),
[00HW009](#), [00HW010](#), [00HW011](#), [00HW014](#), [00HW015](#), [00HW016](#), [00HW017](#), [00HW018](#), [00HW020](#),
[00HW021](#), [00HW022](#), [00HW023](#), [00HW024](#), [00HW025](#), [00HW026](#), [00HW027](#), [00HW028](#), [00HW029](#),
[00HW030](#), [00HW033](#), [00HW034](#), [00HW036](#), [00HW037](#), [00HW038](#), [00HW040](#), [00HW041](#), [00HW042](#),
[00HW043](#), [00HW044](#), [00HW045](#), [00HW046](#), [00HW047](#), [00HW048](#), [00NY486](#), [00NY488](#), [00NY489](#),

[00NY490](#), [00NY491](#), [00NY492](#), [00NY493](#), [00NY639](#), [00UR890](#), [00UR891](#), [00UR892](#), [01AV400](#),
[01AV401](#), [01AV402](#), [01AV403](#), [01AV404](#), [01AV405](#), [01AV406](#), [01AV407](#), [01AV408](#), [01AV409](#),
[01AV410](#), [01AV411](#), [01AV412](#), [01AV413](#), [01AV414](#), [01AV415](#), [01AV416](#), [01AV417](#), [01AV418](#),
[01AV419](#), [01AV420](#), [01AV421](#), [01AV422](#), [01AV423](#), [01AV424](#), [01AV425](#), [01AV426](#), [01AV427](#),
[01AV428](#), [01AV429](#), [01AV430](#), [01AV432](#), [01AV433](#), [01AV434](#), [01AV435](#), [01AV436](#), [01AV437](#),
[01AV439](#), [01AV440](#), [01AV441](#), [01AV442](#), [01AV443](#), [01AV445](#), [01AV446](#), [01AV447](#), [01AV448](#),
[01AV452](#), [01AV454](#), [01AV457](#), [01AV458](#), [01AV459](#), [01AV460](#), [01AV463](#), [01AV464](#), [01AV465](#),
[01AV466](#), [01AV467](#), [01AV468](#), [01AV469](#), [01AV470](#), [01AV471](#), [01AV472](#), [01AV474](#), [01AV475](#),
[01AV476](#), [01AV477](#), [01AV478](#), [01AV479](#), [01AV480](#), [01AV481](#), [01AV482](#), [01AV483](#), [01AV484](#),
[01AV485](#), [01AV486](#), [01AV487](#), [01AV488](#), [01AV489](#), [01AV490](#), [01AV493](#), [01AV494](#), [01AV495](#),
[01AV496](#), [01AV497](#), [01AV498](#), [01AV499](#), [01AY968](#), [01AY969](#), [01YU911](#), [01YU99](#), [02DL000](#),
[02DL001](#), [02DL004](#), [02DL005](#), [02DL006](#), [02DL007](#), [02DL011](#), [02DL013](#), [02DL014](#), [02DL016](#),
[02DL017](#), [02DL018](#), [02DL019](#), [02DL020](#), [02DL021](#), [02DL023](#), [02DL026](#), [02DL027](#), [02DL028](#),
[02DL029](#), [02DL031](#), [02DL032](#), [02HM886](#), [04w1890](#), [0813002](#), [0813006](#), [0813007](#), [0813008](#), [0813009](#),
[08K8194](#), [0A33932](#), [0A36278](#), [0A36279](#), [0A36280](#), [0A36281](#), [0A36282](#), [0A36283](#), [0A36285](#), [0A36286](#),
[0A36287](#), [0A36290](#), [0A36292](#), [0A36302](#), [0A36303](#), [0A36304](#), [0A36306](#), [0A36307](#), [0A36309](#), [0A36310](#),
[0A36311](#), [0A36316](#), [0A36317](#), [0C52861](#), [0C52862](#), [104366](#), [1050LC](#), [10M6A21](#), [11CP3 95/97-2](#),
[11CP3/95/972](#), [11CP4/86/95-2](#), [11CP486](#), [121000610](#), [121000614](#), [121000620](#), [121000657](#), [121000919](#),
[121000920](#), [121000921](#), [121000922](#), [121000925](#), [121000926](#), [121000927](#), [121000928](#), [121000929](#),
[121000930](#), [121000931](#), [121000932](#), [121001071](#), [121001074](#), [121001091](#), [121001094](#), [121001096](#),
[121001107](#), [121001108](#), [121001117](#), [121001118](#), [121001119](#), [121001138](#), [121001139](#), [121001141](#),
[121001151](#), [121001154](#), [121001787](#), [121300078](#), [121500028](#), [121500047](#), [121500048](#), [121500049](#),
[121500050](#), [121500051](#), [121500052](#), [121500053](#), [121500059](#), [121500076](#), [121500077](#), [121500138](#),
[121500145](#), [121500146](#), [121500147](#), [121500148](#), [121500152](#), [121500156](#), [121500159](#), [121500163](#),
[121500178](#), [121500179](#), [121500180](#), [121500191](#), [121500194](#), [121500205](#), [121500206](#), [121500212](#),
[121500213](#), [121500214](#), [121500225](#), [121500230](#), [121500232](#), [121500234](#), [121500253](#), [121500260](#),
[121500261](#), [121SS080C](#), [121TO010C](#), [121TS040C](#), [121TT000C](#), [121ZL030C/ASM](#), [121ZL030CASM](#),
[121zs000c/asm](#), [121zs000casm](#), [1BTIZZ0LV1](#), [1FRU 42T4783](#), [1ICP04/45/107-4](#), [1ICP3/62/147-2](#),
[1ICP3/62/1472](#), [1ICP3/80/A7](#), [1ICP3/84/96-3](#), [1ICP3/95/97-2](#), [1ICP3/95/972](#), [1ICP372138-2](#), [1ICP38494](#),
[1ICP38494-2](#), [1ICP4/57/104-2](#), [1ICP4/82/114-2](#), [1ICP4/83/103-2](#), [1ICP4/83/113](#), [1ICP4/86/103-2](#),
[1ICP4/86/95-2](#), [1ICP47484](#), [1ICP47897](#), [1ICP556120-2](#), [1ICR18/65-2](#), [1ICR18/652](#), [20AH000ECD](#),
[20DM0004CD](#), [20DM000ACD](#), [20DM000CCD](#), [20DM000ECD](#), [20DM000RCD](#), [20DMA000CD](#),
[20DMA005CD](#), [20DMA008CD](#), [20DMA012CD](#), [20DMA014CD](#), [20DMA06SCD](#), [20DMA06WCD](#),
[20G8-S03400](#), [21CP5/57/128-2](#), [21CP5/69/71-2](#), [21CP5/69/71-3](#), [21CP570106](#), [21CP6/54/90](#),
[21CP6/55/90](#), [2306CTO](#), [2516CTO](#), [2ICP4/51/161-2](#), [2ICP4/66/73-2](#), [2ICP456130](#), [2ICP458145](#),
[2ICP458146](#), [2ICP479101-2](#), [2ICP5/41/110-2](#), [2ICP5/44/128-2](#), [2ICP5/54/90](#), [2ICP5/67/123](#),
[2ICP5/70/106](#), [2ICP55490-2](#), [2ICP554902](#), [2ICP557122](#), [2ICP557123-2](#), [2ICP6/54/90](#), [2ICP6/54/96](#),
[2ICP6/55/85-2](#), [2ICP6/55/85-2](#) [121500163](#), [2ICP6/55/90](#), [2ICP65490](#), [2ICP65590](#), [2INR19/65-2](#),
[2X34A0031A](#), [31502371](#), [31504217](#), [31504218](#), [31504999](#), [31505000](#), [3150660](#), [31506605](#), [31507325](#),
[31507327](#), [31CP7/38/6](#), [31cp7/38/65](#), [31CP7/39/64-2](#), [34485S4](#), [3ICO8/60/70](#), [3ICP4/43/110-2](#),
[3ICP4/43/86](#), [3ICP4/58/62-2](#), [3ICP4/61/69-2](#), [3ICP4/61/692](#), [3ICP4/67/140](#), [3ICP4/70/102](#), [3ICP441110](#),
[3ICP47997](#), [3ICP5/46/75-2](#), [3ICP5/46/752](#), [3ICP5/55/90](#), [3ICP5/56/120-2](#), [3ICP5/56/1202](#), [3ICP5/88/70](#),
[3ICP5/88/73](#), [3ICP554116-2](#), [3ICP58073](#), [3ICP6/38/64-2](#), [3ICP6/42/85](#), [3ICP6/46/122](#), [3ICP6/54/90](#),
[3ICP6/55/90](#), [3ICP6/58/75](#), [3ICP65490](#), [3ICP7/38/64](#), [3icp7/38/65](#), [3ICP7/41/96](#), [3ICP7/64/84](#),
[3ICP7/67/66-2](#), [3ICR17](#), [3ICR19/66](#), [3ICR19/66-2](#), [3INP6/54/91](#), [3INP66080](#), [3INP7/38/64-2](#),
[3INP73864-2](#), [3INR19/66-2](#), [3INR1965-2](#), [3INR19652](#), [3UR18650-2-QC-CW3](#), [3UR18650F-2-LNV-2](#),

[3UR18650F-2-LNV-2S](#), [3UR18650F-2-QC-CW3A](#), [3UR18650F-2-QC186](#), [3UR18650F2LNV2](#),
[3UR18650F2LNV2S](#), [40004227](#), [40Y6787](#), [40Y6999](#), [40Y7001](#), [40Y7003](#), [40Y7625](#), [40Y8313](#),
[40Y8314](#), [40Y8315](#), [40Y8317](#), [40Y8318](#), [40Y8319](#), [40Y8321](#), [40Y8322](#), [411181429](#), [41CP557122](#),
[41CP6/58/92](#), [41CP7/64/84](#), [41CR17/65](#), [41N566](#), [41U4890](#), [41U5025](#), [41U5026](#), [41U5027](#), [42N1731](#),
[42T4235](#), [42T4515](#), [42T4516](#), [42T4518](#), [42T4519](#), [42T4521](#), [42T4522](#), [42T4523](#), [42T4534](#), [42T4536](#),
[42T4538](#), [42T4540](#), [42T4542](#), [42T4543](#), [42T4555](#), [42T4556](#), [42T4557](#), [42T4558](#), [42T4559](#), [42T4564](#),
[42T4575](#), [42T4576](#), [42T4585](#), [42T4586](#), [42T4587](#), [42T4591](#), [42T4593](#), [42T4622](#), [42T4630](#), [42T4633](#),
[42T4642](#), [42T4643](#), [42T4646](#), [42T4647](#), [42T4648](#), [42T4649](#), [42T4650](#), [42T4654](#), [42T4661](#), [42T4680](#),
[42T4682](#), [42T4684](#), [42T4686](#), [42T4688](#), [42T4689](#), [42T4690](#), [42T4691](#), [42T4694](#), [42T4696](#), [42T4702](#),
[42T4703](#), [42T4708](#), [42T4709](#), [42T4710](#), [42T4711](#), [42T4712](#), [42T4713](#), [42T4714](#), [42T4715](#), [42T4725](#),
[42T4726](#), [42T4727](#), [42T4729](#), [42T4730](#), [42T4731](#), [42T4733](#), [42T4735](#), [42T4737](#), [42T4739](#), [42T4740](#),
[42T4751](#), [42T4752](#), [42T4753](#), [42T4755](#), [42T4756](#), [42T4757](#), [42T4763](#), [42T4764](#), [42T4765](#), [42T4777](#),
[42T4778](#), [42T4790](#), [42T4791](#), [42T4796](#), [42T4797](#), [42T4798](#), [42T4799](#), [42T4801](#), [42T4803](#), [42T4805](#),
[42T4806](#), [42T4807](#), [42T4808](#), [42T4812](#), [42T4813](#), [42T4813](#) [42T4814](#), [42T4814](#), [42T4815](#), [42T4819](#),
[42T4823](#), [42T4825](#), [42T4829](#), [42T4831](#), [42T4832](#), [42T4833](#), [42T4838](#), [42T4839](#), [42T4841](#), [42T4842](#),
[42T4843](#), [42T4844](#), [42T4845](#), [42T4846](#), [42T4847](#), [42T4848](#), [42T4851](#), [42T4854](#), [42T4855](#), [42T4856](#),
[42T4857](#), [42T4861](#), [42T4863](#), [42T4865](#), [42T4867](#), [42T4873](#), [42T4875](#), [42T4877](#), [42T4879](#), [42T4880](#),
[42T4881](#), [42T4882](#), [42T4889](#), [42T4891](#), [42T4893](#), [42T4894](#), [42T4895](#), [42T4897](#), [42T4899](#), [42T4901](#),
[42T4902](#), [42T4912](#), [42T4925](#), [42T4927](#), [42T4928](#), [42T4929](#), [42T4930](#), [42T4931](#), [42T4932](#), [42T4933](#),
[42T4934](#), [42T4935](#), [42T4936](#), [42T4937](#), [42T4938](#), [42T4939](#), [42T4940](#), [42T4941](#), [42T4942](#), [42T4951](#),
[42T4952](#), [42T4963](#), [42T4964](#), [42T4965](#), [42T4966](#), [42T4967](#), [42T4969](#), [42T4976](#), [42T4977](#), [42T4978](#),
[42T4985](#), [42T5213](#), [42T5235](#), [42T5236](#), [42T5237](#), [42T5238](#), [42T5239](#), [42T5240](#), [42T5248](#), [42T5250](#),
[42T5252](#), [42T5263](#), [42Y4864](#), [42Y4868](#), [42Y4874](#), [43R1954](#), [43R1955](#), [43R1965](#), [43R1967](#), [43R9252](#),
[43R9253](#), [43R9254](#), [43R9255](#), [43R9256](#), [43R9257](#), [441677300001](#), [441677310001](#), [441677350001](#),
[441677360001](#), [441677365001](#), [441677365101](#), [441677370001](#), [441677390001](#), [441677392001](#),
[441677393001](#), [441677394002](#), [441677395001](#), [441677397001](#), [441677398001](#), [441677399001](#),
[441677399201](#), [441680000034](#), [441680020002](#), [45J7706](#), [45J7706](#), [45J7914](#), [45K127](#), [45K1274](#),
[45K1275](#), [45K1278](#), [45K2175](#), [45K2177](#), [45K2178](#), [45N1000](#), [45N1001](#), [45N1002](#), [45N1003](#), [45N1004](#),
[45N1005](#), [45N1006](#), [45N1010](#), [45N1011](#), [45N1016](#), [45N1017](#), [45N1022](#), [45N1023](#), [45N1025](#), [45N1026](#),
[45N1027](#), [45N1028](#), [45N1029](#), [45N1036](#), [45N1037](#), [45N1038](#), [45N1039](#), [45N1040](#), [45N1041](#), [45N1042](#),
[45N1043](#), [45N1044](#), [45N1045](#), [45N1046](#), [45N1047](#), [45N1048](#), [45N1049](#), [45N1050](#), [45N1051](#), [45N1052](#),
[45N1054](#), [45N1055](#), [45N1056](#), [45N1057](#), [45N1058](#), [45N1059](#), [45N1060](#), [45N1061](#), [45N1062](#), [45N1063](#),
[45N1064](#), [45N1065](#), [45N1070](#), [45N1071](#), [45N1074](#), [45N1075](#), [45N1076](#), [45N1077](#), [45N1078](#), [45N1079](#),
[45N1086](#), [45N1087](#), [45N1088](#), [45N1089](#), [45N1090](#), [45N1091](#), [45N1092](#), [45N1093](#), [45N1094](#), [45N1095](#),
[45N1096](#), [45N1097](#), [45N1098](#), [45N1099](#), [45N1100](#), [45N1101](#), [45N1102](#), [45N1103](#), [45N1108](#), [45N1109](#),
[45N1110](#), [45N1111](#), [45N1112](#), [45N1113](#), [45N1114](#), [45N1115](#), [45N1116](#), [45N1117](#), [45N1118](#), [45N1119](#),
[45N1120](#), [45N1121](#), [45N1122](#), [45N1123](#), [45N1124](#), [45N1125](#), [45N1126](#), [45N1127](#), [45N1128](#), [45N1129](#),
[45N113](#), [45N1130](#), [45N1131](#), [45N1132](#), [45N1133](#), [45N1134](#), [45N1135](#), [45N1136](#), [45N1137](#), [45N1138](#),
[45N1139](#), [45N1140](#), [45N1141](#), [45N1143](#), [45N1144](#), [45N1145](#), [45N1146](#), [45N1147](#), [45N1148](#), [45N1149](#),
[45N1150](#), [45N1151](#), [45N1152](#), [45N1153](#), [45N1158](#), [45N1159](#), [45N1160](#), [45N1161](#), [45N1162](#), [45N1163](#),
[45N1164](#), [45N1165](#), [45N1166](#), [45N1167](#), [45N1168](#), [45N1169](#), [45N1173](#), [45N1174](#), [45N1176](#), [45N1182](#),
[45N1183](#), [45N1184](#), [45N1185](#), [45N1186](#), [45N1187](#), [45N15E9](#), [45N1700](#), [45N1701](#), [45N1702](#), [45N1703](#),
[45N1704](#), [45N1705](#), [45N1706](#), [45N1707](#), [45N1711](#), [45N1714](#), [45N1715](#), [45N1716](#), [45N1717](#), [45N1718](#),
[45N1719](#), [45N1720](#), [45N1721](#), [45N1726](#), [45N1727](#), [45N1728](#), [45N1729](#), [45N1730](#), [45N1731](#), [45N1732](#),
[45N1733](#), [45N1734](#), [45N1735](#), [45N1736](#), [45N1737](#), [45N1738](#), [45N1740](#), [45N1741](#), [45N1742](#), [45N1743](#),
[45N1748](#), [45N1749](#), [45N1750](#), [45N1751](#), [45N1752](#), [45N1753](#), [45N1754](#), [45N1755](#), [45N1756](#), [45N1757](#),

[45N1758](#), [45N1759](#), [45N1760](#), [45N1761](#), [45N1762](#), [45N1763](#), [45N1765](#), [45N1767](#), [45N1769](#), [45N1773](#), [45N1775](#), [45N1777](#), [45N1779](#), [45N8961](#), [45Ne560](#), [45NYU63](#), [45R6758](#), [4CGR18650A2](#), [4ICP4/41/110](#), [4ICP4/48/123](#), [4ICP4/51/95](#), [4ICP4/56/120](#), [4ICP4/59/141](#), [4ICP441110](#), [4ICP467141](#), [4ICP5/41/110](#), [4ICP5/42/61-2](#), [4ICP5/44/129](#), [4ICP5/53/88](#), [4ICP5/54/88](#), [4ICP5/56/120](#), [4ICP5/57/122-2](#), [4ICP5/57/1222](#), [4ICP5/58/73-2](#), [4ICP548122](#), [4ICP55590](#), [4ICP55873-2](#), [4ICP6/54/90](#), [4ICP65490](#), [4ICP7/64/84](#), [4ICR18/65](#), [4ICR18/66](#), [4ICR19/66](#), [4INR19/66](#), [4INR1965](#), [4UF103450P-2-QC-2](#), [4UF103450P-2-QC-OA8](#), [4X50G53717](#), [4X50G59217](#), [51J0226](#), [51J0398](#), [51J0399](#), [51J0497](#), [51J0498](#), [51J0499](#), [51J0500](#), [51J0507](#), [51J0508](#), [55Y2054](#), [55Y9383](#), [57Y4185](#), [57Y4186](#), [57Y4545](#), [57Y4558](#), [57Y4559](#), [57Y4564](#), [57Y4565](#), [57Y6265](#), [57Y6266](#), [57Y6274](#), [57Y6275](#), [57Y6276](#), [57Y6309](#), [57Y6352](#), [57Y6354](#), [57Y6440](#), [57Y6442](#), [57Y6446](#), [57Y6448](#), [57Y6450](#), [57Y6452](#), [57Y6454](#), [57Y6455](#), [57Y6459](#), [57Y6460](#), [57Y6517](#), [57Y6519](#), [57Y6522](#), [57Y6524](#), [57Y6527](#), [57Y6528](#), [57Y6567](#), [57Y6601](#), [57Y6625](#), [57Y6626](#), [57Y6631](#), [57Y6632](#), [57Y6633](#), [57Y6634](#), [57Y6652](#), [57Y6653](#), [57Y6654](#), [57Y6655](#), [57Y6656](#), [57Y6657](#), [57Y6658](#), [57Y6659](#), [5B10G09007](#), [5B10G10726](#), [5B10G62886](#), [5B10G75096](#), [5B10G78609](#), [5B10G78610](#), [5B10G78611](#), [5B10G78612](#), [5B10G84689](#), [5B10H09629](#), [5B10H09630](#), [5B10H09631](#), [5B10H09632](#), [5B10H09633](#), [5B10H11758](#), [5B10H11759](#), [5B10H11760](#), [5B10H13091](#), [5B10H13094](#), [5B10H13097](#), [5B10H22084](#), [5B10H30033](#), [5B10H30034](#), [5B10H33230](#), [5B10H35531](#), [5B10H41180](#), [5B10H41181](#), [5B10H4276](#), [5B10H45092](#), [5B10J40264](#), [5B10J40590](#), [5B10J46559](#), [5B10J46560](#), [5B10J46561](#), [5B10K10215](#), [5B10K10217](#), [5B10K10220](#), [5B10K10228l](#), [5B10K10229](#), [5B10K65026](#), [5B10K84491](#), [5B10K84492](#), [5B10K84493](#), [5B10K84494](#), [5B10K84538](#), [5B10K84638](#), [5B10K84639](#), [5B10K85055](#), [5B10K85056](#), [5B10K87712](#), [5B10K87714](#), [5B10K87720](#), [5B10K87721](#), [5B10K87722](#), [5B10K88047](#), [5B10K88048](#), [5B10K88049](#), [5B10K90767](#), [5B10K90778](#), [5B10K90780](#), [5B10K90783](#), [5B10K90784](#), [5B10K90785](#), [5B10K90787](#), [5B10K90802](#), [5B10K90806](#), [5B10L02190](#), [5B10L04163](#), [5B10L04166](#), [5B10L04211](#), [5B10L04212](#), [5B10L04215](#), [5B10L13948](#), [5B10L13949](#), [5B10L13960](#), [5B10L22508](#), [5B10L54987](#), [5B10L60476](#), [5B10L68713](#), [5B10L72502](#), [5B10L79053](#), [5B10L79054](#), [5B10M41934](#), [5B10M41935](#), [5B10M49821](#), [5B10M49822](#), [5B10M49823](#), [5B10M49824](#), [5B10M49825](#), [5B10M49826](#), [5B10M50524](#), [5B10M50525](#), [5B10M50528](#), [5B10M52740](#), [5B10M52813](#), [5B10M52814](#), [5B10M52815](#), [5B10M52816](#), [5B10M52817](#), [5B10M53638](#), [5B10M53743](#), [5B10M53744](#), [5B10M53745](#), [5B10M55950](#), [5B10M55951](#), [5B10M55952](#), [5B10M86148](#), [5B10M86149](#), [5B10M88058](#), [5B10M88059](#), [5B10M90490](#), [5B10N01565](#), [5B10N17665](#), [5B10N38140](#), [5B10N87359](#), [5B10P18554](#), [5B10P23779](#), [5B10P23790](#), [5B10P23836](#), [5B10P35082](#), [5B10P35083](#), [5B10P35084](#), [5B10P53996](#), [5B10P53999](#), [5B10P54000](#), [5B10P54002](#), [5B10P54003](#), [5B10P57037](#), [5B10P98185](#), [5B10Q13162](#), [5B10Q13163](#), [5B10Q13164](#), [5B10Q16066](#), [5B10Q16067](#), [5B10Q22882](#), [5B10Q22883](#), [5B10Q38232](#), [5B10Q39196](#), [5B10Q39198](#), [5B10Q39199](#), [5B10Q39200](#), [5B10Q39201](#), [5B10Q39202](#), [5B10Q39204](#), [5B10Q39205](#), [5B10Q41209](#), [5B10Q41210](#), [5B10Q41213](#), [5B10Q62138](#), [5B10Q62139](#), [5B10Q62140](#), [5B10Q71251](#), [5B10Q71252](#), [5B10Q71253](#), [5B10Q71254](#), [5B10Q80766](#), [5B10Q82425](#), [5B10Q82426](#), [5B10Q82427](#), [5B10Q82428](#), [5B10Q88555](#), [5B10Q88556](#), [5B10Q88560](#), [5B10Q88561](#), [5B10Q93417](#), [5B10Q93736](#), [5B10Q93737](#), [5B10Q93738](#), [5B10R24750](#), [5B10R32748](#), [5B10R32749](#), [5B10R32998](#), [5B10R33000](#), [5B10R37085](#), [5B10R37086](#), [5B10R38648](#), [5B10R38659](#), [5B10R46704](#), [5B10R51233](#), [5B10R51234](#), [5B10R61073](#), [5B10S56966](#), [5B10S73500](#), [5B10S73501](#), [5B10S75394](#), [5B10T03400](#), [5B10T03401](#), [5B10T03403](#), [5B10T03404](#), [5B10T04975](#), [5B10T04976](#), [5B10T04980](#), [5B10T07385](#), [5B10T07386](#), [5B10T09079](#), [5B10T0908](#), [5B10T09080](#), [5B10T09088](#), [5B10T09091](#), [5B10T09092](#), [5B10T09093](#), [5B10T09094](#), [5B10T09095](#), [5B10T09112](#), [5B10T11585](#), [5B10T11586](#), [5B10T11686](#), [5B10T36868](#), [5B10T83737](#), [5B10T83739](#), [5B10T83740](#), [5B10U40209](#), [5B10U65275](#), [5B10U65277](#), [5B10U95571](#), [5B10U95573](#), [5B10U97772](#), [5B10U97773](#), [5B10W13894](#), [5B10W13895](#), [5B10W13896](#), [5B10W13897](#), [5Y2098](#), [6500821](#), [692P113](#), [71570330001](#), [80JHS00100](#), [81VS0001US](#), [888007014](#), [8K8194](#), [8Q4B](#), [8S5B10L06248](#), [8X80](#), [8X81](#), [916C4340F](#), [921300170](#), [928QA210H](#), [928QA215H](#), [928QA217H](#),

[928QA221H](#), [928QA223H](#), [928QA224H](#), [928QA225H](#), [928QA228H](#), [928QA229H](#), [928QA230H](#),
[928QA231H](#), [928QA232H](#), [928QA233H](#), [928QA235H](#), [928QA236H](#), [928QA237H](#), [92P1010](#), [92P1011](#),
[92P1013](#), [92P1058](#), [92P1060](#), [92P1061](#), [92P1062](#), [92P1067](#), [92P1070](#), [92P1071](#), [92P1074](#), [92P1075](#),
[92P1087](#), [92P1088](#), [92P1089](#), [92P1090](#), [92P1091](#), [92P1101](#), [92P1102](#), [92P1163](#), [92P1168](#), [92P1183](#),
[92P1184](#), [92P1185](#), [92P1186](#), [92P1227](#), [931QA086H](#), [931QA100H](#), [93P5002](#), [93P5003](#), [93P5032](#), [AMS](#)
[SB10F46465](#), [ASM 08K8192](#), [ASM 08K8196](#), [ASM 08K8197](#), [ASM 08K8198](#), [ASM 08K8199](#), [ASM](#)
[121000604](#), [ASM 121000608](#), [ASM 121000614](#), [ASM 121000649](#), [ASM 121000651](#), [ASM 121000659](#),
[ASM 121TM030A](#), [ASM 42T4519](#), [ASM 42T4519 ASM42T4519](#), [ASM 42T4523](#), [ASM 42T4523](#)
[ASM42T4523](#), [ASM 42T4535](#), [ASM 42T4537](#), [ASM 42T4539](#), [ASM 42T4541](#), [ASM 42T4543](#), [ASM](#)
[42T4545](#), [ASM 42T4555](#), [ASM 42T4557](#), [ASM 42T4559](#), [ASM 42T4561](#), [ASM 42T4563](#), [ASM](#)
[42T4565](#), [ASM 42T4586](#), [ASM 42T4590](#), [ASM 42T4683](#), [ASM 42T4691](#), [ASM 42T4703](#), [ASM](#)
[42T4709](#), [ASM 42T4711](#), [ASM 42T4728](#), [ASM 42T4740](#), [ASM 42T4752](#), [ASM 42T4754](#), [ASM](#)
[42T4756](#), [ASM 42T4770](#), [ASM 42T4784](#), [ASM 42T4786](#), [ASM 42T4788](#), [ASM 42T4790](#), [ASM](#)
[42T4792](#), [ASM 42T4794](#), [ASM 42T4796](#), [ASM 42T4802](#), [ASM 42T4814](#), [ASM 42T4846](#), [ASM](#)
[42T4862](#), [ASM 42T4882](#), [ASM 42T4904](#), [ASM 42T4928](#), [ASM 42T4936](#), [ASM 42T4938](#), [ASM](#)
[42T4948](#), [ASM 42T4958](#), [ASM 42T4960](#), [ASM 42T4962](#), [ASM 42T5209](#), [ASM 42T5213](#), [ASM](#)
[42T5217](#), [ASM 45N1006](#), [ASM 45N1040](#), [ASM 45N1042](#), [ASM 45N1048](#), [ASM 45N1074](#), [ASM](#)
[45N1078](#), [ASM 45N1090](#), [ASM 45N1118](#), [ASM 45N1138](#), [ASM 45N1182](#), [ASM 45N1186](#), [ASM](#)
[92P1064](#), [ASM 92P1076](#), [ASM 92P1164](#), [ASM 92P1168](#), [ASM 92P1170](#), [ASM 92P1172](#), [ASM 92P1174](#)
, [ASM 92P1179](#), [ASM 92P1183](#), [ASM 92P1185](#), [ASM 92P1187](#), [ASM 92P1219](#), [ASM BAML00L6S](#),
[ASM BATIGT30L6](#), [ASM L08M6D23](#), [ASM P/N 42T4740](#), [ASM P/N 42T4930](#), [ASM P/N 42T4936](#),
[ASM P/N 42T4952](#), [ASM P/N 45N1114](#), [ASM P/N 45N1138](#), [ASM P/N SB10F46447](#), [ASM PN](#)
[42T4952](#), [ASM SB10F46452](#), [ASM SB10F46460](#), [ASM SB10F46467](#), [ASM SB10H45076](#),
[ASM42T4752](#), [ASM42T4948](#), [ASM42T4958](#), [ASM42T4960](#), [ASM42T4962](#), [ASM92P1174 FRU](#),
[ASMPN42T4952](#), [ASMSB10F46452](#), [B10H45071](#), [B10K87722](#), [BAML00L65](#), [BATCL10L8](#),
[BATCT10L](#), [BATCT10L8](#), [BATDAT20](#), [BATEFL31L6](#), [BATEFL31L9](#), [BATHGT31L6](#), [BATIGT10L6](#),
[BATIGT30L6](#), [BBLD3372D8](#), [BP-8381](#), [BP-8X81](#), [BSN03372D8](#), [BSN03458D7](#), [BSN03558E5](#),
[BSN04170A5-AT](#), [BSN04170A5AT](#), [BSN0427488](#), [BSN0427488-01](#), [BSN0485490](#), [BSNO130S](#),
[BSNO3372D8](#), [BSNO3458D7](#), [BSNO3558E5](#), [BSNO4170A5-AT](#), [BSNO4170A5-LH](#), [BSNO4170A5AT](#)
, [BSNO4170A5LH](#), [BSNO427488-01](#), [BSNO4710A5](#), [BSNO4710A5-AT](#), [BTP-51B3](#), [BTP-68B3](#), [CGR-](#)
[B/864AE](#), [F31](#), [F31A](#), [F31G-UT](#), [Flex 2 Pro-15](#), [FRU](#), [FRU 00HW029](#), [FRU 00NY491](#), [FRU 08K8193](#),
[FRU 08K8195](#), [FRU 08K8198](#), [FRU 08K8201](#), [FRU 08K8214](#), [FRU 121001073](#), [FRU 121001074](#), [FRU](#)
[121001107](#), [FRU 121001108](#), [FRU 121001151](#), [FRU 121001154](#), [FRU 121SM000Q](#), [FRU 121SS020Q](#),
[FRU 121SS080C](#), [FRU 121TM030A](#), [FRU 121TS0A0A](#), [FRU 21TS040C](#), [FRU 42T4505](#), [FRU 42T4506](#)
, [FRU 42T4511](#), [FRU 42T4514](#), [FRU 42T4516](#), [FRU 42T4518](#), [FRU 42T4522](#), [FRU 42T4536](#), [FRU](#)
[42T4538](#), [FRU 42T4540](#), [FRU 42T4542](#), [FRU 42T4556](#), [FRU 42T4558](#), [FRU 42T4560](#), [FRU 42T4585](#),
[FRU 42T4589](#), [FRU 42T4632](#), [FRU 42T4646](#), [FRU 42T4649](#), [FRU 42T4651](#), [FRU 42T4654](#), [FRU](#)
[42T4655](#), [FRU 42T4656](#), [FRU 42T4657](#), [FRU 42T4658](#), [FRU 42T4682](#), [FRU 42T4688](#), [FRU 42T4690](#),
[FRU 42T4702](#), [FRU 42T4704](#), [FRU 42T4706](#), [FRU 42T4708](#), [FRU 42T4710](#), [FRU 42T4712](#), [FRU](#)
[42T4714](#), [FRU 42T4727](#), [FRU 42T4731](#), [FRU 42T4735](#), [FRU 42T4737](#), [FRU 42T4739](#), [FRU 42T4751](#),
[FRU 42T4753](#), [FRU 42T4755](#), [FRU 42T4769](#), [FRU 42T478](#), [FRU 42T4781](#), [FRU 42T4783](#), [FRU](#)
[42T4785](#), [FRU 42T4787](#), [FRU 42T4789](#), [FRU 42T4791](#), [FRU 42T4793](#), [FRU 42T4795](#), [FRU 42T4797](#),
[FRU 42T4799](#), [FRU 42T4801](#), [FRU 42T4803](#), [FRU 42T4815](#), [FRU 42T4817](#), [FRU 42T4819](#), [FRU](#)
[42T4847](#), [FRU 42T4848](#), [FRU 42T4851](#), [FRU 42T4861](#), [FRU 42T4881](#), [FRU 42T4903](#), [FRU 42T4925](#),
[FRU 42T4927](#), [FRU 42T4929](#), [FRU 42T4937](#), [FRU 42T4939](#), [FRU 42T4947](#), [FRU 42T4957](#), [FRU](#)
[42T4959](#), [FRU 42T4961](#), [FRU 42T5204](#), [FRU 42T5206](#), [FRU 42T5208](#), [FRU 42T5212](#), [FRU 42T5216](#),

[FRU 42T5241](#), [FRU 42T5251](#), [FRU 42T5256](#), [FRU 45N1007](#), [FRU 45N1041](#), [FRU 45N1043](#), [FRU 45N1049](#), [FRU 45N1075](#), [FRU 45N1079](#), [FRU 45N1091](#), [FRU 45N1119](#), [FRU 45N1139](#), [FRU 45N1183](#), [FRU 45N1187](#), [FRU 92P1069](#), [FRU 92P1073](#), [FRU 92P1163](#), [FRU 92P1165](#), [FRU 92P1167](#), [FRU 92P1168](#), [FRU 92P1169](#), [FRU 92P1171](#), [FRU 92P1172](#), [FRU 92P1173](#), [FRU 92P1173FRU](#), [FRU 92P1180](#), [FRU 92P1182](#), [FRU 92P1183](#), [FRU 92P1184](#), [FRU 92P1186](#), [FRU 92P1188](#), [FRU 92P1216](#), [FRU 92P1220](#), [FRU 92P1227](#), [FRU 93P5027](#), [FRU 93P5028](#), [FRU 93P5029](#), [FRU 93P5030](#), [FRU L08M6D24](#), [FRU L10C6F01](#), [FRU L10P6F01](#), [FRU L10P6Y01](#), [FRU L10S6F01](#), [FRU P/N 00HW009](#), [FRU P/N 00HW022](#), [FRU P/N 42T4739](#), [FRU P/N 42T4931](#), [FRU P/N 42T4937](#), [FRU P/N 42T4951](#), [FRU P/N 45N1115](#), [FRU P/N 45N1139](#), [FRU P/N OOHWO09](#), [FRU PN 42T4951](#), [FRU121TS050Q](#), [FRU42T4518](#), [FRU42T4522](#), [FRU42T4819](#), [FRU42T4947](#), [FRU42T4957](#), [FRU42T4959](#), [FRU42T4961](#), [FRUPN42T4951](#), [FUR 121TM020A](#), [FUR 42T4562](#), [FUR 42T4649](#), [FUR 42T4967](#), [GB 31241-2014](#), [GB312412014](#), [GLW-SRXXXPS6](#), [H11GT101A](#), [H12GT2001A](#), [H12GT201A](#), [IdeaPad S10-3t 0651](#), [L06L6Y02](#), [L08C3B21](#), [L08C6C21](#), [L08L6C02](#), [L08L6CO2](#), [L08L6D11](#), [L08L6D12](#), [L08L6D13](#), [L08L6Y02](#), [L08M3B21](#), [L08M4B21](#), [L08M6D21](#), [L08M6D24](#), [L08M6D25](#), [L08N6Y02](#), [L08N6YO2](#), [L08O4C02](#), [L08O4CO2](#), [L08O6C02](#), [L08O6CO2](#), [L08O6D01](#), [L08O6D02](#), [L08O6D13](#), [L08P6D11](#), [L08S3B21](#), [L08S4X03](#), [L08S6C02](#), [L08S6C21](#), [L08S6CO2](#), [L08S6D01](#), [L08S6D02](#), [L08S6D11](#), [L08S6D12](#), [L08S6D13](#), [L08S6D21](#), [L08S6DB](#), [L08S6T13](#), [L08S6Y02](#), [L08S6Y21](#), [L08S7Y03](#), [L09C3B11](#), [L09C3B12](#), [L09C3B14](#), [L09C3Z14](#), [L09C4901](#), [L09C4P01](#), [L09C4P1](#), [L09C6D21](#), [L09C6D22](#), [L09C6Y02](#), [L09C6Y11](#), [L09C6Y12](#), [L09C6Y14](#), [L09C6YU11](#), [L09C8Y22](#), [L09L4B21](#), [L09L6D16](#), [L09L6Y02](#), [L09L8D21](#), [L09M3B11](#), [L09M3P13](#), [L09M3Z11](#), [L09M3Z14](#), [L09M4B21](#), [L09M4P16](#), [L09M4T09](#), [L09M6D13](#), [L09M6D21](#), [L09M6H21](#), [L09M6Y02](#), [L09M6Y11](#), [L09M6Y14](#), [L09M6Y21](#), [L09M6Y23](#), [L09M6Z14](#), [L09M8T09](#), [L09M8Y21](#), [L09N4B21](#), [L09N6D16](#), [L09N6Y02](#), [L09N8P01](#), [L09N8T22](#), [L09N8Y21](#), [L09N8Y22](#), [L09O6D13](#), [L09P6D21](#), [L09S3B11](#), [L09S3E31](#), [L09S3Z14](#), [L09S4B21](#), [L09S4T09](#), [L09S6D16](#), [L09S6D21](#), [L09S6Y02](#), [L09S6Y11](#), [L09S6Y14](#), [L09S6Y21](#), [L09S8D21](#), [L09S8L09](#), [L09S8T09](#), [L1036F01](#), [L10C1P22](#), [L10C4P11](#), [L10C6F01](#), [L10C6F01](#), [L10C6Y02](#), [L10C6Y11](#), [L10L6P11](#), [L10L6Y01](#), [L10M2121](#), [L10M2122](#), [L10M2I21](#), [L10M2P21](#), [L10M2P22](#), [L10M4E21](#), [L10M4P11](#), [L10M4P12](#), [L10M4P21](#), [L10M4P22](#), [L10M6A21](#), [L10M6F21](#), [L10M6H21](#), [L10M6P11](#), [L10M6Y11](#), [L10M6Y12](#), [L10N4E21](#), [L10N6P11](#), [L10N6Y01](#), [L10P6F01](#), [L10P6F21](#), [L10P6Y01](#), [L10P6Y21](#), [L10P6Y22](#), [L10S2P22](#), [L10S6F01](#), [L10S6P11](#), [L10S6Y01](#), [L10S6Y02](#), [L116Y01](#), [L11C2P31](#), [L11C2P32](#), [L11C4P32](#), [L11L6F01](#), [L11L6P01](#), [L11L6R01](#), [L11L6R02](#), [L11L6Y01](#), [L11M2P01](#), [L11M3P01](#), [L11M3P02](#), [L11M4P13](#), [L11M6F01](#), [L11M6Y01](#), [L11N3P51](#), [L11N6R01](#), [L11N6Y01](#), [L11O6Y01](#), [L11P6R01](#), [L11S2P01](#), [L11S3P51](#), [L11S6F01](#), [L11S6R01](#), [L11S6Y01](#), [L12C3A01](#), [L12C3AO1](#), [L12C4P11](#), [L12D1P31](#), [L12D2P31](#), [L12L3P51](#), [L12L3P53](#), [L12L4A01](#), [L12L4A02](#), [L12L4E01](#), [L12L4E55](#), [L12L4K01](#), [L12L4K51](#), [L12L4P61](#), [L12L4P62](#), [L12L4P63](#), [L12L6E01](#), [L12M2P01](#), [L12M2P31](#), [L12M3A01](#), [L12M3A01 3INR/19/66](#), [L12M4A02](#), [L12M4E01](#), [L12M4E21](#), [L12M4E51](#), [L12M4E55](#), [L12M4F02](#), [L12M4K01](#), [L12M4K51](#), [L12M4P21](#), [L12M4P61](#), [L12M4P62](#), [L12M6Z53](#), [L12N2P01](#), [L12S3F01](#), [L12S4A01](#), [L12S4A02](#), [L12S4E01](#), [L12S4E21](#), [L12S4E51](#), [L12S4E55](#), [L12S4F01](#), [L12S4K01](#), [L12S4K51](#), [L12S4Y51](#), [L12S4Z01](#), [L12S4Z51](#), [L12S6A01](#), [L12S6E01](#), [L12T1P31](#), [L12T1P33](#), [L13C2E31](#), [L13C3E31](#), [L13C4P01](#), [L13D1P31](#), [L13D1P32](#), [L13D2E31](#), [L13D3E31](#), [L13L1P21](#), [L13L2P21](#), [L13L3P61](#), [L13L3Z61](#), [L13L4A01](#), [L13L4A61](#), [L13L4E61](#), [L13L4P01](#), [L13L4P21](#), [L13L4P61](#), [L13M1P21](#), [L13M2P21](#), [L13M2P22](#), [L13M2P23](#), [L13M3F01](#), [L13M3Z61](#), [L13M4A01](#), [L13M4A61](#), [L13M4E61](#), [L13M4P01](#), [L13M4P02](#), [L13M4P21](#), [L13M4P61](#), [L13M4P71](#), [L13M4PO2](#), [L13M6P61](#), [L13M6P71](#), [L13N2P21](#), [L13N4P01](#), [L13N4P02](#), [L13S2P21](#), [L13S3Z61](#), [L13S4A01](#), [L13S4A61](#), [L13S4E61](#), [L13S4P21](#), [L13S6P71](#), [L14C1P21](#), [L14C2K31](#), [L14C3A01](#), [L14C3K31](#), [L14C3K32](#), [L14C3P60](#), [L14C4K31](#), [L14D2K31](#), [L14D2P31](#), [L14D3K31](#), [L14D3K32](#), [L14D4K31](#), [L14L2P21](#),

[L14L2P22](#), [L14L3P21](#), [L14L3PB0](#), [L14L3PBO](#), [L14L4A01](#), [L14L4E01](#), [L14L4P24](#), [L14L4P71](#),
[L14L4P72](#), [L14M2921](#), [L14M2P21](#), [L14M2P23](#), [L14M2P24](#), [L14M3P21](#), [L14M3P22](#), [L14M3P23](#),
[L14M3P24](#), [L14M3PB0](#), [L14M3PBO](#), [L14M4A01](#), [L14M4E01](#), [L14M4P21](#), [L14M4P22](#), [L14M4P23](#),
[L14M4P24](#), [L14M4P71](#), [L14M4P72](#), [L14M4P73](#), [L14M4PA0](#), [L14M4PAO](#), [L14M4PB0](#), [L14M6AA0](#),
[L14M6AAO](#), [L14M6F01](#), [L14M6P21](#), [L14S2P21](#), [L14S2P22](#), [L14S3A01](#), [L14S3P21](#), [L14S3P24](#),
[L14S4A01](#), [L14S4E01](#), [L14S4P21](#), [L14S4P22](#), [L14S4P71](#), [L14S4P72](#), [L14S4PB0](#), [L14S6F01](#), [L152PB2](#),
[L15C2K31](#), [L15C2K32](#), [L15C2P01](#), [L15C2P31](#), [L15C2PB1](#), [L15C2PB2](#), [L15C2PB3](#), [L15C2PB4](#),
[L15C2PB5](#), [L15C2PB7](#), [L15C3A01](#), [L15C3A03](#), [L15C3K32](#), [L15C3PB0](#), [L15C3PB1](#), [L15C4A02](#),
[L15C4E01](#), [L15C4P21](#), [L15C4P22](#), [L15C4P23](#), [L15C4P71](#), [L15C4PB0](#), [L15C4PBO](#), [L15C6P11](#),
[L15D1P31](#), [L15D1P32](#), [L15D2K31](#), [L15D2K32](#), [L15D3A01](#), [L15D3K32](#), [L15L2PB0](#), [L15L2PB1](#),
[L15L2PB2](#), [L15L2PB3](#), [L15L2PB4](#), [L15L2PB5](#), [L15L3A01](#), [L15L3A02](#), [L15L3A03](#), [L15L3PB0](#),
[L15L3PB1](#), [L15L3PBO](#), [L15L4A01](#), [L15L4A02](#), [L15L4P20](#), [L15L4P71](#) 5B10J40259, [L15L4PC0](#),
[L15L4PC1](#), [L15L4PC2](#), [L15L4PC3](#), [L15L4PCO](#), [L15L6A01](#), [L15M2PB0](#), [L15M2PB1](#), [L15M2PB2](#),
[L15M2PB3](#), [L15M2PB4](#), [L15M2PB5](#), [L15M2PB6](#), [L15M2PBO](#), [L15M3PB0](#), [L15M3PB1](#), [L15M3PB2](#),
[L15M3PBO](#), [L15M4A01](#), [L15M4P20](#), [L15M4P21](#), [L15M4P23](#), [L15M4PC0](#), [L15M4PC1](#), [L15M4PC2](#),
[L15M4PC3](#), [L15M4PCO](#), [L15M6P11](#), [L15M6PA1](#), [L15M6PC0](#), [L15M6PCO](#), [L15S2P01](#), [L15S3A01](#),
[L15S3A02](#), [L15S4A01](#), [L15S4A02](#), [L15S4E01](#), [L15S4P20](#), [L15S6A01](#), [L15S6PA1](#), [L16C2PB1](#),
[L16C2PB2](#), [L16C3K31](#), [L16C3P31](#), [L16C4P61](#), [L16C4PB1](#), [L16C4PB2](#), [L16C4PB3](#), [L16C6PC1](#),
[L16D1P31](#), [L16D1P32](#), [L16D1P33](#), [L16D1P34](#), [L16D2P31](#), [L16D3K31](#), [L16D3P31](#), [L16D3P32](#),
[L16L2PB1](#), [L16L2PB2](#), [L16L2PB3](#), [L16L4P91](#), [L16L4PB1](#), [L16L4PB2](#), [L16L4PB3](#), [L16L6PC1](#),
[L16L8T2A](#), [L16L8TA2](#), [L16M2PB1](#), [L16M2PB2](#), [L16M3P24](#), [L16M3P71](#), [L16M3P72](#), [L16M4P60](#),
[L16M4P91](#), [L16M4PA2](#), [L16M4PB0](#), [L16M4PB1](#), [L16M4PB2](#), [L16M4PB3](#), [L16M6PC1](#), [L16S2PB1](#),
[L16S2PB2](#), [L16S3P24](#), [L16S4P91](#), [L16S4TB0](#), [L16S4TBO](#), [L17C2P51](#), [L17C2PB1](#), [L17C2PB2](#),
[L17C2PB3](#), [L17C2PB4](#), [L17C2PB5](#), [L17C2PF1](#), [L17C3P51](#), [L17C3P52](#), [L17C3P53](#), [L17C3P61](#),
[L17C3PB0](#), [L17C3PE0](#), [L17C3PEO](#), [L17C3PG0](#), [L17C3PG1](#), [L17C3PG2](#), [L17C4P71](#), [L17C4P72](#),
[L17C4PB0](#), [L17C4PB1](#), [L17C4PB2](#), [L17C4PE1](#), [L17C4PF0](#), [L17C4PG2](#), [L17C4PH1](#), [L17C4PH3](#),
[L17C6P51](#), [L17C6P71](#), [L17C6P72](#), [L17C6PF0](#), [L17D1P35](#), [L17D2P31](#), [L17D2PF1](#), [L17D2PF2](#),
[L17D3PB0](#), [L17L2PB1](#), [L17L2PB2](#), [L17L2PB4](#), [L17L2PB5](#), [L17L2PB6](#), [L17L2PF1](#), [L17L2PF3](#),
[L17L3P51](#), [L17L3P52](#), [L17L3P53](#), [L17L3P54](#), [L17L3P56](#), [L17L3P61](#), [L17L3P71](#), [L17L3PB0](#),
[L17L3PE0](#), [L17L3PEO](#), [L17L3PG1](#), [L17L3PG3](#), [L17L3PH0](#), [L17L4P72](#), [L17L4PG2](#), [L17L4PH2](#),
[L17L6P51](#), [L17L6P71](#), [L17M2P51](#), [L17M2P52](#), [L17M2P54](#), [L17M2P83](#), [L17M2PB1](#), [L17M2PB2](#),
[L17M2PB3](#), [L17M2PB4](#), [L17M2PB5](#), [L17M2PB6](#), [L17M2PB7](#), [L17M2PF0](#), [L17M2PF1](#), [L17M2PF2](#),
[L17M2PF3](#), [L17M3P51](#), [L17M3P52](#), [L17M3P53](#), [L17M3P54](#), [L17M3P55](#), [L17M3P56](#), [L17M3P61](#),
[L17M3P71](#), [L17M3P72](#), [L17M3PB0](#), [L17M3PB1](#), [L17M3PG1](#), [L17M3PG2](#), [L17M3PG3](#), [L17M3PH0](#),
[L17M4P71](#), [L17M4P72](#), [L17M4P73](#), [L17M4PB0](#), [L17M4PB1](#), [L17M4PB2](#), [L17M4PE1](#), [L17M4PF0](#),
[L17M4PG2](#), [L17M4PH1](#), [L17M4PH2](#), [L17M4PH3](#), [L17M6P51](#), [L17M6P52](#), [L17M6P71](#), [L17M6P72](#),
[L17M6PF0](#), [L17S2P51](#), [L17S2PF3](#), [L17S3P71](#), [L17S3PG1](#), [L17S4PG2](#), [L17S6P71](#), [L17S6P72](#),
[L18C3P51](#), [L18C3P71](#), [L18C3P73](#), [L18C3PD1](#), [L18C3PF1](#), [L18C3PF2](#), [L18C3PF6](#), [L18C3PF7](#),
[L18C4P71](#), [L18C4P90](#), [L18C4PC0](#), [L18C4PF0](#), [L18C4PF3](#), [L18C4PG0](#), [L18C4PGO](#), [L18C4PH0](#),
[L18C6P90](#), [L18C6PD1](#), [L18C6PD2](#), [L18D3PF1](#), [L18D3PF2](#), [L18D3PG1](#), [L18D3PG2](#), [L18D4P90](#),
[L18D4PF0](#), [L18D4PF1](#), [L18D4PG0](#), [L18D6PD1](#), [L18L3P51](#), [L18L3P71](#), [L18L3P72](#), [L18L3P73](#),
[L18L3PD1](#), [L18L3PF1](#), [L18L3PF2](#), [L18L3PF3](#), [L18L3PF4](#), [L18L3PF6](#), [L18L3PF7](#), [L18L4P71](#),
[L18L4P72](#), [L18L4PF0](#), [L18L4PG0](#), [L18M3P51](#), [L18M3P52](#), [L18M3P71](#), [L18M3P73](#), [L18M3PD1](#),
[L18M3PD2](#), [L18M3PF1](#), [L18M3PF2](#), [L18M3PF6](#), [L18M3PF7](#), [L18M3PF8](#), [L18M3PFA](#), [L18M3PFB](#),
[L18M3PG2](#), [L18M4P71](#), [L18M4P72](#), [L18M4PC0](#), [L18M4PE0](#), [L18M4PF0](#), [L18M4PF3](#), [L18M4PF4](#),
[L18M4PF5](#), [L18M4PG0](#), [L18M4PH0](#), [L18M6P71](#), [L18M6P90](#), [L18M6PD1](#), [L18M6PD2](#), [L18M6PD3](#),

[L18S3P51](#), [L18S3P71](#), [L18S3P73](#), [L18S4P72](#), [L19C3PF0](#), [L19C3PF1](#), [L19C4PG0](#), [L19D3PF0](#), [L19D3PF1](#), [L19D3PF2](#), [L19D4PD1](#), [L19L3PF1](#), [L19L3PF2](#), [L19L4PD2](#), [L19M2PF0](#), [L19M3P71](#), [L19M3PF0](#), [L19M3PF1](#), [L19M3PF2](#), [L19M4PD2](#), [L19M4PG0](#), [L1OS2P22](#), [LB121000713-A00-088I-C-OOKO](#), [LB121000718-A00-08BA-S-004J](#), [LB42212C](#), [LBF-TS60](#), [LBF-TS61](#), [LBL-60X](#), [LBS81S1](#), [LC 121500047](#), [LC 121500158](#), [LC P/N 121500077](#), [LC P/N 121500158](#), [LENM1029CWP](#), [LI3M6P61](#), [LI6L6PC1](#), [LO806D01](#), [LO8321L7](#), [LO8C3B21](#), [LO8L6C02](#), [LO8L6D12](#), [LO8L6D13](#), [LO8M6D21](#), [LO8N6Y02](#), [LO8O4C02](#), [LO8O6C02](#), [LO8O6D13](#), [LO8P6D11](#), [LO8S3B21](#), [LO8S6C02](#), [LO8S6D12](#), [LO8S6D13](#), [LO9L6Y02](#), [LO9N6D16](#), [LO9S6Y02](#), [MB06](#), [MCT10](#), [MSL BP-8X81](#), [MSL E255](#), [MSL-442675900001](#), [NB116](#), [NC140BW1-2S1P](#), [NC140BW12S1P](#), [NE116BW2](#), [O1AV403](#), [O1AV430](#), [OOHW027](#), [OOHWO30](#), [OOHWO41](#), [OOWH004](#), [PP31AT128](#), [PXD3X2](#), [S8X81](#), [SB1045074](#), [SB1046F46461](#), [SB10F46438](#), [SB10F46439](#), [SB10F46440](#), [SB10F46441](#), [SB10F46442](#), [SB10F46443](#), [SB10F46444](#), [SB10F46445](#), [SB10F46446](#), [SB10F46447](#), [SB10F46448](#), [SB10F46449](#), [SB10F46452](#), [SB10F46453](#), [SB10F46454](#), [SB10F46455](#), [SB10F46456](#), [SB10F46458](#), [SB10F46459](#), [SB10F46460](#), [SB10F46461](#), [SB10F46462](#), [SB10F46463](#), [SB10F46464](#), [SB10F46465](#), [SB10F46466](#), [SB10F46467](#), [SB10F46468](#), [SB10F46471](#), [SB10F46472](#), [SB10F46474](#), [SB10F46475](#), [SB10F46476](#), [SB10H45071](#), [SB10H45073](#), [SB10H45074](#), [SB10H45075](#), [SB10H45076](#), [SB10H45077](#), [SB10H45078](#), [SB10J78988](#), [SB10J78989](#), [SB10J78990](#), [SB10J78991](#), [SB10J78992](#), [SB10J78993](#), [SB10J78994](#), [SB10J78995](#), [SB10J78996](#), [SB10J78997](#), [SB10J78998](#), [SB10J78999](#), [SB10J7899B](#), [SB10J79000](#), [SB10J79001](#), [SB10J79004](#), [SB10K10386](#), [SB10K10388](#), [SB10K12721](#), [SB10K97566](#), [SB10K97567](#), [SB10K97568](#), [SB10K97569](#), [SB10K97570](#), [SB10K97571](#), [SB10K97572](#), [SB10K97573](#), [SB10K97574](#), [SB10K97575](#), [SB10K97576](#), [SB10K97577](#), [SB10K97578](#), [SB10K97579](#), [SB10K97580](#), [SB10K97581](#), [SB10K97582](#), [SB10K97584](#), [SB10K97585](#), [SB10K97586](#), [SB10K97587](#), [SB10K97588](#), [SB10K97589](#), [SB10K97590](#), [SB10K97591](#), [SB10K97592](#), [SB10K97593](#), [SB10K97594](#), [SB10K97595](#), [SB10K97597](#), [SB10K97599](#), [SB10K97602](#), [SB10K97603](#), [SB10K97606](#), [SB10K97607](#), [SB10K97608](#), [SB10K97609](#), [SB10K97610](#), [SB10K97611](#), [SB10K97612](#), [SB10K97613](#), [SB10K97614](#), [SB10K97615](#), [SB10K97616](#), [SB10K97617](#), [SB10K97618](#), [SB10K97619](#), [SB10K97620](#), [SB10K97621](#), [SB10K97622](#), [SB10K97623](#), [SB10K97624](#), [SB10K97625](#), [SB10K97626](#), [SB10K97627](#), [SB10K97628](#), [SB10K97629](#), [SB10K97630](#), [SB10K97631](#), [SB10K97633](#), [SB10K97634](#), [SB10K97635](#), [SB10K97636](#), [SB10K97637](#), [SB10K97638](#), [SB10K97639](#), [SB10K97640](#), [SB10K97642](#), [SB10K97643](#), [SB10K97644](#), [SB10K97645](#), [SB10K97649](#), [SB10K97651](#), [SB10K97652](#), [SB10K97654](#), [SB10K97655](#), [SB10K97656](#), [SB10K97657](#), [SB10K97658](#), [SB10K97659](#), [SB10K97661](#), [SB10K97662](#), [SB10K97663](#), [SB10K97664](#), [SB10K97665](#), [SB10L84121](#), [SB10L84122](#), [SB10L84123](#), [SB10Q76928](#), [SB10Q76929](#), [SB10S57317](#), [SB10T83120](#), [SB10T83121](#), [SB10V03234](#), [SB10V25232](#), [SB10V25233](#), [SB10V25234](#), [SB10V25235](#), [SB10V25236](#), [SB10V25242](#), [SB10V25243](#), [SB10V25248](#), [SB10V25256](#), [SB10V26972](#), [SB10W86961](#), [SB18C01830](#), [SB18C03200](#), [SB18C03760](#), [SB18C04740](#), [SB18C06924](#), [SB18C06926](#), [SB18C15128](#), [SB18C15129](#), [SB18C15130](#), [SMP CMXXLG6](#), [SMP CMXXSN6](#), [SMP CRXXXSR6](#), [SMP-SVEXXXBKA3](#), [SMPSVEXXXBKA3](#), [Socrates](#), [SQ-1100](#), [SQ-2100](#), [SQU-202](#), [SQU-504](#), [SQU-521](#), [SQU-521\(916C4840F\)](#), [SQU-521\(916C5120F\)](#), [SVEXXXBKA3](#), [Tablet01](#), [TF83700068D](#), [U31](#), [V4000-ISE](#),

LENOVO Batteries List By LENOVO Notebook Computer Model

LENOVO [0106AU](#) Laptop Battery, 0301DHG, 100 series, 100S, 100S 11BY, 100S Ideapad 80R9, 100s-111BY 80R2, 100S-111BY, 100s-11iby (nb116), 100S-14IBR 80R9, 110-15ACL, 110S-11IBR, 1120 80xl, LENOVO [114155u](#) Laptop Battery, 11e 4th Gen, 11e Chromebook 20GD-0004AU, 11E GEN5, 11e Type 20DA, 120, 120S-11IAP, 125 Series, 125A, 125C, 125F, 125L, 1294-AW9, 1294-ay2,

14-I5, 14-I7, 14-ISK, 14-ISK 15, 14-ISK i7, 15-ISK, 160, 1BTIZZZ0LV1, 2-830L, LENOVO [2019 Thinkpad X1 Carbon](#) Laptop Battery, 20236, 20263, 20A7006KAU, 20AH000ECD, 20AT0019CD, 20AY-00BMGE, 20BS-CT01WW, 20BS000YAU, 20BT-S0MXC0, 20BTS05T0W, 20BTS20400, 20C0-001VAU, 20C1000UGE, 20cds0050, 20cds00700, 20cds00800, 20CG000QUS, 20DAS02M00, 20DL0038US, 20DM-000VUS, 20dm-ct01ww, 20EFA01GAU, 20eg-CT01WW, 20EM001MUS, 20EQS05800, 20EV000XUK, 20FAS6LR00, 20FB-002UUK, 20FB-CT01WW, 20FB003TUK, 20FB006GAU, 20FBCT01WW, 20FDCT01WW, 20FJ, 20FQ X1 Yoga, 20FQ-CTR1WW, 20FQCT01WW, 20GF0001US, 20GG001KUS, 20gg001vus, 20GJ-006JSP, 20GJCT01WW, 20H5-0048US, 20H5-009NCA, 20J1CT01WW, 20JDCT01WW, 20JMM000BUS, 20KS-003LUS, 20L9-001TUS, 20LD-002KUK, 20QN002LUS, 21CP4/59/138, 2306CTO, 2355CTO, 24292VG, 28479xu, 2ICP65490, 3000 C200, 3000 C200 8922, 3000 G230 20006, 3000 G230 4107, 3000 G230 Series, 3000 G230G, 3000 G400 14001, 3000 G400 2048, LENOVO [3000 G400 59011](#) Laptop Battery, 3000 G400 Series, 3000 G410 Series, 3000 G430, 3000 G430 4152, 3000 G430 4153, LENOVO [3000 G430 Series](#) Laptop Battery, 3000 G430A, 3000 G430L, 3000 G430LE, 3000 G430M, 3000 G450 2949, 3000 G450 Series, 3000 G450A, 3000 G450M, 3000 G455, 3000 G530, 3000 G530 4151, 3000 G530 DC T3400, 3000 G530 Series, 3000 G530A, 3000 G530M, 3000 G550, 3000 G555, LENOVO [3000 N100](#) Laptop Battery, 3000 N100 0689, LENOVO [3000 N100 0768](#) Laptop Battery, 3000 N100 Series, 3000 N200, 3000 N200 (15.4 inch widescreen), 3000 N200 (15.4" widescreen), 3000 N200 0769, 3000 N200 Series (14"), 3000 N440, 3000 N500, 3000 N500 4233, 3000 N500 Series, 3000 V100 0763, 3000 V100 0764, 3000 V200, LENOVO [3000 V450](#) Laptop Battery, 3000 Y100, 3000 Y300 7759, 3000 Y300 9449, 3000 Y300 9454, 3000 Y300 Series, 3000 Y310 7756, 3000 Y310 Series, LENOVO [3000 Y310a 7756](#) Laptop Battery, 3000 Y310a Series, 3000 Y400, 3000 Y400 9454, 3000 Y410, 3000 Y410 7757, 3000 Y410a, 3000 Y410a 7757, 3000 Y430, 3000 Y500 7761, 3000 Y500 Series, 3000 Y510 7758, 3000 Y510 Series, 3000 Y510a 15303, 3000 Y510a Series, 310 Series, 310-11IAP, 310-15ABR, 310-15ikb, 310-15ISK, 320-15AST, 320-15AST 80XV, 330-15ICN, 330S-14IKB, 3351-CTO, 33511F9, 33511G0, 33511J4, 33511K7, 33511K8, 33511K9, 33511L0, 33511L6, 335128C, 33512AC, 33512HC, 33514PC, 33515XC, 33515ZC, 335162C, 335168C, 335169C, 33516ZC, 335172C, 335173C, 33519LC, 33519NC, 33519SC, 33519VC, 33519WC, 33519XC, 3351A26, 3351A32, 3351A33, 3351A49, 3351A51, 3351A52, 3351A62, 3351A63, 3351A64, 3351A66, 3351A67, LENOVO [3351AYC](#) Laptop Battery, 3351AZC, 3351B6C, 335247C, 3352A29, 3352A31, 3364CTO, 344325C, 344326C, 344327C, LENOVO [34432AC](#) Laptop Battery, 34432PC, 34432SC, 344368C, 344369C, 34436AC, 34436BC, 34436DC, 34436FC, 34436HC, 34438BC, 34438CC, 34438HC, 34438LC, 3443A89, 3443A92, 3443A93, 3443A94, 3443A96, 3443A99, 3443AA1, 3443AA2, 3443AB1, 3443AB2, 3443AB3, 3443CA6, 3443CTO, 34442SC, 34442TC, 344448C, 34444HC, 3444CA6, 3448AU9, 3448AV1, 3448AW4, 3448AZ1, 3448BV1, 3448CA6, 36971A1, 36984RU, 36984RU Helix, 3702T1, 3ICP5/54/90, 4173K7M, 4187-RWU, 420, 420 Series, 420A, 420A Series, 420L, 420L Series, 420M, 420M Series, 4240-53F, LENOVO [42912WM](#) Laptop Battery, 42T4534, 42T4536, 42T4538, 42T4540, 42T4542, 42T4543, 42T4587, 42T4591, 42T4593, 42T4646, LENOVO [42T4647](#) Laptop Battery, 42T4648, 42T4649, 42T4650, 42T4680, 42T4684, 42T4686, 42T4694, 42T4696, 42T4823, 42T4825, 4330, 43R9253, 43R9254, 43R9255, 4450a, 45K127, 45K1274, LENOVO [45K1275](#) Laptop Battery, 45K1278, 45K2175, 45K2177, 45K2178, 505s Touch Series, 510 14-ISK, 510-151SK, 510-15IKB, 510-15ISK, 510S, 510S-13ISK, 514F73LJ, 51J0398, 51J0399, 520-14IBK, 520S-14IKB, 530S, 530S-14AAR, 5B10K84538, 5B10K84638, 5B10M49821, 5B10P98185, 6363-C7M, 700 -151SK, 700-ISK, 7000-13, 710-15iKB, 710S PLUS 131SK, 710S Plus-13IKB, 720S 15IKB, 720S-15, 74495/80X6006PAU, 7454-2gu, 80AY59386391, 80EW0194UK, 80FY, 80JH00LWCF, 80JV, 80LX, 80LX-X005US, 80LX001KUS, 80LXX005US, 80M5, 80SR002SUS, 80SV00GVAU, 80tj00f9au, 80U1, 80VB004XAU,

LENOVO [80ve](#) Laptop Battery, 80VF, 80X8 YOGA 520-14IKB, 80XB, 80Y70023C, 81EM, 81FW0008CD, 81FW0009CD, 81FW000DCD, 81FW000GCD, 81FW000HCD, 81HC0007CD, 81LC0005CD, 81LE0007CD, 86141C3, 86141C4, 86141C6, 86141C7, 86149EC, LENOVO [86149FC](#) Laptop Battery, 900-131sk, 910-13ikb, A10-70, A10-70F, A10-80HC, LENOVO [a1000](#) Laptop Battery, A1070F, A1080HC, A2107, A2107A, A2207, A2207A-H, A500, A5500 Tablet PC, A5500-HV Tablet PC, A600, A7-10 Table, A7600-F, LENOVO [A7600F](#) Laptop Battery, A8-50 Tablet PC, Advent 700, Advent 7087, AIO PC HORIZON 2S, AIO PC HORIZON 2S F0AT, Air 12, Air 13 Pro, Air 14, LENOVO [Air 14 Pro](#) Laptop Battery, AIR PRO, Air13 PRO, Air14 S540-14IWL, ASM 42T4590, ASM 42T4683, B40, B40 Series, B40-30, B40-30 Series, LENOVO [B40-45](#) Laptop Battery, B40-45 Series, B40-70 series, b41-30, B41-80, B4308, B4310, B4322, B4400SA, B450, B450A, B450L, B460A-ITH, B460A-PSI, B460eA-PSE, B460eA-TFO, B460eL-TTH, B465, B465A, B465c, B465G, B480, B480 Series, B480A-ITH, B485, B485 Series, B490, B490 Series, B490S, B495, B50-10 mod80 QR, B50-30, B50-30 (80ES), B50-30 (MCA2VGE), B50-30 (MCA2WGE), B50-30 (MCA32GE), B50-30 (MCA37GE), B50-30 80ES, B50-30 Series, B50-30 Touch, B50-30 Touch Series, B50-45, B50-45 (59445371), B50-45 (MCD23GE), B50-45 (MCD28GE), B50-45 (MCD2GGE), B50-45 (MCD3LGE), B50-45 Series, B50-70, B50-70 (80EU), B50-70 (MCC25GE), B50-70 (MCC26GE), B50-70 (MCC28GE), B50-70 (MCC2FGE), LENOVO [B50-70 \(MCC2HGE\)](#) Laptop Battery, B50-70 (MCC2KGE), B50-70 (MCC2NGE), B50-70 (MCC2NMH), B50-70 (MCC2QGE), B50-70 (MCC2TGE), B50-70 (MCC2VGE), B50-70 (MCC2WUK), B50-70 (MCC2YGE), B50-70 (MCC2ZGE), B50-70 (MCC32GE), B50-70 (MCC36GE), B50-70 (MCC39GE), B50-70 (MCC3FFR), B50-70 Series, B50-80, B51-30, B51-30A-NT0, B51-30A-NTS, B51-30A-NTZ, B51-35, LENOVO [B51-35 \(80LH0016GE\)](#) Laptop Battery, B51-35 (80LH001GGE), B51-35 (80LH002GGE), B51-35-EON, B51-35A-AEI, B51-80A-IFI, B51-80A-ISE, B550 0880, B570E, B580, B580 Series, B580-M94A5GE, B580A-IFI, B585, B585 Series, B590, B590 Series, B595, B70-80 80MR0006GE, B8000, b8000-f, B8000AF 16GSL-MX, B8080 F, BL195, C430 Series, C430A Series, C430L Series, C430M Series, C460, LENOVO [C460A](#) Laptop Battery, C460M, C461, C465, C467, C510, Carbon X1 (1291-27U), Carbon X1 3460, Carbon X1 I7-4600, Carbon X1C 2019, CHAO7000-13, CHROMEBOOK K100S, CHROMEBOOK 11 100E, Chromebook N20p, Chromebook N21, Computer model T410 Think Pad, CW3 Series, deaPad Y900-17ISK-80Q1000BGE, E-540, E100, E255, E255 Series, E26, E260, E260 Series, E280 Series, E280S, E290 Series, E31-70, E31-80, E31-80 80MX0107GE, E31-80-IFI, E31-80-ISE, E31-80-ITH, E320, E320 Series, E370, E370 series, E390, E390 Series, E40-80, E41, E41G, E41L, E42, E42-80, E42G, E42L, LENOVO [E43](#) Laptop Battery, E430, E430c, E435, E43A, E43G, E43L, E440, E450, LENOVO [E450C](#) Laptop Battery, E455, E46, E460, E460C, E46A, E46G, E46L, E470, E49, E50-70 NOTEBOOK, E50-80, E50-80 (80J2006VGE), E50-80 (80J200QQGE), E50-80 (80J200QXGE), E50-80 (80J20151GE), E50-80 (80J2024SGE), E51-80, E51-80 (80QB0006GE), E51-80 (80QB0008GE), E51-80 (80QB0009GE), E51-80 (80QB000FGE), E51-80 (80QB005NGE), E520, E530, E530c, E535, E560 20EV, E560-0KCD, E560-0QCD, E560-0UCD, E560-0VCD, E560-19CD, E560-1ACD, E560-1BCD, LENOVO [E560-1DCD](#) Laptop Battery, E560-1ECD, E560-1GCD, E560-1JCD, E560-34CD, E560-35CD, E560-59CD, E560-5ACD, E560-5CCD, E560-5GCD, E560-63CD, E560-74CD, E565-02CD, E565-04CD, E565-0LCD, E600, E600 Series, E660, E660 Series, E680 Series, LENOVO [E680A](#) Laptop Battery, EDGE 15, Edge 2-1580, Edge 21580, Edge E130 NZUAXMB, Edge S230u, Eraser B40, Eraser B40 Series, LENOVO [Eraser B40-30](#) Laptop Battery, Eraser B40-30 Series, Eraser B40-45, Eraser B40-45 Series, Eraser B40-70, Eraser B40-70 Series, Eraser B50, Eraser B50 Series, Eraser B50-30, Eraser B50-30 Series, Eraser B50-30 Touch, Eraser B50-30 Touch Series, Eraser B50-45, Eraser B50-45 Series, Eraser B50-70, Eraser B50-70 Series, ERASER G50, ERASER G50-30, ERASER G50-45, ERASER G50-70, ERASER G50-70A, ERASER

G50-70M, ERASER G50-75, ERASER G50-80, Eraser M4400, Eraser M4400 Series, Eraser M4400A, LENOVO [Eraser M4400A Series](#) Laptop Battery, Eraser M4450, Eraser M4450 Series, Eraser M4450A, Eraser M4450A Series, Eraser N40, Eraser N40 Series, Eraser N40-30, Eraser N40-30 Series, Eraser N40-45, Eraser N40-45 Series, Eraser N40-70, Eraser N40-70 Series, Eraser N50, Eraser N50 Series, Eraser N50-30, Eraser N50-30 Series, Eraser N50-45, Eraser N50-45 Series, Eraser N50-70, Eraser N50-70 Series, Eraser V4400 Series, Eraser V4400A Series, ERASER Z40, LENOVO [ERASER Z40-70](#) Laptop Battery, ERASER Z40-75, ERASER Z50-70, Eraser Z50-75, ERASER Z70, ERASER Z70-70, ERASER Z70-80, Eraser Z510, F20, F21, F30, F30A, F31, F31A Series, F40, F40 Series, F40A, F40M, F41, F41 Series, F41A, F41G, F41M, F50, F50 Series, F50A, FLEX 11, FLEX 15/FLEX 15D, Flex 2 14D, Flex 2 20376, FLEX 2-14, FLEX 2-14D, FLEX 2-15, FLEX 2-15D, FLEX 20 10142, Flex 3 14 -80R30009US, Flex 3 14 80R30009US, Flex 3 1435, Flex 3 1470, Flex 3 1480, FLEX 3 15, Flex 3-1120, Flex 3-1120 80LX, Flex 3-1120 80LX001KUS, Flex 3-1120 80LXX005US, Flex 3-1130, FLEX 3-1470, FLEX 3-1470 3-1580, FLEX 3-1480, FLEX 3-1570, FLEX 3-1580, FLEX 31470, FLEX 31480, FLEX 31570, FLEX 31580, Flex 4-1130, flex 4-1470, Flex 4-1480, FLEX 4-1570, Flex 41130, FLEX 41470, LENOVO [FLEX 41570](#) Laptop Battery, FLEX 5 1470, Flex 6-14, Flex 6-14IKB, Flex14AP, Flex14AT, Flex15, Flex15D, FLEX2 14, FLEX2 15, Flex2-14, Flex2-15, Flex3 1435, Flex3 1470, Flex3 1480, Flex3-11-NTW, Flex3-14-AEI, LENOVO [Flex3-14-IFI](#) Laptop Battery, Flex3-14-ISE, Flex314IFI, Flex314ISE, FLEX4-1470, FLEX4-1580, FlexM, LENOVO [FOAO5AV](#) Laptop Battery, For Yoga 3 11, For Yoga 3 11 80J8, For Yoga 3 11 Convertible, For Yoga 3 11-5Y10, For Yoga 3 11-5Y10c, LENOVO [For Yoga 3 11-5Y71](#) Laptop Battery, For Yoga3 11-5Y10-D, For Yoga3 11-5Y10c-U, FRU 42T4589, FRU 42T4682, G380, G385, G40 - 80E400QRCF, G40 - 80E400QSCF, G40 - 80E400R0CF, G40-30, G40-30-NTH, G40-30-NTW, G40-45, G40-45-AEI, G40-45-ASI, G40-45-E0N, LENOVO [G40-45-ETW](#) Laptop Battery, G40-70, G40-70AM-IFI, G40-70AT-CTW, G40-70AT-IFI, G40-70AT-ITH, G40-70AT-PTH, G40-70M-IFI, G40-70M-ITH, G40-70MA-IFI, G40-70MA-ITH, G40-70MA-PTH, G40-75-ATE, G40-80, G400, G400s, G400s Series, G400s Touch, G400s Touch Series, G405s, G405s Series, LENOVO [G405s Touch](#) Laptop Battery, G405s Touch Series, G410s, G410s Series, G410s Touch, G410s Touch Series, G430, G430A, G460, LENOVO [G460-06772GU](#) Laptop Battery, G460-06772WU, G460-06772XU, G470, G480, G480 Series, G480A-ISE, G485, G485 Series, G490, G50-30-NTH, G50-30-NTW, G50-45 Laptop Type 80E3, G50-45(A8-6410), G50-45-AEI, G50-45-ASI, G50-45-E0N, G50-45-QC, LENOVO [G50-70](#) Laptop Battery, LENOVO [G50-70 20351](#) Laptop Battery, G50-70AT-IFI, G50-70AT-ISE, G50-70AT-ITH, G50-70AT-PTH, G50-70M-ITH, G50-70MA-CTW, G50-70MA-IFI, LENOVO [G50-70MA-ISE](#) Laptop Battery, G50-70MA-ITH, G50-70MA-PTH, G50-75mA-ATE, G50-80 - 80E501JDCF, G50-80 - 80E502XLCF, G50-80 - 80E502XNCF, G50-80 - 80E502XQCF, G50-80 - 80E502XRCF, G50-80 - 80E502XVCF, G50-80-80E501J0CF, G50-80-ISE, G50-80-ITH, G50-80AT-IFI, G50-80AT-ISE, G500, G500 20236, G500 Model 20236, G500AT-IFI Series, G500s, G500s Series, G500s Touch, G500s Touch Series, G500s-59367693, G505, G505s, G505s Series, G505s Touch, G505s-20255, G5070, G510s, G510s Series, G510s Touch, LENOVO [G510s Touch Series](#) Laptop Battery, G510sTouch, G530, G530A, G550S, G560, G560-0679, G580, G580 2689, G580 Series, G585 Series, G70, G700, G710, G780, GD761, HB07UAJE, HELIX 2 WITH PRO KEYBOA, Helix 3697CTO, LENOVO [Helix 3698-4RU](#) Laptop Battery, Helix 3701-3GM, Helix 37018F1, LENOVO [Helix X1](#) Laptop Battery, hinkPad Edge E570, Horizon 2 27 Table PC, Horizon 227, Horizon 27, Horizon 2e, Horizon II 27, I1000, I1000-ISE, IBM/Lenovo A815 Series, IBM/Lenovo A820 Series, IdeaCentre Flex 20, IdeaCentre Flex20, IDEALPAD FLEX 15, Idealpad MIIX 510-12ISK, Idealpad U31-70, IdeaPad 100 15-IBD 80QQ, Ideapad 100 80QQ, IdeaPad 100-14IBD, IdeaPad 100-14IBD(80RK), IdeaPad 100-14IBD(80RK002UIH), IdeaPad 100-14IBY, LENOVO [IdeaPad 100-151BD](#) Laptop Battery, IdeaPad 100-15IBD, IdeaPad 100-15IBD(80MJ), IdeaPad

100-15IBD(80MJ00ATGE), IdeaPad 100-15IBD(80MJ00CJGE), IdeaPad 100-15IBD(80MJ00CKGE), IdeaPad 100-15IBD(80MJ00CLGE), IdeaPad 100-15IBD(80MJ00CQGE), IdeaPad 100-15IBD(80MJ00GBGE), IdeaPad 100-15IBD(80QQ), IdeaPad 100-15IBD(80QQ002AGE), IdeaPad 100-15IBD(80QQ003BGE), IdeaPad 100-15IBD(80QQ009LGE), IdeaPad 100-15IBD(80QQ00AQGE), IdeaPad 100-15IBD(80QQ00ARGE), IdeaPad 100-15IBD(80QQ00GCGE), LENOVO [IdeaPad 100-15IBD\(80QQ00KBGE\)](#) Laptop Battery, IdeaPad 100-15IBD(80QQ0179GE), IdeaPad 100-15IBD(80QQ018HGE), Ideapad 100-15IBY, IdeaPad 100-15IBY(80MJ), IdeaPad 100-15IBY(80MJ001CGE), IdeaPad 100-15IBY(80MJ001EGE), IdeaPad 100-15IBY(80MJ00ARGE), LENOVO [IdeaPad 100-15IBY\(80MJ00ASGE\)](#) Laptop Battery, IdeaPad 100-15IBY(80MJ00ATGE), IdeaPad 100-15IBY(80MJ00CLGE), IdeaPad 100-15IBY(80MJ00CPGE), IdeaPad 100-15IBY(80MJ00CQGE), IdeaPad 100-15IBY(80MJ00EDGE), IdeaPad 100-15IBY(80MJ00EEGE), IdeaPad 100-15IBY(80MJ00GAGE), IdeaPad 100-15IBY(80MJ00GBGE), IdeaPad 100-15IBY(80MJ00JBGE), IdeaPad 100-15IBY(80MJ00TQGE), Ideapad 10015IBY, IdeaPad 100S, IDEAPAD 100s BSN0427488-01, IdeaPad 100S-11IBY, IdeaPad 100S-11IBY 80R2, IdeaPad 100S-11IBY(80R2002HGE), IdeaPad 100S-11IBY(80R2002JGE), IdeaPad 100S-11IBY(80R2002KGE), IdeaPad 100S-11IBY(80R2002LGE), IdeaPad 100S-11IBY(80R200DHGE), IDEAPAD 100S-141BR, IdeaPad 100S-14IBR, IdeaPad 100S-14IBR 80R9, IdeaPad 100S-14IBR80R9002WGE, IdeaPad 100S-14IBR80R90050GE, IdeaPad 100S-14IBR80R90051GE, IdeaPad 100S-14IBR80R9005MPB, IdeaPad 100S-14IBR80R900BEGE, IdeaPad 100S-14IBR80R900FJGE, IdeaPad 100S-80 R2, IdeaPad 100S14IBR, IdeaPad 100S14IBR 80R9, IdeaPad 100S14IBR80R9002WGE, IdeaPad 100S14IBR80R90050GE, IdeaPad 100S14IBR80R90051GE, IdeaPad 100S14IBR80R9005MPB, IdeaPad 100S14IBR80R900BEGE, IdeaPad 100S14IBR80R900FJGE, Ideapad 110, IdeaPad 110-14, IdeaPad 110-14IBR, IdeaPad 110-15, Ideapad 110-151sk, LENOVO [ideapad 110-15ACL](#) Laptop Battery, IdeaPad 110-15IBR, Ideapad 110-15ISK, IdeaPad 110-15ISK (80UD), IdeaPad 110-15ISK (80UD0019TX), IdeaPad 110-15ISK (80UD001GCK), IdeaPad 110-15ISK (80UD001YGE), IdeaPad 110-15ISK (80UD002WGE), IdeaPad 110-15ISK (80UD002XGE), IdeaPad 110-15ISK (80UD006HRI), IdeaPad 110-15ISK (80UD009RGE), IdeaPad 110-15ISK (80UD00BXMH), IdeaPad 110-15ISK (80UD00HRGE), IdeaPad 110-15ISK (80UD00HVGE), IdeaPad 110-15ISK (80UD00L0GE), IdeaPad 110-15ISK (80UD00LAGE), IdeaPad 110-15ISK (80UD00N0GE), IdeaPad 110-15ISK 80UD, IdeaPad 110-15ISK 80UD0019TX, IdeaPad 110-15ISK 80UD001GCK, IdeaPad 110-15ISK 80UD001YGE, IdeaPad 110-15ISK 80UD002WGE, IdeaPad 110-15ISK 80UD002XGE, IdeaPad 110-15ISK 80UD006HRI, IdeaPad 110-15ISK 80UD009RGE, IdeaPad 110-15ISK 80UD00BXMH, IdeaPad 110-15ISK 80UD00HRGE, IdeaPad 110-15ISK 80UD00HVGE, IdeaPad 110-15ISK 80UD00L0GE, IdeaPad 110-15ISK 80UD00LAGE, IdeaPad 110-15ISK 80UD00N0GE, Ideapad 11015, Ideapad 11015ISK, IdeaPad 11015ISK (80UD), IdeaPad 11015ISK (80UD0019TX), IdeaPad 11015ISK (80UD001GCK), LENOVO [IdeaPad 11015ISK \(80UD001YGE\)](#) Laptop Battery, IdeaPad 11015ISK (80UD002WGE), IdeaPad 11015ISK (80UD002XGE), IdeaPad 11015ISK (80UD006HRI), IdeaPad 11015ISK (80UD009RGE), IdeaPad 11015ISK (80UD00BXMH), IdeaPad 11015ISK (80UD00HRGE), IdeaPad 11015ISK (80UD00HVGE), IdeaPad 11015ISK (80UD00L0GE), IdeaPad 11015ISK (80UD00LAGE), LENOVO [IdeaPad 11015ISK \(80UD00N0GE\)](#) Laptop Battery, Ideapad 110S-11IBR, LENOVO [IdeaPad 110S-11IBR \(80WG\) Serie](#) Laptop Battery, IdeaPad 110S-11IBR (80WG000UMH), IdeaPad 110S-11IBR (80WG005UGE), IdeaPad 110S-11IBR (80WG005VGE), IdeaPad 110S-11IBR (80WG005WGE), IdeaPad 110S-11IBR (80WG005XGE), IdeaPad 110S-11IBR (80WG005YGE), IdeaPad 110S-11IBR (80WG006LGE), IdeaPad 110S-11IBR (80WG006MGE), IdeaPad 110S-11IBR (80WG007TGE), IdeaPad 110S-11IBR (80WG00C8GE), IdeaPad 110S-11IBR (80WG00C9GE), IdeaPad 110S-11IBR (80WG00CAGE), IdeaPad 110S-11IBR (80WG00CBGE), Ideapad 110s-11ibr,

Ideapad 110S11IBR, Ideapad 120s, IDEAPAD 120S 14IAP, IdeaPad 120S-11, IdeaPad 120S-11IAP, IdeaPad 120S-11IAP81A4, IdeaPad 120S-11IAP81A4005UGE, IdeaPad 120S-11IAP81A4005VGE, LENOVO [IdeaPad 120S-11IAP81A4005WGE](#) Laptop Battery, IdeaPad 120S-11IAP81A4005XGE, IdeaPad 120S-11IAP81A4005YGE, IdeaPad 120S-11IAP81A40060GE, IdeaPad 120S-11IAP81A40061GE, IdeaPad 120S-11IAP81A40062GE, Ideapad 120S-14, Ideapad 120S-14IAP, IdeaPad 120S-14IAP (81A5) Serie, IdeaPad 120S-14IAP (81A5004BGE), IdeaPad 120S-14IAP (81A5004CGE), LENOVO [IdeaPad 120S-14IAP \(81A5006KGE\)](#) Laptop Battery, IdeaPad 120S-14IAP (81A5006MGE), IdeaPad 120S-14IAP (81A5006NGE), IdeaPad 120S-14IAP (81A50072GE), IdeaPad 120S-14IAP (81A500ACGE), IdeaPad 120S-14IAP (81A500ADGE), IdeaPad 120S-14IAP (81A500AEGE), IdeaPad 120S-14IAP (81A500AQGE), IdeaPad 120S-14IAP (81A500C0GE), IdeaPad 120S-14IAP (81A500C7GE), IdeaPad 120S-14IAP (81A500CCGE), IdeaPad 120S-14IAP (81A500EDGE), IdeaPad 120S-14IAP (81A500GBGE), IdeaPad 120S-14IAP (81A500GCCGE), IdeaPad 120S-14IAP (81A500H9GE), IdeaPad 120S-14IAP (81A500HFGE), IdeaPad 120S-14IAP-81A50093MH, Ideapad 120S14, Ideapad 120S14IAP, IDEAPAD 130-15IKB, Ideapad 20169, IdeaPad 20245, IdeaPad 20250, IdeaPad 20255, IdeaPad 20298, ideapad 20299, IdeaPad 20354, IdeaPad 2710, IDEAPAD 2IN1 11, ideapad 300-14ISK, LENOVO [IDEAPAD 300-151ISK](#) Laptop Battery, Ideapad 300-15ISK, IdeaPad 300s-14ISK, IdeaPad 300s-14ISK 80Q4, IdeaPad 300s-14ISK 80Q4000KUS, Ideapad 300s-14osk, IdeaPad 310, IdeaPad 310-14IAP, IdeaPad 310-14IAP(80TS), IdeaPad 310-14IAP(80TS0003CL), IdeaPad 310-14IAP80TS, IdeaPad 310-14IAP80TS0003CL, IdeaPad 310-14IKB, IDEAPAD 310-14IKB L15M2PB2, IdeaPad 310-14IKB(80TU), IdeaPad 310-14IKB(80TU002SPH), IdeaPad 310-14IKB(80TU0035MJ), IdeaPad 310-14IKB(80TU0036MJ), IdeaPad 310-14IKB(80TU0037MJ), IdeaPad 310-14IKB(80TU003RTA), IdeaPad 310-14IKB(80TU0046TA), IdeaPad 310-14IKB(80TU005LVN), LENOVO [IdeaPad 310-14IKB\(80TU005NVN\)](#) Laptop Battery, LENOVO [IdeaPad 310-14IKB80TU](#) Laptop Battery, IdeaPad 310-14IKB80TU002SPH, IdeaPad 310-14IKB80TU0035MJ, IdeaPad 310-14IKB80TU0036MJ, IdeaPad 310-14IKB80TU0037MJ, IdeaPad 310-14IKB80TU003RTA, IdeaPad 310-14IKB80TU0046TA, IdeaPad 310-14IKB80TU005LVN, IdeaPad 310-14IKB80TU005NVN, IdeaPad 310-14ISK, IdeaPad 310-14ISK(80SL), IdeaPad 310-14ISK(80SL000CPH), IdeaPad 310-14ISK80SL, IdeaPad 310-14ISK80SL000CPH, IdeaPad 310-15, Ideapad 310-151SK, IdeaPad 310-15ABR, IdeaPad 310-15ABR(80ST), IdeaPad 310-15ABR(80ST0003GE), IdeaPad 310-15ABR(80ST001SGE), IdeaPad 310-15ABR(80ST002NGE), IdeaPad 310-15ABR(80ST0035GE), IdeaPad 310-15ABR(80ST0037GE), IdeaPad 310-15ABR(80ST003HGE), IdeaPad 310-15ABR(80ST004AGE), IdeaPad 310-15ABR(80ST006VGE), IdeaPad 310-15ABR(80ST008BGE), IdeaPad 310-15IAP, IdeaPad 310-15IAP(80TT), IdeaPad 310-15IAP(80TT0020RA), IdeaPad 310-15IAP(80TT0026RA), IdeaPad 310-15IAP(80TT003QGE), IdeaPad 310-15IAP(80TT003RGE), IdeaPad 310-15IKB, IdeaPad 310-15IKB(80TV), IdeaPad 310-15IKB(80TV00BMGE), LENOVO [IdeaPad 310-15IKB\(80TV00L2GE\)](#) Laptop Battery, IdeaPad 310-15IKB(80TV00PWGE), IdeaPad 310-15IKB(80TV00QYGE), IdeaPad 310-15IKB(80TV00RBGE), IdeaPad 310-15IKB(80TV00RLGE), IdeaPad 310-15IKB(80TV00UDGE), IdeaPad 310-15IKB(80TV00V4RA), IdeaPad 310-15IKB(80TV014XGE), IdeaPad 310-15IKB(80TV01BKMZ), IdeaPad 310-15IKB(80TV01YSGE), IdeaPad 310-15IKB(80TV020DGE), IdeaPad 310-15ISK, IdeaPad 310-15ISK(80SM), IdeaPad 310-15ISK(80SM000HGE), IdeaPad 310-15ISK(80SM003SUS), IdeaPad 310-15ISK(80SM006E), IdeaPad 310-15ISK(80SM00ADAX), IdeaPad 310-15ISK(80SM00CWMH), IdeaPad 310-15ISK(80SM00DVRA), IdeaPad 310-15ISK(80SM00HUCK), IdeaPad 310-15ISK(80SM00LD), IdeaPad 310-15ISK(80SM00LDGE), LENOVO [IdeaPad 310-15ISK\(80SM00LEGE\)](#) Laptop Battery, IdeaPad 31015IKB, Ideapad 310S-14, IdeaPad 310S-14AST, IdeaPad 310S-14AST(80UL), IdeaPad 310S-14AST(80UL000ACL), IdeaPad

310S-14AST(80UL000CCD), Ideapad 310S-14ISK, Ideapad 310S-14ISK-IFI, IdeaPad 310S-15IKB, IdeaPad 310S-15IKB80TV00L2GE, IdeaPad 310S-15IKB80TV00RLGE, IdeaPad 310S-15IKB80TV01YRGE, IdeaPad 310S-15IKB80UW, IdeaPad 310S-15IKB80UW001AGE, IDEAPAD 320, Ideapad 320-14, IdeaPad 320-14AST, IdeaPad 320-14AST80XU, IdeaPad 320-14AST80XU000KTA, IdeaPad 320-14AST80XU000LMJ, IdeaPad 320-14IAP, IdeaPad 320-14IAP80XQ, IdeaPad 320-14IAP80XQ003NLT, IdeaPad 320-14IAP80XQ003YMH, IdeaPad 320-14IAP80XQ0044MB, LENOVO [IdeaPad 320-14IKB](#) Laptop Battery, IdeaPad 320-14IKB80X400BTGE, IdeaPad 320-14IKB80X400D1GE, IdeaPad 320-14IKB80XK/80YD, IdeaPad 320-14IKB80XK0067MX, IdeaPad 320-14ISK, IdeaPad 320-14ISK80XG, Ideapad 320-15, Ideapad 320-15AST, Ideapad 320-15IAP, IdeaPad 320-15IAP-80WG00F2GE, IdeaPad 320-15IAP-80XR, IdeaPad 320-15IAP-80XR0094GE, IdeaPad 320-15IAP-80XR0095GE, IdeaPad 320-15IAP-80XR0096GE, IdeaPad 320-15IAP-80XR009NGE, IdeaPad 320-15IAP-80XR009PGE, IdeaPad 320-15IAP-80XR00CGSC, LENOVO [IdeaPad 320-15IAP-80XR00LCGE](#) Laptop Battery, IdeaPad 320-15IAP-80XR00LDGE, IdeaPad 320-15IAP-80XR00LJGE, IdeaPad 320-15IAP-80XR00NKMh, IdeaPad 320-15IAP-80XR00WJGE, IdeaPad 320-15IAP-80XR00WUGE, IdeaPad 320-15IAP-80XR0110GE, IdeaPad 320-15IAP-80XR0113GE, IdeaPad 320-15IAP-80XR018SGE, IdeaPad 320-15IAP-80XR018TGE, LENOVO [IdeaPad 320-15IAP-80XR018UGE](#) Laptop Battery, IdeaPad 320-15IAP-80XR01AUGE, Ideapad 320-15IKB, IdeaPad 320-15IKB-80XL, IdeaPad 320-15IKB-80XL0006US, IdeaPad 320-15IKB-80XL000FUS, IdeaPad 320-15IKB-80XL0053RK, IdeaPad 320-15IKB-80XL00B6GE, IdeaPad 320-15IKB-80XL01NGGE, IdeaPad 320-15IKB-80XL03FDGE, LENOVO [IdeaPad 320-15IKB-80XL03SMGE](#) Laptop Battery, IdeaPad 320-15IKB-80XN0003US, IdeaPad 320-15IKB-80YE, IdeaPad 320-15IKB-80YE0022GE, IdeaPad 320-15IKB-80YE00ANGE, IdeaPad 320-15IKB-81BG, IdeaPad 320-15IKB-81BG00C6GE, IdeaPad 320-15IKB-81BG00CCGE, IdeaPad 320-15IKB-81BG00E4MZ, IdeaPad 320-15IKB-81BG00F1GE, Ideapad 320-15IKB-81BG00HASP, IdeaPad 320-15IKB-81BT, LENOVO [IdeaPad 320-15IKB-81BT0023MZ](#) Laptop Battery, IdeaPad 320-15IKBN(80XL), IdeaPad 320-15IKBN(80XL01NFGE), IdeaPad 320-15IKBN(80XL02U4SP), IdeaPad 320-15IKBN(80XL039TGE), IdeaPad 320-15IKBN(80XL03F6GE), IdeaPad 320-15IKBN80XL, IdeaPad 320-15IKBN80XL01NFGE, IdeaPad 320-15IKBN80XL02U4SP, LENOVO [IdeaPad 320-15IKBN80XL039TGE](#) Laptop Battery, IdeaPad 320-15IKBN80XL03F6GE, IdeaPad 320-15IKBRN, IdeaPad 320-15IKBRN 81BG001KGE, Ideapad 320-17IKB, Ideapad 320-17IKB 80XM009AMH, IdeaPad 320-17IKB-80XM, IdeaPad 320-17IKB-80XM003LGE, IdeaPad 320-17IKB-80XM007GGE, LENOVO [IdeaPad 320-17IKB-80XM007HGE](#) Laptop Battery, IdeaPad 320-17IKB-80XM007RMZ, IdeaPad 320-17IKB-80XM0090GE, IdeaPad 320-17IKB-80XM0094GE, IdeaPad 320-17IKB-80XM00CJGE, IdeaPad 320-17IKB-80XM00CRGE, IdeaPad 320-17IKB-80XM00F1GE, IdeaPad 320-17IKB-80XM00JMGE, IdeaPad 320-17IKB-80XM00K9GE, IdeaPad 320-17IKB-81BJ, LENOVO [IdeaPad 320-17IKB-81BJ0007GE](#) Laptop Battery, IdeaPad 320-17IKB-81BJ000BGE, IdeaPad 320-17IKB-81BJ0016MZ, IdeaPad 320-17IKB-81BJ001TGE, IdeaPad 320-17IKB-81BJ002SGE, IdeaPad 320-17IKB-81BJ002TGE, IdeaPad 320-17IKB-81BJ0033MZ, IdeaPad 320-17IKB-81BJ0057GE, IdeaPad 320-17IKB-81BJ0059GE, IdeaPad 320-17IKB-81BJ005AMZ, LENOVO [Ideapad 320-17ISK](#) Laptop Battery, Ideapad 32014, IdeaPad 32014AST, IdeaPad 32014AST80XU, IdeaPad 32014AST80XU000KTA, IdeaPad 32014AST80XU000LMJ, IdeaPad 32014IAP, IdeaPad 32014IAP80XQ, IdeaPad 32014IAP80XQ003NLT, IdeaPad 32014IAP80XQ003YMH, IdeaPad 32014IAP80XQ0044MB, IdeaPad 32014IKB, IdeaPad 32014IKB80X400BTGE, IdeaPad 32014IKB80X400D1GE, IdeaPad 32014IKB80XK/80YD, IdeaPad 32014IKB80XK0067MX, IdeaPad 32014ISK, IdeaPad 32014ISK80XG,

Ideapad 32015, Ideapad 32015IAP, IdeaPad 32015IAP80WG00F2GE, IdeaPad 32015IAP80XR, IdeaPad 32015IAP80XR0094GE, IdeaPad 32015IAP80XR0095GE, IdeaPad 32015IAP80XR0096GE, IdeaPad 32015IAP80XR009NGE, IdeaPad 32015IAP80XR009PGE, IdeaPad 32015IAP80XR00CGSC, IdeaPad 32015IAP80XR00LCGE, IdeaPad 32015IAP80XR00LDGE, IdeaPad 32015IAP80XR00LJGE, IdeaPad 32015IAP80XR00NKM, IdeaPad 32015IAP80XR00WJGE, IdeaPad 32015IAP80XR00WUGE, IdeaPad 32015IAP80XR0110GE, IdeaPad 32015IAP80XR0113GE, IdeaPad 32015IAP80XR018SGE, IdeaPad 32015IAP80XR018TGE, IdeaPad 32015IAP80XR018UGE, IdeaPad 32015IAP80XR01AUGE, Ideapad 32015IKB, IdeaPad 32015IKB80XL, IdeaPad 32015IKB80XL0006US, IdeaPad 32015IKB80XL000FUS, IdeaPad 32015IKB80XL0053RK, IdeaPad 32015IKB80XL00B6GE, IdeaPad 32015IKB80XL01NGGE, IdeaPad 32015IKB80XL03FDGE, IdeaPad 32015IKB80XL03SMGE, IdeaPad 32015IKB80XN0003US, IdeaPad 32015IKB80YE, IdeaPad 32015IKB80YE0022GE, IdeaPad 32015IKB80YE00ANGE, IdeaPad 32015IKB81BG, IdeaPad 32015IKB81BG00C6GE, IdeaPad 32015IKB81BG00CCGE, IdeaPad 32015IKB81BG00E4MZ, IdeaPad 32015IKB81BG00F1GE, Ideapad 32015IKB81BG00HASP, IdeaPad 32015IKB81BT, IdeaPad 32015IKB81BT0023MZ, IdeaPad 32015IKBN(80XL), IdeaPad 32015IKBN(80XL01NFGE), IdeaPad 32015IKBN(80XL02U4SP), IdeaPad 32015IKBN(80XL039TGE), IdeaPad 32015IKBN(80XL03F6GE), IdeaPad 32015IKBN80XL, IdeaPad 32015IKBN80XL01NFGE, IdeaPad 32015IKBN80XL02U4SP, IdeaPad 32015IKBN80XL039TGE, IdeaPad 32015IKBN80XL03F6GE, IdeaPad 32015IKBRN, Ideapad 32017IKB, Ideapad 32017IKB 80XM009AMH, IdeaPad 32017IKB80XM, IdeaPad 32017IKB80XM003LGE, IdeaPad 32017IKB80XM007GGE, IdeaPad 32017IKB80XM007HGE, IdeaPad 32017IKB80XM007RMZ, IdeaPad 32017IKB80XM0090GE, IdeaPad 32017IKB80XM0094GE, IdeaPad 32017IKB80XM00CJGE, IdeaPad 32017IKB80XM00CRGE, IdeaPad 32017IKB80XM00F1GE, IdeaPad 32017IKB80XM00JMGE, IdeaPad 32017IKB80XM00K9GE, IdeaPad 32017IKB81BJ, IdeaPad 32017IKB81BJ0007GE, IdeaPad 32017IKB81BJ000BGE, IdeaPad 32017IKB81BJ0016MZ, IdeaPad 32017IKB81BJ001TGE, IdeaPad 32017IKB81BJ002SGE, IdeaPad 32017IKB81BJ002TGE, IdeaPad 32017IKB81BJ0033MZ, IdeaPad 32017IKB81BJ0057GE, IdeaPad 32017IKB81BJ0059GE, IdeaPad 32017IKB81BJ005AMZ, Ideapad 32017ISK, IDEAPAD 320S, IdeaPad 320S-13IKB, IdeaPad 320S-13IKB(81AK), LENOVO [IdeaPad 320S-13IKB\(81AK0036GE\)](#) Laptop Battery, IdeaPad 320S-13IKB(81AK0037GE), IdeaPad 320S-13IKB(81AK0038GE), IdeaPad 320S-13IKB(81AK0039GE), IdeaPad 320S-13IKB(81AK003AGE), IdeaPad 320S-13IKB(81AK0090GE), IdeaPad 320S-13IKBR, Ideapad 320S-14, IdeaPad 320s-14IKB, IDEAPAD 320S-14IKB 80X4, IdeaPad 320S-14IKB(80X4), IdeaPad 320S-14IKB(80X40055GE), IdeaPad 320S-14IKB(80X40057GE), IdeaPad 320S-14IKB(80X4005AGE), IdeaPad 320S-14IKB(80X400AFGE), IdeaPad 320S-14IKB(80X400AHGE), IdeaPad 320S-14IKB(80X400ARGE), IdeaPad 320S-14IKB(80X400D2GE), IdeaPad 320S-14IKB(80X400D3GE), IdeaPad 320S-14IKB(80X400J2GE), Ideapad 320S-14IKB-80X40056GE, Ideapad 320S-14IKB-80X400HMSP, IdeaPad 320S-14IKBR, Ideapad 320S-15, IdeaPad 320S-15ABR, IdeaPad 320S-15ABR80YA, IdeaPad 320S-15AST, IdeaPad 320S-15AST80YB, Ideapad 320S-15IKB, IdeaPad 320S-15IKB80X5/81BQ, IdeaPad 320S-15IKB80X5002AMX, IdeaPad 320S-15IKB80X5004GGE, IdeaPad 320S-15IKBR81BQ002UGE, IdeaPad 320S13IKB, IdeaPad 320S13IKB(81AK), IdeaPad 320S13IKB(81AK0036GE), IdeaPad 320S13IKB(81AK0037GE), IdeaPad 320S13IKB(81AK0038GE), IdeaPad 320S13IKB(81AK0039GE), IdeaPad 320S13IKB(81AK003AGE), IdeaPad 320S13IKB(81AK0090GE), IdeaPad 320S13IKBR, Ideapad 320S14, IdeaPad 320s14IKB, IdeaPad 320S14IKB(80X4), IdeaPad 320S14IKB(80X40055GE), IdeaPad 320S14IKB(80X40057GE), IdeaPad 320S14IKB(80X4005AGE), IdeaPad 320S14IKB(80X400AFGE), LENOVO [IdeaPad 320S14IKB\(80X400AHGE\)](#) Laptop Battery, IdeaPad 320S14IKB(80X400ARGE), IdeaPad

320S14IKB(80X400D2GE), IdeaPad 320S14IKB(80X400D3GE), IdeaPad 320S14IKB(80X400J2GE), Ideapad 320S14IKB80X40056GE, IDEAPAD 330 15ARR, Ideapad 330-14IKB, Ideapad 330-15, IdeaPad 330-15ARR, LENOVO [IdeaPad 330-15ICH](#) Laptop Battery, Ideapad 330-15ICH81FK, Ideapad 330-15ICH81FK0040GE, Ideapad 330-15ICH81FK0041GE, Ideapad 330-15ICH81FK00AEGE, Ideapad 330-15IKB, Ideapad 330-15IKB (81DE00JEPH), IDEAPAD 330S, IdeaPad 330S 14, IDEAPAD 330S 14-IKB, IdeaPad 330S-14IKB, IdeaPad 330S-14IKB(81F4), IdeaPad 330S-14IKB(81F400C2GE), IdeaPad 330S-14IKB(81F400C5GE), IdeaPad 330S-14IKB(81F400C6GE), IdeaPad 330S-14IKB(81F400C7GE), IdeaPad 330S-14IKB(81F400CGGE), IdeaPad 330S-14IKB(81F400R4GE), IdeaPad 330S-14IKB(81F400R5GE), IdeaPad 330S-15IKB, Ideapad 330S-15IKB (81F5001TPH), Ideapad 330S-15IKB (81F50044MX), IdeaPad 330S-15IKB (81F5004EUS), Ideapad 330S-15IKB (81F500A8IN), IdeaPad 330S-15IKB (81F500B-MHH), IdeaPad 330S-15IKB (81F500C0MH), IdeaPad 330S-15IKB (81F500GRHV), IdeaPad 330s-15IKB (81F500MYHH), Ideapad 330S-15IKB (81F500P7MB), IdeaPad 330S-15IKB (81F500TPUS), IdeaPad 330s-15IKB (81F5010VHH), IdeaPad 330s-15IKB (81F5010XMH), LENOVO [IdeaPad 330S-15IKB \(81F50148MJ\)](#) Laptop Battery, IdeaPad 330s-15IKB-339, IdeaPad 330S-15IKB-929, IdeaPad 3749, IdeaPad 500, ideapad 500-15isk, Ideapad 510 151SK 80SR, IdeaPad 510-15ISK, Ideapad 510-15ISK-ISE, IdeaPad 51015ISK, Ideapad 51015ISKISE, Ideapad 510S, IDEAPAD 510S -141SK, IdeaPad 510S-13IKB, Ideapad 510S-14, IDEAPAD 510S-141SK, Ideapad 510S-14ISK, LENOVO [IdeaPad 510S14](#) Laptop Battery, IDEAPAD 510S141SK, Ideapad 510S14ISK, Ideapad 520, IdeaPad 520s, IDEAPAD 520S-14IKB, IdeaPad 520s-14IKB-80X2, IdeaPad 520s-14IKB-80X2006BGE, IdeaPad 520s-14IKB-80X2006DGE, IdeaPad 520s-14IKB-80X2006FGE, IdeaPad 520s-14IKB-80X200BJGE, IdeaPad 520s-14IKB-80X200EUGE, IdeaPad 520s-14IKB-81BL, IdeaPad 520s-14IKB-81BL009JGE, IdeaPad 520s-14IKB-81BL009KGE, Ideapad 520S-14IKBR, IDEAPAD 530S 14IKB, IdeaPad 530s-14IKB, Ideapad 530S-15IKB, IdeaPad 530S-15IKB 81EV, IdeaPad 530S-15IKB 81EV0039GE, IdeaPad 530S-15IKB 81EV003AGE, IdeaPad 530S-15IKB 81EV003BGE, IdeaPad 530S-15IKB 81EV003KGE, LENOVO [ideapad 700](#) Laptop Battery, IdeaPad 700-15, IdeaPad 700-15ISK, IdeaPad 700-15ISK(80RU), IdeaPad 700-15ISK(80RU0008GE), IdeaPad 700-15ISK(80RU0009GE), IdeaPad 700-15ISK(80RU005NGE), LENOVO [IdeaPad 700-15ISK\(80RU005PGE\)](#) Laptop Battery, LENOVO [IdeaPad 700-15ISK\(80RU005QGE\)](#) Laptop Battery, IdeaPad 700-15ISK(80RU0091GE), IdeaPad 700-15ISK(80RU00DJGE), IdeaPad 700-15ISK(80RU00DKGE), IdeaPad 700-15ISK(80RU00L0GE), IdeaPad 700-15ISK(80RU00L1GE), IdeaPad 700-15ISK(80RU00L2GE), IdeaPad 700-15ISK(80RU00Q5GE), IdeaPad 700-15ISK-80RU008PMH, Ideapad 700-15ISK-80RU00L2GE, Ideapad 700-15ISK-80RU00VPSP, IdeaPad 700-15ISK80RU, IdeaPad 700-15ISK80RU0008GE, IdeaPad 700-15ISK80RU0009GE, IdeaPad 700-15ISK80RU005NGE, IdeaPad 700-15ISK80RU005PGE, IdeaPad 700-15ISK80RU005QGE, IdeaPad 700-15ISK80RU0091GE, IdeaPad 700-15ISK80RU00DJGE, IdeaPad 700-15ISK80RU00DKGE, IdeaPad 700-15ISK80RU00L0GE, IdeaPad 700-15ISK80RU00L1GE, IdeaPad 700-15ISK80RU00L2GE, IdeaPad 700-15ISK80RU00Q5GE, IdeaPad 700-17ISK, IdeaPad 700-17ISK(80RU005PGE), IdeaPad 700-17ISK(80RV), IdeaPad 700-17ISK(80RV000XGE), IdeaPad 700-17ISK(80RV000YGE), IdeaPad 700-17ISK(80RV001KGE), IdeaPad 700-17ISK(80RV0030GE), IdeaPad 700-17ISK(80RV0031GE), IdeaPad 700-17ISK(80RV0032GE), IdeaPad 700-17ISK(80RV0033GE), IdeaPad 700-17ISK(80RV0070GE), IdeaPad 700-17ISK(80RV0071GE), IdeaPad 700-17ISK(80RV00A4GE), IdeaPad 700-17ISK80RU005PGE, IdeaPad 700-17ISK80RV, IdeaPad 700-17ISK80RV000XGE, IdeaPad 700-17ISK80RV000YGE, IdeaPad 700-17ISK80RV001KGE, IdeaPad 700-17ISK80RV0030GE, IdeaPad 700-17ISK80RV0031GE, IdeaPad 700-17ISK80RV0032GE, IdeaPad 700-17ISK80RV0033GE, IdeaPad 700-17ISK80RV0070GE, LENOVO [IdeaPad 700-17ISK80RV0071GE](#) Laptop Battery, IdeaPad

700-17ISK80RV00A4GE, LENOVO [ideapad 700S](#) Laptop Battery, IdeaPad 700S-14ISK, IdeaPad 700S-14ISK-6Y30, IdeaPad 710S, IdeaPad 710S 13IKB, Ideapad 710S Plus, Ideapad 710S-13ISK, IdeaPad 710S-13ISK-IFI, IdeaPad 710S-13ISK-ISE, IdeaPad 710S-13ISK-ITH, IdeaPad 720, IdeaPad 720-15IKB, IdeaPad 720-15IKB 81AG/81C7 Serie, IdeaPad 720-15IKB 81AG0024GE, IdeaPad 720-15IKB 81AG0037GE, IdeaPad 720-15IKB 81AG0038GE, IdeaPad 720-15IKB 81AG0039GE, IdeaPad 720-15IKB 81AG003BGE, IdeaPad 720-15IKB 81AG003CGE, IdeaPad 720-15IKB 81AG003DGE, IdeaPad 720-15IKB 81AG004PGE, IdeaPad 720-15IKB 81C7001TPB, IdeaPad 720-15IKB 81C70021MZ, IdeaPad 720-15IKB 81C7003GGE, Ideapad 720-81C70002RK, IdeaPad 720s, IDEAPAD 720S 13IKB 81BV, Ideapad 720s Touch-13ikb, Ideapad 720s Touch-15ikb, IdeaPad 720S-13, Ideapad 720s-13 81a8, Ideapad 720S-13ARR, IdeaPad 720S-13ARR81BR, LENOVO [IdeaPad 720S-13ARR81BR000VGE](#) Laptop Battery, IdeaPad 720S-13ARR81BR000WGE, IdeaPad 720S-13ARR81BR000XGE, IdeaPad 720S-13ARR81BR002HGE, Ideapad 720S-13IKB, IdeaPad 720s-13IKB81A8, IdeaPad 720s-13IKB81A80070GE, IdeaPad 720s-13IKB81A80092GE, IdeaPad 720s-13IKB81A80093GE, IdeaPad 720s-13IKB81A80094GE, IdeaPad 720s-13IKB81BV002NCD, IdeaPad 720s-13IKB81BV002PCD, IdeaPad 720s-13IKB81BV0054GE, IdeaPad 720s-13IKB81BV0067CD, IdeaPad 720S-13IKBR, IdeaPad 720S-13IKBR81BV, IdeaPad 720S-13IKBR81BV0055GE, IdeaPad 720S-13IKBR81BV0056GE, IdeaPad 720S-13IKBR81BV0057GE, IdeaPad 720S-13IKBR81BV0058GE, IdeaPad 720S-13IKBR81BV0059GE, IdeaPad 720S-13IKBR81BV005AGE, IdeaPad 720S-14, IdeaPad 720s-14IKB, IdeaPad 720s-14IKB80XC0003US, IdeaPad 720s-14IKB80XC0004US, IdeaPad 720s-14IKB80XC001GKR, IdeaPad 720s-14IKB80XC001PTA, IdeaPad 720s-14IKB80XC001WTW, IdeaPad 720s-14IKB80XC004NGE, IdeaPad 720s-14IKB80XC004PGE, IdeaPad 720s-14IKB80XC004QGE, IdeaPad 720s-14IKB80XC81BD, IdeaPad 720s-14IKB81BD003HGE, IdeaPad 720s-14IKB81BD004AGE, IdeaPad 720S-15, Ideapad 720s-15 81ac, Ideapad 720s-15 81cr, IdeaPad 720S-15IKB, IdeaPad 720S-15IKB81AC, IdeaPad 720S-15IKB81AC001AGE, IdeaPad 720S-15IKB81AC002XGE, IdeaPad 730S-13IWL, Ideapad 80NT, IdeaPad 80QH00BCUS, Ideapad A10 Series, LENOVO [IdeaPad B40](#) Laptop Battery, IdeaPad B40 Series, IdeaPad B40-30, IdeaPad B40-30 Series, IdeaPad B40-45, IdeaPad B40-45 Series, IdeaPad B40-70, IdeaPad B40-70 Series, IdeaPad B460, IdeaPad B470 Series, IdeaPad B470A Series, IdeaPad B470G Series, IdeaPad B480 Series, IdeaPad B485 Series, IdeaPad B490 Series, IdeaPad B50, IdeaPad B50 Series, IdeaPad B50-30, IdeaPad B50-30 Series, IdeaPad B50-30 Touch, IdeaPad B50-30 Touch Series, IdeaPad B50-45, IdeaPad B50-45 Series, IdeaPad B50-50, IdeaPad B50-70, IdeaPad B50-70 Series, IdeaPad B560 Series, IdeaPad B570 Series, IdeaPad B570A Series, IdeaPad B570G Series, IdeaPad B580 Series, IdeaPad B585 Series, IdeaPad B590 Series, IdeaPad C340 15, IdeaPad C340-14API, IdeaPad C340-14IWL, Ideapad C340-15IWL, IdeaPad D330, IdeaPad D330-10IGM, IdeaPad D330-10IGM81H3, IdeaPad D330-10IGM81H3001TGE, IdeaPad E23, IdeaPad Flex 10, IdeaPad Flex 10s, IdeaPad Flex 14, IdeaPad Flex 14 Series, IdeaPad Flex 14M 15 15M, IdeaPad Flex 14M Series, IDEAPAD FLEX 15, IdeaPad Flex 15 Series, IdeaPad Flex 15D, IdeaPad Flex 15M Series, IDEAPAD FLEX 2 PRO-15, IdeaPad Flex 3 14, IdeaPad Flex 3 14 14.0, IdeaPad Flex 3 15 15.6, IdeaPad Flex 3-1470, IdeaPad Flex 3-1480, IdeaPad Flex 3-1570, IdeaPad Flex 3-1580, IdeaPad Flex 4-1130, Ideapad Flex 4-1470, Ideapad Flex 4-1480, Ideapad Flex 4-1570, IdeaPad Flex3-14-ALEI, IdeaPad Flex3-14-IFI, IdeaPad Flex3-14-ISE, Ideapad FLEX4-1480, Ideapad FLEX41480, IdeaPad G230, IdeaPad G400s, IdeaPad G400s Series, IdeaPad G400s Touch, IdeaPad G400s Touch Series, IdeaPad G405s, IdeaPad G405s Series, IdeaPad G405s Touch, IdeaPad G405s Touch Series, IdeaPad G410s, IdeaPad G410s Series, IdeaPad G410s Touch, IdeaPad G410s Touch Series, IdeaPad G430 20003, IdeaPad G430 Series, IdeaPad G460, IdeaPad G460 0677, IdeaPad G460 20041, IdeaPad G460 Series, IdeaPad G460A Series, IdeaPad G460E Series, IdeaPad G460G Series, IdeaPad G460L Series,

IdeaPad G465 Series, IdeaPad G465A Series, IdeaPad G470 Series, IdeaPad G470A Series, LENOVO [IdeaPad G470AH Series](#) Laptop Battery, IdeaPad G470G Series, IdeaPad G475 Series, IdeaPad G475A Series, IdeaPad G475E Series, IdeaPad G475G Series, IdeaPad G475L Series, IdeaPad G480 2184-3NU, IdeaPad G480 2688-2NU, IdeaPad G480 2814, IdeaPad G480 Series, IdeaPad G485 Series, IDEAPAD G50-30, LENOVO [IDEAPAD G50-45](#) Laptop Battery, IDEAPAD G50-70, IDEAPAD G50-70A, IDEAPAD G50-70M, IDEAPAD G50-75, IDEAPAD G50-80, LENOVO [IdeaPad G500s](#) Laptop Battery, IdeaPad G500s Series, IdeaPad G500s Touch, IdeaPad G500s Touch Series, IdeaPad G505s, IdeaPad G505s Series, IDEAPAD G505S TOUCH, IdeaPad G505s Touch Series, IdeaPad G510s, IdeaPad G510s Series, IDEAPAD G510S TOUCH, IdeaPad G510s Touch Series, IdeaPad G550S, IdeaPad G560, IdeaPad G560 0679, IdeaPad G560 Series, IdeaPad G560A Series, IdeaPad G560E Series, IdeaPad G560G Series, IdeaPad G560L Series, IdeaPad G565 Series, IdeaPad G565A Series, IdeaPad G565G Series, IdeaPad G565L Series, IdeaPad G570 Series, IdeaPad G570A Series, IdeaPad G570AH Series, IdeaPad G570E Series, LENOVO [IdeaPad G570G Series](#) Laptop Battery, IdeaPad G575 Series, IdeaPad G575A Series, IdeaPad G575E Series, IdeaPad G575G Series, IdeaPad G575L Series, IdeaPad G575M Series, IdeaPad G580 2189-88U, IdeaPad G580 2189-8CU, IdeaPad G580 2689-38U, IdeaPad G580 2819, IdeaPad G580 Series, IdeaPad G585 Series, IdeaPad K1 Tablet PC, Ideapad L340 15 Gaming L340-15IRH, LENOVO [IdeaPad L340 17 Gaming](#) Laptop Battery, Ideapad L340 17 Gaming L340-17IRH, Ideapad L340 Gaming 15, Ideapad L340 Gaming 17, IdeaPad L340-15, IdeaPad L340-15API, IdeaPad L340-15API 81LW000UGE, IdeaPad L340-15API 81LW000VGE, IdeaPad L340-15API 81LW00B6GE, Ideapad L340-15IRH Gaming, LENOVO [IDEAPAD L340-15IWL](#) Laptop Battery, IdeaPad L340-15IWL 81LG, IdeaPad L340-15IWL 81LG001TGE, IdeaPad L340-15IWL 81LG001UGE, IdeaPad L340-15IWL 81LG0052GE, IdeaPad L340-15IWL 81LG005EGE, IdeaPad L340-15IWL 81LG005FGE, IdeaPad L340-15IWL 81LG005HGE, Ideapad L340-17 Gaming, IdeaPad L340-17API, Ideapad L340-17IRH, Ideapad L340-17IRH 81LL001YGE, Ideapad L340-17IRH Gaming, IdeaPad L340-17IWL, Ideapad M1IX 300-10IBY, IdeaPad M4400, IdeaPad M4400 Series, IdeaPad M4400A, IdeaPad M4400A Series, IdeaPad M4450, IdeaPad M4450 Series, IdeaPad M4450A, IdeaPad M4450A Series, IdeaPad Miix 10 Tablet, IdeaPad Miix 320-10ICR80XF, IdeaPad Miix 320-10ICR80XF000YGE, IdeaPad Miix 320-10ICR80XF0019GE, IdeaPad Miix 320-10ICR80XF0019MZ, IdeaPad Miix 320-10ICR80XF001DGE, IdeaPad Miix 320-10ICR80XF001HMZ, IdeaPad Miix 320-10ICR80XF001VGE, IdeaPad Miix 320-10ICR80XF002HGE, LENOVO [IdeaPad Miix 320-10ICR80XF002HMZ](#) Laptop Battery, IdeaPad Miix 320-10ICR80XF002MGE, IdeaPad Miix 320-10ICR80XF002MMZ, IdeaPad Miix 320-10ICR80XF002RGE, IdeaPad Miix 320-10ICR80XF002VGE, IdeaPad Miix 320-10ICR80XF002VMZ, IdeaPad Miix 320-10ICR80XF003SGE, IdeaPad Miix 320-10ICR80XF008DGE, IdeaPad Miix 320-10ICR80XF008QGE, IdeaPad Miix 320-10ICR80XF00BJMZ, IdeaPad Miix 320-10ICRB0757641BB, LENOVO [IdeaPad Miix 700-12ISK](#) Laptop Battery, IdeaPad Miix 700-12ISK, IdeaPad Miix 700-12ISK (80QL), LENOVO [IdeaPad Miix 700-12ISK \(80QL000CUS\)](#) Laptop Battery, IdeaPad Miix 700-12ISK (80QL0022GE), IdeaPad Miix 700-12ISK (80QL0029GE), IdeaPad Miix 700-12ISK (80QL002MGE), IdeaPad Miix 700-12ISK (80QL00BRGE), IdeaPad Miix 700-12ISK (80QL00BTGE), IdeaPad Miix 710-12IKB, IdeaPad Miix 710-12IKB 80W1, IdeaPad Miix 720, Ideapad Miix 720-12IKB, IdeaPad Miix 720-12IKB 80VV, IdeaPad Miix 720-12IKB 80VV002JGE, IdeaPad Miix 720-12IKB 80VV002NGE, IdeaPad Miix 720-12IKB 80VV002QGE, IdeaPad Miix 720-12IKB 80VV005WGE, IdeaPad N40, IdeaPad N40 Series, IdeaPad N40-30, IdeaPad N40-30 Series, IdeaPad N40-45, IdeaPad N40-45 Series, IdeaPad N40-70, IdeaPad N40-70 Series, IdeaPad N50, IdeaPad N50 Series, IdeaPad N50-30, IdeaPad N50-30 Series, LENOVO [IdeaPad N50-45](#) Laptop Battery, LENOVO [IdeaPad N50-45 Series](#) Laptop Battery, IdeaPad

N50-70, IdeaPad N50-70 Series, IdeaPad N580 Series, IdeaPad N581 Series, IdeaPad N585 Series, IdeaPad N586 Series, IdeaPad P500, IdeaPad P580 Series, IdeaPad P585 Series, IdeaPad S10, IdeaPad S10 20015, IdeaPad S10 4231, IdeaPad S10 Ser, IdeaPad S10 Series, IdeaPad S10-2, IdeaPad S10-2 20027, IdeaPad S10-2 2957, IdeaPad S10-2 Series, IdeaPad S10-2c, IdeaPad S10-3, IdeaPad S10-3 - 06474CU, IdeaPad S10-3 0647, LENOVO [IdeaPad S10-3 064735U](#) Laptop Battery, IdeaPad S10-3 064737U, IdeaPad S10-3 064738U, IdeaPad S10-3 064746U, IdeaPad S10-3 064752M, IdeaPad S10-3 064757M, IdeaPad S10-3 064759M, IdeaPad S10-3 0647EBV, IdeaPad S10-3 0647EFV, IdeaPad S10-3 20039, IdeaPad S10-3 59-045096, IdeaPad S10-3 M33D3UK, IdeaPad S10-3-06474CU, IdeaPad S10-3064757M, IdeaPad S10-30647EFV, IdeaPad S10-3A, IdeaPad S10-3c, IdeaPad S10-3M33D3UK, IdeaPad S10-3s, IdeaPad S10-3T, IdeaPad S10-3t 0651, IdeaPad S100, IdeaPad S10C, IdeaPad S10e, IdeaPad S10e 4068, IdeaPad S10e 4187, IdeaPad S10e Series, IdeaPad S10e4068, LENOVO [IdeaPad S110](#) Laptop Battery, IdeaPad S12, IdeaPad S12 20021, IdeaPad S12 2959, IdeaPad S12 Series, IdeaPad S20-30, IdeaPad S2007A, IdeaPad S2010 Tablet PC, IdeaPad S205, IdeaPad S205s, Ideapad S206, IdeaPad S210, IdeaPad S210 Series, IdeaPad S210 Touch, IdeaPad S210 Touch 20257, IdeaPad S210 Touch Series, IdeaPad S210touch, IdeaPad S210touch Series, IdeaPad S215, IdeaPad S215 Series, IdeaPad S215 Touch, IdeaPad S215 Touch Series, IdeaPad S215touch, LENOVO [IdeaPad S215touch Series](#) Laptop Battery, IdeaPad S300, IdeaPad S300-a, IdeaPad S300-bni, IdeaPad S300-MA14CGE, IdeaPad S310, IDEAPAD S340, IdeaPad S340-14API, Ideapad S340-14IWL, IdeaPad S340-15API, Ideapad S340-15IWL, IDEAPAD S340-15IWL Touch, IdeaPad S400, IdeaPad s400-ith, IdeaPad S400u, IdeaPad S405, IdeaPad S405-asi, IdeaPad S41-35, IdeaPad S41-70, LENOVO [IdeaPad S41-75](#) Laptop Battery, IdeaPad S410, IdeaPad S410p, IdeaPad S410p Series, IdeaPad S410p Touch, LENOVO [IdeaPad S410p Touch Series](#) Laptop Battery, IdeaPad S415, ideapad S415 touch, IDEAPAD S435, IdeaPad S500, IdeaPad S500 Series, IdeaPad S500 Touch Series, IdeaPad S510p, IdeaPad S510p Series, IdeaPad S510P TOUCH, IdeaPad S510p Touch 20299, IdeaPad S510p Touch Series, LENOVO [Ideapad S530](#) Laptop Battery, Ideapad S540, IdeaPad S540-14API, Ideapad S540-14IWL, IdeaPad S540-15IWL, IdeaPad S6000, IdeaPad S6000F, IdeaPad S6000H, IdeaPad S740-14IIL, IdeaPad S740-14IIL-81RT, IdeaPad S9, IdeaPad S9 Series, LENOVO [IdeaPad S940-14IWL](#) Laptop Battery, IdeaPad S9e, IdeaPad S9e 4187, IdeaPad S9e Series, IdeaPad Tablet K1, IdeaPad U 300, IdeaPad U110, IdeaPad U110 11306, IdeaPad U110 2304, IdeaPad U150, IdeaPad U150 SFO, LENOVO [IdeaPad U150 STW](#) Laptop Battery, IdeaPad U150-690968U(red), IdeaPad U150-690969U(black), IdeaPad U150-6909H9J, IdeaPad U150-6909HAJ, IdeaPad U150-6909HFJ, IdeaPad U150-6909HGJ, Ideapad U160, IdeaPad U160-08945LU, IdeaPad U160-08945MU, IdeaPad U165, IdeaPad U165-AON, IdeaPad U165-ATH, IdeaPad U260, IdeaPad U260 0876-32U, IdeaPad U260 0876-33U, IdeaPad U260 0876-34U, IdeaPad U260 0876-3AU, LENOVO [IdeaPad U260 0876-3BU](#) Laptop Battery, IdeaPad U260 0876-3CU, IdeaPad U260 0876-3DU, IdeaPad U310, IdeaPad U330, LENOVO [IdeaPad U330 20001](#) Laptop Battery, IdeaPad U330 2267, IdeaPad U330 Series, IdeaPad U330 Touch, IdeaPad U330A, IdeaPad U330p, IdeaPad U330t, IdeaPad U350, IdeaPad U350 20028, IdeaPad U350 2963, IdeaPad U350W, Ideapad U41-70, IdeaPad U410-IFI, IdeaPad U410-ISE, IdeaPad U410-ITH, Ideapad U430, IdeaPad U430 Touch, IdeaPad U450, IdeaPad U450p, IdeaPad U450P 20031, IdeaPad U450P 3389, IdeaPad U450P Series, IdeaPad U460, IdeaPad U470 Series, IdeaPad U510 MBM62GE, Ideapad U530, IdeaPad U530 Touch, Ideapad U530-20289, IdeaPad U550, IdeaPad U550 Series, IDEAPAD ULTRABOOK 510, Ideapad V110, Ideapad V110-15AST, Ideapad V110-15IAP, Ideapad V110-15ISK, Ideapad V11015AST, Ideapad V11015IAP, Ideapad V11015ISK, IdeaPad V310-14-15-ISK, LENOVO [IdeaPad V310-15ISK](#) Laptop Battery, IdeaPad V310-15ISK(80SY000WRK), IdeaPad V310-15ISK(80SY00E8PB), IdeaPad V310-15ISK(80SY00ERP), IdeaPad V310-15ISK(80SY00MRHV), IdeaPad V310-15ISK(80SY00R0PB), IdeaPad V310-15ISK(80SY00TWYA), IdeaPad

V310-15ISK(80SY00WXHV), IdeaPad V310-15ISK(80SY014YYA), IdeaPad V310-15ISK(80SY015FPB), LENOVO [IdeaPad V310-15ISK\(80SY02CFHH\)](#) Laptop Battery, IdeaPad V310-15ISK(80SY02FYBP), IdeaPad V310-15ISK(80SY02G0PB), IdeaPad V310-15ISK(80SY02G1PB), IdeaPad V310-15ISK(80SY02GLRA), IdeaPad V310-15ISK(80SY02H9US), IdeaPad V310-15ISK80SY000WRK, IdeaPad V310-15ISK80SY00E8PB, IdeaPad V310-15ISK80SY00ERP, IdeaPad V310-15ISK80SY00MRHV, IdeaPad V310-15ISK80SY00R0PB, IdeaPad V310-15ISK80SY00TWYA, IdeaPad V310-15ISK80SY00WXHV, IdeaPad V310-15ISK80SY014YYA, IdeaPad V310-15ISK80SY015FPB, IdeaPad V310-15ISK80SY02CFHH, LENOVO [IdeaPad V310-15ISK80SY02FYBP](#) Laptop Battery, IdeaPad V310-15ISK80SY02G0PB, IdeaPad V310-15ISK80SY02G1PB, IdeaPad V310-15ISK80SY02GLRA, LENOVO [IdeaPad V310-15ISK80SY02H9US](#) Laptop Battery, IdeaPad V3101415ISK, IdeaPad V31015ISK, IdeaPad V31015ISK(80SY000WRK), IdeaPad V31015ISK(80SY00E8PB), IdeaPad V31015ISK(80SY00ERP), IdeaPad V31015ISK(80SY00MRHV), IdeaPad V31015ISK(80SY00R0PB), IdeaPad V31015ISK(80SY00TWYA), IdeaPad V31015ISK(80SY00WXHV), IdeaPad V31015ISK(80SY014YYA), IdeaPad V31015ISK(80SY015FPB), IdeaPad V31015ISK(80SY02CFHH), IdeaPad V31015ISK(80SY02FYBP), IdeaPad V31015ISK(80SY02G0PB), IdeaPad V31015ISK(80SY02G1PB), IdeaPad V31015ISK(80SY02GLRA), IdeaPad V31015ISK(80SY02H9US), IdeaPad V350, IdeaPad V360 Series, IdeaPad V360A Series, IdeaPad V360G Series, IdeaPad V370 Series, IdeaPad V370A Series, IdeaPad V370G Series, IdeaPad V370P Series, Ideapad v430a, IdeaPad V4400, IdeaPad V4400 Series, IdeaPad V4400A, IdeaPad V4400A Series, IdeaPad V4400A Series Notebook, IdeaPad V450, Ideapad v450a, IdeaPad V460, IdeaPad V460A-IFI(A), IdeaPad V460A-IFI(H), IdeaPad V460A-IFI(T), IdeaPad V460A-IFIA, IdeaPad V460A-IFIH, IdeaPad V460A-IFIT, IdeaPad V460A-ISE, IdeaPad V460A-ITH, IdeaPad V460A-ITH(A), IdeaPad V460A-ITH(T), IdeaPad V460A-ITHA, IdeaPad V460A-ITHT, IdeaPad V460A-PSI(H), IdeaPad V460A-PSIH, IdeaPad V470 Series, IdeaPad V470A Series, IdeaPad V470G Series, IdeaPad V470P Series, IdeaPad V480 Series, IdeaPad V480C, LENOVO [IdeaPad V480c Series](#) Laptop Battery, IdeaPad V480S, IdeaPad V480s Series, IdeaPad V480U, IdeaPad V550, IdeaPad V570 Series, IdeaPad V570A Series, LENOVO [IdeaPad V570G Series](#) Laptop Battery, IdeaPad V570P Series, IdeaPad V580 Series, IdeaPad V580C, IdeaPad V580c Series, ideapad xiaoxin 700, Ideapad Y330, Ideapad Y330-20002, Ideapad Y330-2269, IdeaPad Y330A, IdeaPad Y330G, IdeaPad Y400, IdeaPad Y400N, IdeaPad Y400P, IdeaPad Y410, IdeaPad Y410N, IdeaPad Y410P, Ideapad Y430, Ideapad Y430 2005, Ideapad Y430 2781, Ideapad Y430 Series, IdeaPad Y430-278182U, IdeaPad Y430-278183U, IdeaPad Y430-278184U, IdeaPad Y430-278186U, IdeaPad Y430-278187U, LENOVO [IdeaPad Y430-278189U](#) Laptop Battery, Ideapad y430-3231u, Ideapad y430-5232, Ideapad y430-5232u, Ideapad y430-5242u, Ideapad Y430a, Ideapad Y430g, IdeaPad Y450, IdeaPad Y450 20020, IdeaPad Y450 4189, IdeaPad Y450A, IdeaPad Y450G, LENOVO [IdeaPad Y460AT-IFI](#) Laptop Battery, IdeaPad Y460AT-ITH, IdeaPad Y460AT-ITH, IdeaPad Y460C Series, IdeaPad Y460C Series, IdeaPad Y460D Series, IdeaPad Y460D Series, IdeaPad Y460G Series, IdeaPad Y460G Series, IdeaPad Y460N Series, IdeaPad Y460N Series, IdeaPad Y460P Series, LENOVO [IdeaPad Y460P Series](#) Laptop Battery, IdeaPad Y470 Series, IdeaPad Y470A Series, IdeaPad Y470D Series, IdeaPad Y470G Series, IdeaPad Y470M Series, IdeaPad Y470N Series, IdeaPad Y470P Series, IdeaPad Y480 Series, IdeaPad Y480A-ISE, IdeaPad Y480M-IFI, IdeaPad Y480N Series, IdeaPad Y480P, IdeaPad Y480P Series, IdeaPad Y485 Series, IdeaPad Y485N Series, IdeaPad Y485P Series, IdeaPad Y490, IdeaPad Y490N, IdeaPad Y490P, IdeaPad Y500, IdeaPad Y500N, IdeaPad Y500P, IdeaPad Y510, IdeaPad Y510 7758, IdeaPad Y510 Series, IdeaPad Y510N, IdeaPad Y510P, IdeaPad Y510PA, Ideapad Y520-15IKBN, Ideapad Y520-15IKBN-80WK00JQSP, IdeaPad Y530, IdeaPad Y530 20009, IdeaPad Y530 4051, IdeaPad Y530 Series, IdeaPad Y530A, IdeaPad Y550, IdeaPad Y550 4186, IdeaPad Y550A,

IdeaPad Y550P, LENOVO [IdeaPad Y550P 3241](#) Laptop Battery, IdeaPad Y560, IdeaPad Y560, IdeaPad Y560 Series, IdeaPad Y560 Series, IdeaPad Y560A Series, IdeaPad Y560A Series, IdeaPad Y560A-IFH, IdeaPad Y560A-IFH, IdeaPad Y560A-IFI, IdeaPad Y560A-IFI, LENOVO [IdeaPad Y560AT Series](#) Laptop Battery, IdeaPad Y560AT Series, IdeaPad Y560AT-IFI, IdeaPad Y560AT-ISE, IdeaPad Y560C Series, IdeaPad Y560D Series, IdeaPad Y560DT Series, IdeaPad Y560N Series, IdeaPad Y560P Series, IdeaPad Y570 Series, IdeaPad Y570A Series, IdeaPad Y570D Series, IdeaPad Y570M Series, IdeaPad Y570N Series, LENOVO [IdeaPad Y570NT Series](#) Laptop Battery, LENOVO [IdeaPad Y570P Series](#) Laptop Battery, IdeaPad Y580 Series, IdeaPad Y580A, IdeaPad Y580A Series, LENOVO [IdeaPad Y580M](#) Laptop Battery, IdeaPad Y580N, IdeaPad Y580N Series, IdeaPad Y580P, IdeaPad Y580P Series, IdeaPad Y590, IdeaPad Y590N, IdeaPad Y590P, IdeaPad Y650, IdeaPad Y650 4185, IdeaPad Y650 Series, IdeaPad Y650A, IdeaPad Y700, IdeaPad Y700-15-IFI, IdeaPad Y700-15ACZ, IdeaPad Y700-15ISK, IdeaPad Y700-ISE, IdeaPad Y70015ISK, IdeaPad Y710, LENOVO [IdeaPad Y710 4054](#) Laptop Battery, IdeaPad Y710 Series, IdeaPad Y730, IdeaPad Y730 4053, IdeaPad Y730 Series, IdeaPad Y730a, IdeaPad Y900, IdeaPad Y900 17ISK, IdeaPad Y900-17ISK- 80Q1006GRA, IdeaPad Y900-17ISK-80Q1000BGE, IdeaPad Y900-17ISK-80Q1004QGE, IdeaPad Y90017ISK 80Q1006GRA, IdeaPad Y90017ISK80Q1000BGE, IdeaPad Y90017ISK80Q1004QGE, IdeaPad Y910, IdeaPad Y910 17ISK, IdeaPad Yoga 11S Model 20246, IdeaPad Yoga 13, Ideapad Yoga 2 11, IdeaPad Yoga 2 Pro, Ideapad Yoga 2 Pro 13, IdeaPad Yoga 2 Pro 59394177, Ideapad Yoga 20332, Ideapad Yoga 20424, Ideapad Yoga 20428, Ideapad Yoga 2332, IdeaPad Yoga U300, IdeaPad Z360, IdeaPad Z360 - 091232U, IdeaPad Z360 - 091233U, IdeaPad Z360A-ITH, IdeaPad Z360A-PSI, IdeaPad Z370 Series, IdeaPad Z370A Series, IdeaPad Z370G Series, IdeaPad Z380 Series, IDEAPAD Z40, IdeaPad Z40-70, IDEAPAD Z40-75, LENOVO [Ideapad Z400A-IFI](#) Laptop Battery, Ideapad Z400A-ITH, IdeaPad Z460 Series, IdeaPad Z460A Series, IdeaPad Z460G Series, IdeaPad Z460M Series, IdeaPad Z465 Series, IdeaPad Z465A Series, IdeaPad Z465G Series, IdeaPad Z470 Series, IdeaPad Z470A Series, IdeaPad Z470AH Series, IdeaPad Z470G Series, IdeaPad Z480 Series, IdeaPad Z485 Series, IdeaPad Z50-70, IdeaPad Z50-75, Ideapad Z500A-IFI, IdeaPad Z501, Ideapad Z510, Ideapad Z510-IFI, Ideapad Z510-ISE, Ideapad Z510-ITH, Ideapad Z510A, IdeaPad Z560 Series, IdeaPad Z560A Series, IdeaPad Z560G Series, IdeaPad Z560M Series, LENOVO [IdeaPad Z565 Series](#) Laptop Battery, IdeaPad Z565A Series, IdeaPad Z565G Series, IdeaPad Z570 Series, IdeaPad Z570A Series, IdeaPad Z580 Series, IdeaPad Z585 Series, LENOVO [IdeaPad Z70](#) Laptop Battery, IDEAPAD Z70-70, IDEAPAD Z70-80, IdeaPad Z710, IdeaPad Z710 2050, IdeaPad Z710 Series, IdeaPad Z710-59381249, IDEAPAD-320-17AST, Ideapad510s-12, Ideapad510s-13, Ideapad510s-14isk IKB, IdeaPadS12 2959, IdeaPadU160-08945KU, IdeaPadU165-AON, IdeaTab A2109, IdeaTab A2109A, IdeaTab A2109A-F, IdeaTab A2109AF, IdeaTab A3000, IdeaTab A3000-H, LENOVO [IdeaTab A5000](#) Laptop Battery, IdeaTab B6000-F, IdeaTab B6000F, LENOVO [IdeaTab S6000](#) Laptop Battery, IdeaTab S600H, IY485 Series, K21-80, K21-80-IFI, K21-80-ISE, K21-80-ITH, K23 series, K2450, K2450-ISE, K26, K26 Series, K27, K29, K301W, K41, K41-70, K4170, K42, K43, K43-IFI 4GB/256GB, K43-IFI 8GB/256GB, K43-IFI 8GB/512GB, K43-ISE 8GB/512GB, K4350A, K43A, K43G Series, K4450, K46, K46A, K49, K49A Series, KB3073, KB3074, ke-8324-py, L08C3B21, L08M3B21, L08S3B21, L08S6C21, L12L3P53, L12L4E55, L12M4E55, LENOVO [L12M6Z53](#) Laptop Battery, L12S4E55, L13L4A01, L13M4A01, L13S4A01, L14S4PB0, LENOVO [L15C3PB1](#) Laptop Battery, L16S4TB0, L17C2PB5, L17L2PB6, L17M2PB6, L3000 G230 Series, L3000 Series, L340, L340 SP/B, L510, L560, LENOVO [L560-7CD](#) Laptop Battery, L560-ACD, L60SA, L800, L800 Series, LB121000713-A00-088I-C-OOKO, LB121000718-A00-08BA-S-004J, Ideapad 300s, LDEAPAD S400, Ideapad S41-70, LdeaPad Y580, Legion Y520 15IKBN, Legion Y520-15IKBA, Legion Y520-15IKBA(80WY), Legion Y520-15IKBA(80WY000CGE), Legion Y520-15IKBA(80WY000DGE), Legion Y520-15IKBA(80WY000EGE), Legion

Y520-15IKBA(80WY000FGE), Legion Y520-15IKBA(80WY001UGE), Legion Y520-15IKBA(80WY001VGE), Legion Y520-15IKBA(80WY002AGE), Legion Y520-15IKBA(80WY002BGE), Legion Y520-15IKBM, Legion Y520-15IKBM(80WK01DWGE), Legion Y520-15IKBM(80YY), LENOVO [Legion Y520-15IKBM\(80YY001UGE\)](#) Laptop Battery, Legion Y520-15IKBM(80YY003UGE), Legion Y520-15IKBN, Legion Y520-15IKBN(80WK), Legion Y520-15IKBN(80WK0041GE), Legion Y520-15IKBN(80WK0042GE), Legion Y520-15IKBN(80WK004RGE), Legion Y520-15IKBN(80WK004VGE), Legion Y520-15IKBN(80WK004WGE), Legion Y520-15IKBN(80WK004XGE), Legion Y520-15IKBN(80WK008QMZ), Legion Y520-15IKBN(80WK00D3MZ), Legion Y520-15IKBN(80WK00F7GE), Legion Y520-15IKBN(80WK00LGGE), Legion Y520-15IKBN(80WK00LHGE), Legion Y520-15IKBN(80WK00LJGE), Legion Y520-15IKBN(80WK00LKGE), Legion Y520-15IKBN(80WK00LLGE), Legion Y520-15IKBN(80WK00LMGE), Legion Y520-15IKBN(80WK00LQGE), Legion Y520-15IKBN(80WK00PCGE), Legion Y520-15IKBN(80WK00PDGE), Legion Y520-15IKBN(80WK00T5GE), Legion Y520-15IKBN(80WK00T6GE), Legion Y520-15IKBN(80WK00XNGE), Legion Y520-15IKBN(80WK00XPGE), Legion Y520-15IKBN(80WK012MGE), Legion Y520-15IKBN(80WK01DWGE), Legion Y520-15IKBN(80WK01DXGE), Legion Y520-15IKBN(80WK01DYGE), Legion Y520-15IKBN(80WK01E0MZ), Legion Y520-15IKBN(80WK01EEGE), LENOVO [Legion Y520-15IKBN\(80YY\)](#) Laptop Battery, Legion Y520-15IKBN(80YY001UGE), Legion Y520-15IKBN(80YY001VGE), Legion Y520-15IKBN(80YY003UGE), Legion Y520-15IKBN(80YY008XGE), Legion Y520-15ikm, Legion Y530, Legion Y530 15, Legion Y530 15-ICH, Legion Y530-15ICH, Legion Y530-15ICH(81FV), Legion Y530-15ICH(81FV008NGE), Legion Y530-15ICH(81FV008PGE), Legion Y530-15ICH(81FV008RGE), Legion Y530-15ICH(81FV008SGE), Legion Y530-15ICH(81FV008TGE), Legion Y530-15ICH(81FV00E7MZ), Legion Y530-15ICH(81FV00E8MZ), Legion Y530-15ICH(81FV00G4GE), Legion Y530-15ICH(81FV00G5GE), Legion Y530-15ICH(81FV00G6GE), Legion Y530-15ICH(81FV00KTGE), Legion Y530-15ICH(81FV00KYGE), Legion Y530-15ICH(81FV00L0GE), Legion Y530-15ICH(81FV00QMGE), Legion Y530-15ICH(81FV00U5GE), Legion Y530-15ICH(81FV00WFGE), Legion Y530-15ICH(81LB001DMZ), Legion Y530-15ICH(81LB001QGE), Legion Y530-15ICH(81LB001RGE), LENOVO [Legion Y530-15ICH\(81LB0033GE\)](#) Laptop Battery, Legion Y530-15ICH(81LB007HGE), Legion Y7000, Legion Y7000P-1060, Legion Y720, Legion Y730, Legion Y730-15, Legion Y730-15ICH, Legion Y730-15ICH81HD, Legion Y730-15ICH81HD003EMZ, Legion Y730-15ICHg, Legion Y730-17, Legion Y730-17ICH, Legion Y730-17ICH(81HG), Legion Y730-17ICH(81HG001KGE), Legion Y730-17ICH(81HG0020GE), LENOVO [Legion Y730-17ICH\(81HG0022GE\)](#) Laptop Battery, Legion Y730-17ICHg, Legion Y73017, Legion Y73017ICH, LENOVO [Legion Y740](#) Laptop Battery, Legion Y740 17, Legion Y740-15, Legion Y740-15ICH, Legion Y740-15ICHg, Legion Y740-17ICH, Legion Y740-17ICH(81HH0012GE), Legion Y740-17ICH(81HH002BGE), Legion Y740-17ICH(81HH002CGE), Legion Y740-17ICHG, LEGION Y9000X, Lenoov IdeaTab PC, LENOVO 10-inch, Lenovo 125, Lenovo 125C, Lenovo 210, Lenovo 410, LENOVO B465 Series(All), LENOVO B465A Series, LENOVO B465c Series, LENOVO B465G Series, Lenovo E280, Lenovo E290, Lenovo E660, Lenovo Eraser B40, Lenovo F30, Lenovo G40 - 80E400QRCF, Lenovo G40 - 80E400QSCF, Lenovo G40 - 80E400R0CF, Lenovo G50-80 - 80E501J0CF, Lenovo G50-80 - 80E501JDCF, Lenovo G50-80 - 80E502XLCF, Lenovo G50-80 - 80E502XNCF, Lenovo G50-80 - 80E502XQCF, Lenovo G50-80 - 80E502XRCF, Lenovo G50-80 -

80E502XVCF, LENOVO IBM Tablet 2, LENOVO Idea Pad S10-3 064752M, LENOVO [Lenovo IdeaPad 320-15IKBRN 81BG001KGE](#) Laptop Battery, Lenovo IdeaPad 32015IKBRN 81BG001KGE, LENOVO IdeaPad G400s Series, Lenovo Ideapad S9 S10, Lenovo Ideapad S9 S10 UMPC, Lenovo Ideapad S9e S10e, LENOVO IDEAPAD SERIES, LENOVO PAD 7.0 inch Tablet PC, LENOVO S510p Touch Series, Lenovo Think Pad 13 (20GJS02500), LENOVO ThinkPad Edge E31, Lenovo ThinkPad S2 20GKS06300, LENOVO Y SERIES, Lenovo Y50-70 59424711, Lenovo Y70, Lenovo Yoga 3 11 80J8, LENOVO YOGA Tablet, Lenovo Z40, Lenovo Z50, LO8321L7, LO8C3B21, LO8S3B21, LT20, LU-20, LU20-56NA, M/T 3701, M10, M12, M13, M30 Series, M30-70, M30-70 80H8, M40 Series, M40-70, M41-70, M41-80, M41-80-IFI, M41-80-ISE, M4400, M4400 Series, M4400A, M4400A Series, M4450, M4450 Series, M4450A, M4450A Series, M4500, M480, M490, M490-IFI, LENOVO [M490s](#) Laptop Battery, M495, M495 SERIES, LENOVO [M580](#) Laptop Battery, M595, M9, MIIX 2 10, Miix 2 11, Miix 2 8, MIIX 211-TAB, Miix 3, Miix 3 1030, Miix 3-1030, MIIX 300-10IBY, MIIX 310, MIIX 310 10ICR, Miix 310-10ICR, Miix 310-10ICR (80SG000HMH), Miix 310-10ICR (80SG001CSP), MIIX 310-10ICR (80SG005QHH), MIIX 310-10ICR (80SG005SPB), Miix 310-10ICR (80SG006FUK), LENOVO [Miix 310-10ICR \(80SG00A9RK\)](#) Laptop Battery, Miix 310-10ICR 80SG, MIIX 320-10ICR, Miix 325-10ICR, Miix 330, MIIX 4, Miix 4-6Y30, MIIX 4-6Y54, Miix 4-6Y75, Miix 510, Miix 510-12IKB, Miix 510-12IKB-80XE0006SP, MIIX 510-12ISK, Miix 51012IKB, LENOVO [Miix 51012IKB80XE0006SP](#) Laptop Battery, Miix 520, Miix 520-12IKB, Miix 520-12IKB 20M3000LGE, Miix 52012IKB, Miix 52012IKB 20M3000LGE, MIIX 700, Miix 700 121AK 80QL, MIIX 700-12ISK, Miix 720, LENOVO [MIIX 720-IKB](#) Laptop Battery, MIIX-2 11 Inch, MIIX2 10 Inch, Miix2 10-ZTH, MIIX2 11 Inch, Miix2 11-ITH, Miix2 11ITH, Miix2 8 inch tablet, LENOVO [Miix2- 8 inch tablet](#) Laptop Battery, Miix3-830, Miix5 pro, Miix5 Proi5-7200U8GB256GB, Miix5 Proi7-7500U16GB1TB, Miix5 Proi7-7500U8GB512GB, Miix5i34G128G, Miix5i58G256G, Miix5i78G512G, MIIX5Pro, MIIX700-12ISKBK6Y304G12, MIX 700 121SK, MP07N07Q, MP10914L, MP1BW7FS, MP1CPCUL, MPNXB6C160BX, N10, N203, N21 Chromebook, N22 Chromebook, N23 Yoga, N23 YOGA CHROMEBOOK, N23 Yoga Ruggedized ZA260044NL, N40 Series, N40-30, N40-30 Series, N40-45, N40-45 Series, N40-70, N40-70 Series, N50-30, N50-30 Series, N50-45, N50-45 Series, N50-70, N50-70 Series, N580, N580 Series, N581 Series, LENOVO [N585 Series](#) Laptop Battery, N586 Series, P400 TOUCH, P500 TOUCH, P510, P52s, P580 Series, P585 Series, PAD A1, LENOVO [PAD A1-07](#) Laptop Battery, Pad B6000 TABLET SERIES, PAD Y1011 S1, PB1-750N, PB2-650Y, Pb2-670n, Pendo, PHAB 2 PLUS, Phab 2 Pro, Portable Tablet Computer 60046, R3069P28, R400, R480, R50 1831, R50 1832, R50 1833, R50 1836, R50 1840, R50 1841, R50 2883, R50 2887, R50 2888, R50 2889, R50 2894, R50 2895, R50 Series, R50-1829, R50-1830, R500, R500 Series, R50E, LENOVO [R50E 2670](#) Laptop Battery, R50E-1834, R50E-1842, R50e-1844, R50e-1845, R50e-1846, R50e-1847, R50e-1848, R50e-1849, R50e-1850, R50e-1858, R50e-1859, R50e-1860, R50e-1862, R50e-1863, R50e-1870, R50P, R50p 1829, R50p 1830, R50p 1831, LENOVO [R50p 1832](#) Laptop Battery, R50p 1833, R50p 1840, R50p 1841, R50p 2883, R50p 2887, R50p 2888, R50p 2889, R50p 2894, R50p 2895, R50p1836, R51 1829, R51 1832, R51 1833, R51 1840, R51 1841, R51 2894, R51 2895, R51 Series, R51-1830, LENOVO [R51-1831](#) Laptop Battery, R51-1836, R51-2883, R51-2887, R51-2888, R51-2889, R51E 1843, R51e 1844, R51e-1834, R51e-1842, R51e-1845, R51e-1846, R51e-1847, R51e-1848, R51e-1849, R51e-1850, R51e-1858, R51e-1859, R51e-1860, R51e-1861, LENOVO [R51e-1862](#) Laptop Battery, R51e-1863, R51e-1870, R52 1843, R52 1844, R52 1845, R52 1850, R52 1854, R52 1862, R52 1863, R52 1870, R52 Series, R52-1846, R52-1847, R52-1848, R52-1849, R52-1858, R52-1859, R52-1860, R52-1861, R60 Series, R61, R720, R720-15IKB, R720-15IKBi7 7300HQ/8GB/1TB/2G, R720-15IKBi7 7700HQ/8GB/1TB/2G, R720-15IKBN, R72015IKB, R720i5-7300HQ/8GB/1TB 128GB/4G, R720i5/8G/1T 128G/GTX1050Ti 2G, R720i5/8G/1T 128G/GTX1050Ti/4G, LENOVO [R720i5/8G/1T](#)

[128G/GTX1060 6G](#) Laptop Battery, R720i5/8G/1T 256G/GTX1050Ti 4G, R720i5/8G/1T/2G, R720i5/8G/1T/GTX1050Ti 2G, R720i7 7700HQ/8GB/1TB/2G, R720i7-7700HQ/8GB/1TB 128GB/4G, R720i7/8G/1T 128G/GTX1050Ti 4G, R720i7/8G/1T 128G/GTX1060 6G, R720i7/8G/1T 256G/GTX1050Ti 2G, R720i7/8G/1T 256G/GTX1050Ti 4G, R720i7/8G/1T/2G, R9-EXKMB, Rescuer 14-ISK-I5, Rescuer 15-ISK-I7, Rescuer 15ISK, S10, S10 11G3G, s10 e, S10C, S12, S160, S180, S20-30 Netbook, S20-30 Touch Laptop Type 20434, S200, S2007A, S2007A-D, S2010, S206, S21e-20, S21e-20-N2940, S230U, S300-BNI, S300-ITH, S320u, S400-IFI, S400-ITH, S400t, S400t-IFI, S400T-ITH, LENOVO [S405-AEI](#) Laptop Battery, S405-AFO, S405-ASI, S41, S41-70, S41-70-ISE, S41-70-ITH, S41-70AM-IFI, S410-IFI, S410p, S410p Series, S410p Touch, S410p Touch Series, S410pT-IFI, LENOVO [S431](#) Laptop Battery, S440, S5000 Tablet PC S5000-F, LENOVO [S5000-H](#) Laptop Battery, S510p, LENOVO [S510p Series](#) Laptop Battery, S510p Touch, S510p Touch Series, S540, S540-14IWL, S6000, S6000-F, S6000-H, S620 Series, S650, S9, Savior R720, SR1000AT-ISE, T11E 3RD Gen, LENOVO [T40 2375](#) Laptop Battery, T40 2376, T40 2378, T40 2379, T40 2668, T40 2669, T40 2678, T40 2679, T40 2686, T40 2687, T40 Series, T40-2373, T40-2374, T400, T400 6473-TMB, T400s, T40P, T40P 2373, T40P 2374, T40P 2375, T40P 2376, T40P 2378, T40P 2379, LENOVO [T40P 2668](#) Laptop Battery, T40P 2669, T40P 2678, T40P 2679, T40P 2686, T40P 2687, T41 2373, T41 2374, T41 2375, T41 2376, T41 2378, T41 2379, T41 2668, T41 2669, T41 2678, T41 2679, T41 2686, T41 2687, T41 Series, t410s, T41P, LENOVO [T41P 2373](#) Laptop Battery, T41P 2374, T41P 2375, T41P 2376, T41P 2378, T41P 2379, T41P 2668, T41P 2669, T41P 2678, T41P 2679, T41P 2686, T41P 2687, T42 2373, T42 2374, T42 2375, T42 2376, T42 2378, T42 2379, T42 2668, T42 2669, LENOVO [T42 2678](#) Laptop Battery, T42 2679, T42 2686, T42 2687, T42 Series, T420S, T42P, T42P 2373, T42P 2374, T42P 2375, T42P 2376, T42P 2378, T42P 2379, T42P 2668, T42P 2669, T42P 2678, T42P 2679, T42P 2686, T42P 2687, T43 1871, T43 2668, LENOVO [T43 Series](#) Laptop Battery, T43-1876, T430i, T430S, T431S THINKPAD, T43P, T43P-2668, T440, T440S, T450, T450S, T450s(20BXA03CCD), T460, T460P, T460P-0HCD, T460P-0JCD, T460P-0NCD, T460P-0PCD, T460P-0TCD, T460P-0VCD, T460P-0WCD, T460P-0XCD, T460P-2UCD, T460S, T460s-2MCD, T460s-2NCD, T460s-2PCD, T460s-2RCD, LENOVO [T460s-2YCD](#) Laptop Battery, T460s-31CD, T460s-32CD, T460s-33CD, T460s-34CD, T460s-3UCD, LENOVO [T470 20HE](#) Laptop Battery, T470s, T480, T480 20L5-001KAU, T490s 20NX001FCD, T500, T500 Series, T540P, LENOVO [T560-0CCD](#) Laptop Battery, T560-0DCD, T560-0FCD, T560-0HCD, T560-0JCD, T560-19CD, T570, T60 Series, T61, TAB 2 A10-70, Tab 2 A10-70F, Tab 2 A10-70L, TAB 2 A1070, Tab 2 A1070F, Tab 2 A1070L, Tab 2 a7-30, TAB 2A7-20F, TAB 3 7 Essential, LENOVO [Tab 3 710f](#) Laptop Battery, Tab 4 10, Tab 4 10 Plus TB-X704F, TAB 4 8 Plus, Tab 4 8 Plus TB-8504F, Tab 4 8 Plus TB-8704F, TAB 4 8 TB-8504N, TAB TB-X704A, Tablet 10, Tablet 10-20L3000KGE, LENOVO [Tablet 2](#) Laptop Battery, TABLET 2-1050 F, Tablet 2-1371F, TABLET 2-830, TABLET 2-830F, Tablet 21371F, Tablet A 5500f, Tablet PC, Tablet PC Tablet PC, Tablet ThinkPad X220i, Tablet ThinkPad X220t, Tablet X1 Helix, Tablet YT2-830F, Tablett 2 3679-25G, Tablett 2 3679-27, Tablett 2 3679-4HG, TB-8703F, TB-8704X, TB-X30F, TB2-X30, TB2-X30M, TB2X30, TB2X30M, LENOVO [TF83700068D](#) Laptop Battery, Think Pad 13 (20GJS02500), THINK PAD E540, Think pad t430, THINK PAD X131E, THINKBOOK 13S, ThinkBook 13s-20R90071GE, ThinkBook 13s-20R9008WCD, ThinkBook 13s-20R9009TCD, ThinkBook 13s-20R900CECD, ThinkBook 13s-20R900CXCD, ThinkBook 13s-20R900D2CD, ThinkBook 14, ThinkBook 14 20RV000ACD, ThinkBook 14 20RV000CCD, ThinkBook 14 20RV000GCD, ThinkBook 14 20SLA005CD, ThinkBook 14s, ThinkPad, ThinkPad 0196RV 4, ThinkPad 0196RV 5, ThinkPad 0196RV 6, ThinkPad 0196RV 7, ThinkPad 0196RV 8, ThinkPad 0196RV 9, ThinkPad 10 2, Thinkpad 10 2014, THINKPAD 10.1IN, ThinkPad 11E Yoga, Thinkpad 13, ThinkPad 13 (20GL0000US), Thinkpad 13 G2, ThinkPad 13 Gen 2, THINKPAD 13 GEN 2 20J1,

Thinkpad 13 gen2, Thinkpad 13 S2, Thinkpad 13 Series, THINKPAD 1838, Thinkpad 1838 101" Tablet 2, ThinkPad 1838 Tablet, THINKPAD 20FB-003TUK, ThinkPad 20GQ, ThinkPad 220, ThinkPad 2349I62, ThinkPad 25, LENOVO [Thinkpad 3354-ATG](#) Laptop Battery, Thinkpad 3354-AVG, Thinkpad 3354-DSG, Thinkpad 3354ATG, Thinkpad 3354AVG, Thinkpad 3354DSG, Thinkpad 3358, Thinkpad 3460 D4g, ThinkPad A275, LENOVO [ThinkPad A285](#) Laptop Battery, ThinkPad A285(02CD), ThinkPad A485, ThinkPad A485-20MU000CGE, ThinkPad B440A, Thinkpad Carbon X1, thinkpad carbon X1 2nd Generation 20A7, Thinkpad Carbon X1 7th Gen, Thinkpad Carbon X1-7th Generation, ThinkPad dT410, ThinkPad E14520BC000ACD, ThinkPad E14520BC000BCD, ThinkPad E14520BC000CCD, ThinkPad E14520BC000GCD, ThinkPad E14520BC000HCD, ThinkPad E14520BC000JCD, ThinkPad E14520BCA01HCD, ThinkPad E14520BCA01RCD, ThinkPad E14520BCA01SCD, ThinkPad E15, ThinkPad E15 20RD0011GE, ThinkPad E26, THINKPAD E320, Thinkpad E330 22555003, Thinkpad E335, ThinkPad E40, ThinkPad E431, ThinkPad E431(62771A4), ThinkPad E431(62771A5), ThinkPad E431(62771A6), ThinkPad E431(62771A9), ThinkPad E431(62771B2), ThinkPad E431(62771B3), LENOVO [ThinkPad E431\(62771B7\)](#) Laptop Battery, ThinkPad E431(62771D1), ThinkPad E431(62771D2), ThinkPad E431(62771D7), ThinkPad E431(62771E1), ThinkPad E431(62771E3), ThinkPad E431(62771E5), ThinkPad E431(62771E8), ThinkPad E431(62771F8), ThinkPad E431(62771G0), ThinkPad E431(62771J3), ThinkPad E431(62771K1), ThinkPad E431(62771K6), ThinkPad E431(62771L0), ThinkPad E431(62771L6), ThinkPad E431(62771N2), ThinkPad E431(62771S9), ThinkPad E431(62771T5), ThinkPad E431(62771T7), ThinkPad E431(62771V2), ThinkPad E431(62771V8), ThinkPad E431(62771W2), ThinkPad E431(62771Y1), ThinkPad E431(62771Z0), ThinkPad E431(62771Z5), LENOVO [ThinkPad E431\(62772A9\)](#) Laptop Battery, ThinkPad E431(62772C8), LENOVO [ThinkPad E431\(62772D7\)](#) Laptop Battery, ThinkPad E431(62772E1), ThinkPad E431(62775VC), ThinkPad E431(62775XC), ThinkPad E431(62775ZC), LENOVO [ThinkPad E431\(627763C\)](#) Laptop Battery, ThinkPad E431(62776AC), LENOVO [ThinkPad E431\(62776CC\)](#) Laptop Battery, ThinkPad E431(62776EC), ThinkPad E431(62776FC), ThinkPad E431(6277ALC), ThinkPad E431(68861A4), ThinkPad E431(68861B8), ThinkPad E431(68861C0), ThinkPad E431(68861D7), ThinkPad E431(68861E4), ThinkPad E431(688635C), ThinkPad E440, ThinkPad E440 20C50003CD, ThinkPad E440 20C5A081CD, ThinkPad E440 20C5A083CD, ThinkPad E440 20C5A0BGCD, ThinkPad E440(20C50000CD), ThinkPad E440(20C5A084CD), ThinkPad E440(20C5A08ECD), ThinkPad E440(20C5A08JCD), ThinkPad E440(20C5A08KCD), ThinkPad E440(20C5A0BFCD), ThinkPad E440(20C5A0BGCD), ThinkPad E440(20C5A0BWCD), ThinkPad E440(20C5A0F3CD), ThinkPad E440(20C5A0FMCD), ThinkPad E440(20C5A0GVCD), ThinkPad E440(20C5A0JQCD), ThinkPad E440(20C5S00F00), ThinkPad E440(20C5S00N00), ThinkPad E440(20C5S00R00), ThinkPad E440(20C5S00S00), ThinkPad E440(20C5S02C00), ThinkPad E440(20C5S02E00), ThinkPad E440(20C5S02Y00), ThinkPad E445(20B10001CD), ThinkPad E445(20B10002CD), ThinkPad E445(20B1000400), ThinkPad E445(20B1000500), ThinkPad E445(20B10005CD), ThinkPad E445(20B10007CU), ThinkPad E445(20B10008CU), ThinkPad E445(20B1000CCU), ThinkPad E445(20B1S00E00), ThinkPad E450, ThinkPad E450(20DCA001CD), ThinkPad E450(20DCA002CD), ThinkPad E450(20DCA003CD), ThinkPad E450(20DCA00BCD), ThinkPad E450(20DCA00CCD), ThinkPad E450(20DCA00FCD), LENOVO [ThinkPad E450\(20DCA00UCD\)](#) Laptop Battery, ThinkPad E450(20DCA00YCD), ThinkPad E450(20DCA01HCD), ThinkPad E450(20DCA01JCD), ThinkPad E450(20DCA01KCD), ThinkPad E450(20DCA01LCD), ThinkPad E450(20DCA01MCD), ThinkPad E450(20DCA01NCD), ThinkPad E450(20DCA01PCD), ThinkPad E450(20DCA01QCD), ThinkPad E450(20DCA023CD), ThinkPad E450(20DCA026CD), ThinkPad E450(20DCA028CD), ThinkPad E450(20DCA02FCD), ThinkPad E450(20DCA02GCD), ThinkPad E450(20DCA02LCD), ThinkPad E450(20DCA02MCD), ThinkPad

E450(20DCA033CD), ThinkPad E450(20DCA034CD), ThinkPad E450(20DCA035CD), ThinkPad E450(20DCA036CD), ThinkPad E450(20DCA03ACD), ThinkPad E450(20DCA03FC), [LENOVO ThinkPad E450\(20DCA03FCD\)](#) Laptop Battery, ThinkPad E450(20DCA03GCD), ThinkPad E450(20DCA03HCD), ThinkPad E450(20DCA03XCD), ThinkPad E450(20DCA04XCD), ThinkPad E450(20DCA04YCD), ThinkPad E450(20DCA050CD), ThinkPad E450(20DCA05MCD), ThinkPad E450(20DCA05NCD), ThinkPad E450(20DCA05PCD), ThinkPad E450(20DCA05SCD), ThinkPad E450(20DCA06LCD), ThinkPad E450(20DCA073CD), ThinkPad E450(20DCA07JCD), ThinkPad E450(20DCA07NCD), ThinkPad E450(20DCA07XCD), ThinkPad E450C, ThinkPad E450C(20EH0000CD), ThinkPad E450C(20EH0001CD), ThinkPad E450C(20EHA000CD), ThinkPad E450C(20EHA001CD), ThinkPad E450C(20EHA002CD), ThinkPad E450C(20EHA003CD), ThinkPad E450C(20EHA007CD), ThinkPad E450C(20EHA008CD), ThinkPad E450C(20EHA00DCD), ThinkPad E450C(20EHA00JCD), ThinkPad E450C(20EHA00SCD), ThinkPad E450C(20EHA00TCD), ThinkPad E455, ThinkPad E455(20DE0003CD), ThinkPad E455(20DE000BCD), ThinkPad E455(20DE000ECD), ThinkPad E455(20DEA003CD), ThinkPad E455(20DEA005CD), ThinkPad E455(20DEA006CD), ThinkPad E455(20DEA00MCD), ThinkPad E455(20DEA00VCD), ThinkPad E455(20DEA00WCD), ThinkPad E455(20DEA00YCD), ThinkPad E455(20DEA01FCD), ThinkPad E455(20DEA01GCD), ThinkPad E460, ThinkPad E460(20ET0020CD), ThinkPad E460(20ET003YCD), ThinkPad E460(20ET0040CD), ThinkPad E460(20ET0044CD), ThinkPad E460(20ET0045CD), [LENOVO ThinkPad E460\(20ETA00DCD\)](#) Laptop Battery, ThinkPad E460(20ETA00ECD), ThinkPad E460(20ETA00FCD), ThinkPad E460(20ETA00GCD), ThinkPad E460(20ETA00HCD), ThinkPad E460(20ETA011CD), ThinkPad E460(20ETA013CD), ThinkPad E460(20ETA014CD), ThinkPad E460(20ETA015CD), ThinkPad E460(20ETA016CD), ThinkPad E460(20ETA01GCD), ThinkPad E460(20ETA01HCD), ThinkPad E460(20ETA01WCD), ThinkPad E460(20ETA01XCD), ThinkPad E460(20ETA01YCD), [LENOVO ThinkPad E460\(20ETA020CD\)](#) Laptop Battery, ThinkPad E460(20ETA022CD), ThinkPad E460(20ETA023CD), ThinkPad E460(20ETA024CD), ThinkPad E460(20ETA025CD), ThinkPad E460(20ETA027CD), ThinkPad E460(20ETA02FCD), ThinkPad E460(20ETA02GCD), ThinkPad E460-20ETA0-0DCD, ThinkPad E465, [LENOVO ThinkPad E465\(20EX0009US\)](#) Laptop Battery, ThinkPad E465(20EX000AUS), ThinkPad E465(20EX000EUS), ThinkPad E465(20EX000MCD), ThinkPad E465(20EXCTO1WW), ThinkPad E470, ThinkPad E470(20H1001NCD), ThinkPad E470(20H1001QCD), ThinkPad E470(20H1001RCD), ThinkPad E470(20H1001SCD), ThinkPad E470(20H1001TCD), ThinkPad E470(20H1001UCD), ThinkPad E470(20H1001VCD), [LENOVO ThinkPad E470\(20H1001WCD\)](#) Laptop Battery, ThinkPad E470(20H1001XCD), ThinkPad E470(20H1A001CD), ThinkPad E470(20H1A002CD), [LENOVO ThinkPad E470\(20H1A004CD\)](#) Laptop Battery, ThinkPad E470(20H1A007CD), ThinkPad E470(20H1A009CD), ThinkPad E470(20H1A01DCD), ThinkPad E470(20H1A01FCD), ThinkPad E470(20H1A01GCD), ThinkPad E470(20H1A01LCD), ThinkPad E470(20H1A01NCD), ThinkPad E470(20H1A01PCD), ThinkPad E470(20H1A01RCD), ThinkPad E470(20H1A01TCD), ThinkPad E470(20H1A01UCD), ThinkPad E470(20H1A024CD), ThinkPad E470(20H1A02YCD), ThinkPad E470(20H1A030CD), ThinkPad E470(20H1A031CD), ThinkPad E470(20H1A034CD), ThinkPad E470(20H1A037CD), ThinkPad E470(20H1A038CD), ThinkPad E470(20H1A03SCD), ThinkPad E470(20H1A05CCD), ThinkPad E470(3CCD), ThinkPad E470-20H2S00400, ThinkPad E47020H1001NCD, [LENOVO ThinkPad E47020H1001QCD](#) Laptop Battery, ThinkPad E47020H1001RCD, ThinkPad E47020H1001SCD, ThinkPad E47020H1001TCD, ThinkPad E47020H1001UCD, ThinkPad E47020H1001VCD, ThinkPad E47020H1001WCD, ThinkPad E47020H1001XCD, ThinkPad E47020H1A001CD, ThinkPad E47020H1A002CD, ThinkPad E47020H1A004CD, ThinkPad E47020H1A007CD, ThinkPad E47020H1A009CD, ThinkPad

E47020H1A01DCD, ThinkPad E47020H1A01FCD, ThinkPad E47020H1A01GCD, ThinkPad E47020H1A01LCD, ThinkPad E47020H1A01NCD, ThinkPad E47020H1A01PCD, ThinkPad E47020H1A01RCD, ThinkPad E47020H1A01TCD, ThinkPad E47020H1A01UCD, ThinkPad E47020H1A024CD, ThinkPad E47020H1A02YCD, ThinkPad E47020H1A030CD, ThinkPad E47020H1A031CD, ThinkPad E47020H1A034CD, ThinkPad E47020H1A037CD, ThinkPad E47020H1A038CD, ThinkPad E47020H1A03SCD, ThinkPad E47020H1A05CCD, ThinkPad E4703CCD, ThinkPad E470C, ThinkPad E475, LENOVO [ThinkPad E475-20H4](#) Laptop Battery, ThinkPad E475-20H40006US, ThinkPad E475-20H4000AUS, ThinkPad E480, ThinkPad E480 Series, ThinkPad E480-03CD, ThinkPad E480-1UCD, ThinkPad E480-1VCD, ThinkPad E480-20KN000SCD, ThinkPad E480-20KN001QGE, ThinkPad E480-20KNA001CD, ThinkPad E480-20KNA002CD, ThinkPad E480-20KNA003CD, ThinkPad E480-20KNA00CCD, ThinkPad E480-20KNA00FCD, ThinkPad E480-20KNA00GCD, ThinkPad E480-20KNA00QCD, ThinkPad E480-20KNA00RCD, ThinkPad E480-20KNCTO1WW, ThinkPad E480-20KNCTO1WW3, ThinkPad E480-20KQ20KN, ThinkPad E480-20KQS00000, ThinkPad E480-20KQS00100, LENOVO [ThinkPad E48003CD](#) Laptop Battery, ThinkPad E4801UCD, ThinkPad E4801VCD, ThinkPad E48020KN000SCD, ThinkPad E48020KN001QGE, ThinkPad E48020KNA001CD, LENOVO [ThinkPad E48020KNA002CD](#) Laptop Battery, ThinkPad E48020KNA003CD, ThinkPad E48020KNA00BCD, ThinkPad E48020KNA00CCD, ThinkPad E48020KNA00FCD, ThinkPad E48020KNA00GCD, ThinkPad E48020KNA00QCD, ThinkPad E48020KNA00RCD, ThinkPad E48020KNA00TCD, ThinkPad E48020KNA00WCD, ThinkPad E48020KNA010CD, ThinkPad E48020KNA011CD, ThinkPad E48020KNA013CD, LENOVO [ThinkPad E48020KNA014CD](#) Laptop Battery, ThinkPad E48020KNA015CD, ThinkPad E48020KNA017CD, ThinkPad E48020KNA019CD, ThinkPad E48020KNA01ACD, ThinkPad E48020KNA01BCD, ThinkPad E48020KNA01SCD, ThinkPad E48020KNA02TCD, ThinkPad E48020KNA03CCD, ThinkPad E48020KNCTO1WW, ThinkPad E48020KNCTO1WW3, ThinkPad E48020KQ20KN, ThinkPad E48020KQS00000, ThinkPad E48020KQS00100, ThinkPad E485, ThinkPad E485 Series, ThinkPad E490, ThinkPad E490 Series, ThinkPad E490(20N8002BCD), ThinkPad E490(20N8002DCD), ThinkPad E490(20N8002JCD), ThinkPad E490(20N8002KCD), ThinkPad E490(20N8002NCD), ThinkPad E490(20N8002UCD), ThinkPad E490(20N8002XCD), ThinkPad E490(20N8002XCD), ThinkPad E490(20N80037CD), ThinkPad E490(20N8003ACD), ThinkPad E490(2DCD), ThinkPad E50, ThinkPad E520, THINKPAD E525, ThinkPad E530, ThinkPad E531, ThinkPad E531(68851S5), ThinkPad E531(68851Y0), LENOVO [ThinkPad E531\(68852B3\)](#) Laptop Battery, ThinkPad E531(68852B7), ThinkPad E531(68852F8), ThinkPad E531(68852H6), ThinkPad E531(68852H9), ThinkPad E531(68852J3), LENOVO [ThinkPad E531\(68852L4\)](#) Laptop Battery, ThinkPad E531(68852N4), ThinkPad E531(688542C), ThinkPad E531(688549C), ThinkPad E531(68854HC), ThinkPad E531(68854LC), ThinkPad E531(68854XC), ThinkPad E531(68854YC), ThinkPad E531(6885CLC), ThinkPad E531(6885CMC), ThinkPad E531(6885CWC), LENOVO [ThinkPad E531\(6885CXC\)](#) Laptop Battery, ThinkPad E531(6885D3C), ThinkPad E535 Serie, ThinkPad E540, ThinkPad E540(20C60016CD), ThinkPad E540(20C6001CCD), ThinkPad E540(20C6001LCD), ThinkPad E540(20C6004FCD), ThinkPad E540(20C600900), ThinkPad E540(20C6A0B5CD), ThinkPad E540(20C6A0B7CD), ThinkPad E540(20C6A0DWCD), ThinkPad E540(20C6A0FJCD), ThinkPad E540(20C6A0FMCD), ThinkPad E540(20C6A0HGCD), ThinkPad E540(20C6S00A00), ThinkPad E540(20CA0B9CD), ThinkPad E545(20B20003CD), ThinkPad E545(20B20005CD), ThinkPad E545(20B20007CU), ThinkPad E545(20B20008CU), ThinkPad E545(20B2000BCU), ThinkPad E545(20B2S00300), ThinkPad E545(20B2S00500), ThinkPad E545(20B2S00A00), ThinkPad E545(20B2S00D00), ThinkPad E550, ThinkPad E550 20DFA00UCD, ThinkPad E550 20DFA01RCD, ThinkPad E550 20DFA07SCD, ThinkPad E550 20DFA07TCD, ThinkPad E550 20DFA07WCD,

ThinkPad E550 20DFA08RCD, ThinkPad E550(20DF002YUS), ThinkPad E550(20DF0030US), ThinkPad E550(20DF0036US), ThinkPad E550(20DF003EUS), ThinkPad E550(20DF003GUS), ThinkPad E550(20DF003WUS), ThinkPad E550(20DF0040US), ThinkPad E550(20DF0048US), ThinkPad E550(20DF004EUS), ThinkPad E550(20DF0065CD), ThinkPad E550(20DF0067CD), ThinkPad E550(20DF006XCD), ThinkPad E550(20DF007MUS), ThinkPad E550(20DF008RCD), ThinkPad E550(20DF0090CD), LENOVO [ThinkPad E550\(20DFA008CD\)](#) Laptop Battery, ThinkPad E550(20DFA009CD), ThinkPad E550(20DFA00BCD), ThinkPad E550(20DFA00DCD), ThinkPad E550(20DFA00FCD), ThinkPad E550(20DFA00GCD), ThinkPad E550(20DFA00HCD), ThinkPad E550(20DFA00JCD), ThinkPad E550(20DFA00RCD), ThinkPad E550(20DFA011CD), ThinkPad E550(20DFA012CD), ThinkPad E550(20DFA01SCD), ThinkPad E550(20DFA01TCD), ThinkPad E550(20DFA02VCD), ThinkPad E550(20DFA03SCD), ThinkPad E550(20DFA03TCD), ThinkPad E550(20DFA03VCD), ThinkPad E550(20DFA045CD), ThinkPad E550(20DFA047CD), ThinkPad E550(20DFA048CD), ThinkPad E550(20DFA04ACD), ThinkPad E550(20DFA04BCD), ThinkPad E550(20DFA04DCD), ThinkPad E550(20DFA04ECD), ThinkPad E550(20DFA04FCD), ThinkPad E550(20DFA04HCD), ThinkPad E550(20DFA04QCD), ThinkPad E550(20DFA04VCD), ThinkPad E550(20DFA04WCD), ThinkPad E550(20DFA056CD), ThinkPad E550(20DFA057CD), ThinkPad E550(20DFA058CD), ThinkPad E550(20DFA059CD), ThinkPad E550(20DFA05BCD), ThinkPad E550(20DFA05DCD), ThinkPad E550(20DFA06LCD), ThinkPad E550(20DFA06MCD), ThinkPad E550(20DFS00K00), ThinkPad E550(20DFS00L00), ThinkPad E550(20DH002QUS), ThinkPad E55020DF0065CD, ThinkPad E55020DF0067CD, ThinkPad E55020DF006XCD, ThinkPad E55020DF008RCD, ThinkPad E55020DF0090CD, ThinkPad E55020DFA008CD, ThinkPad E55020DFA009CD, ThinkPad E55020DFA00BCD, ThinkPad E55020DFA00DCD, ThinkPad E55020DFA00FCD, ThinkPad E55020DFA00GCD, ThinkPad E55020DFA00HCD, ThinkPad E55020DFA00JCD, ThinkPad E55020DFA00RCD, ThinkPad E55020DFA011CD, ThinkPad E55020DFA012CD, ThinkPad E55020DFA01SCD, ThinkPad E55020DFA01TCD, ThinkPad E55020DFA02VCD, ThinkPad E55020DFA03SCD, ThinkPad E55020DFA03TCD, LENOVO [ThinkPad E55020DFA03VCD](#) Laptop Battery, ThinkPad E55020DFA045CD, ThinkPad E55020DFA047CD, ThinkPad E55020DFA048CD, ThinkPad E55020DFA04ACD, ThinkPad E55020DFA04BCD, LENOVO [ThinkPad E55020DFA04DCD](#) Laptop Battery, ThinkPad E55020DFA04ECD, ThinkPad E55020DFA04FCD, ThinkPad E55020DFA04HCD, ThinkPad E55020DFA04QCD, ThinkPad E55020DFA04VCD, ThinkPad E55020DFA04WCD, ThinkPad E55020DFA056CD, ThinkPad E55020DFA057CD, ThinkPad E55020DFA058CD, ThinkPad E55020DFA059CD, ThinkPad E55020DFA05BCD, ThinkPad E55020DFA05DCD, ThinkPad E55020DFA06LCD, ThinkPad E55020DFA06MCD, ThinkPad E55020DH002QUS, ThinkPad E550C, ThinkPad E550C(20E00001CD), ThinkPad E550C(20E00007CD), ThinkPad E550C(20E0A000CD), ThinkPad E550C(20E0A002CD), ThinkPad E550C(20E0A008CD), ThinkPad E550C(20E0A009CD), ThinkPad E550C(20E0A00DCD), ThinkPad E550C(20E0A00GCD), ThinkPad E550C(20E0A00HCD), ThinkPad E550C(20E0A00JCD), LENOVO [ThinkPad E550C\(20E0A00KCD\)](#) Laptop Battery, ThinkPad E550C(20E0A00LCD), ThinkPad E550C(20E0A00MCD), ThinkPad E550C20E00001CD, ThinkPad E550C20E00007CD, ThinkPad E550C20E0A000CD, ThinkPad E550C20E0A002CD, ThinkPad E550C20E0A008CD, ThinkPad E550C20E0A009CD, ThinkPad E550C20E0A00DCD, ThinkPad E550C20E0A00GCD, ThinkPad E550C20E0A00HCD, ThinkPad E550C20E0A00JCD, ThinkPad E550C20E0A00KCD, ThinkPad E550C20E0A00LCD, ThinkPad E550C20E0A00MCD, ThinkPad E555, ThinkPad E555 Series, ThinkPad E555(20DH0009CD), ThinkPad E555(20DH000ACD), ThinkPad E555(20DH0028US), ThinkPad E555(20DH0029US), ThinkPad E555(20DH002CUS), ThinkPad E555(20DH002EUS), ThinkPad E555(20DH002HUS), ThinkPad E555(20DH002NUS), LENOVO [ThinkPad](#)

[E555\(20DH002PUS\)](#) Laptop Battery, ThinkPad E555(20DH002RUS), ThinkPad E555(20DH002TUS), ThinkPad E555(20DHA005CD), ThinkPad E555(20DHA006CD), ThinkPad E555(20DHA007CD), ThinkPad E555(20DHA008CD), ThinkPad E555(20DHA009CD), ThinkPad E555(20DHA00ACD), LENOVO [ThinkPad E555\(20DHA00CCD\)](#) Laptop Battery, ThinkPad E555(20DHA00QCD), ThinkPad E555(20DHA00VCD), ThinkPad E555(20DHA010CD), ThinkPad E555(20DHA01MCD), ThinkPad E555(20DHA01QCD), ThinkPad E555(20DHS00800), ThinkPad E55520DH0009CD, ThinkPad E55520DH000ACD, ThinkPad E55520DHA005CD, ThinkPad E55520DHA006CD, LENOVO [ThinkPad E55520DHA007CD](#) Laptop Battery, ThinkPad E55520DHA008CD, ThinkPad E55520DHA009CD, ThinkPad E55520DHA00ACD, ThinkPad E55520DHA00CCD, ThinkPad E55520DHA00QCD, ThinkPad E55520DHA00VCD, ThinkPad E55520DHA010CD, ThinkPad E55520DHA01MCD, ThinkPad E55520DHA01QCD, ThinkPad E560, ThinkPad E560 20EV000MGE, ThinkPad E560 20EVS00500, ThinkPad E560 20EWS00000, ThinkPad E560(20EV001GCD), ThinkPad E560(20EV001JCD), ThinkPad E560(20EVA00KCD), ThinkPad E560(20EVA00QCD), ThinkPad E560(20EVA00UCD), ThinkPad E560(20EVA00VCD), ThinkPad E560(20EVA019CD), ThinkPad E560(20EVA01ACD), ThinkPad E560(20EVA01BCD), ThinkPad E560(20EVA01DCD), ThinkPad E560(20EVA01ECD), ThinkPad E560(20EVA034CD), LENOVO [ThinkPad E560\(20EVA035CD\)](#) Laptop Battery, ThinkPad E560(20EVA059CD), ThinkPad E560(20EVA05ACD), ThinkPad E560(20EVA05CCD), ThinkPad E560(20EVA05GCD), ThinkPad E560(20EVA063CD), ThinkPad E560(20EVA074CD), ThinkPad E56020EV001GCD, LENOVO [ThinkPad E56020EV001JCD](#) Laptop Battery, ThinkPad E56020EVA00KCD, ThinkPad E56020EVA00QCD, ThinkPad E56020EVA00UCD, ThinkPad E56020EVA00VCD, ThinkPad E56020EVA019CD, LENOVO [ThinkPad E56020EVA01ACD](#) Laptop Battery, ThinkPad E56020EVA01BCD, ThinkPad E56020EVA01DCD, ThinkPad E56020EVA01ECD, ThinkPad E56020EVA034CD, ThinkPad E56020EVA035CD, LENOVO [ThinkPad E56020EVA059CD](#) Laptop Battery, ThinkPad E56020EVA05ACD, ThinkPad E56020EVA05CCD, ThinkPad E56020EVA05GCD, ThinkPad E56020EVA063CD, ThinkPad E56020EVA074CD, LENOVO [Thinkpad E560P](#) Laptop Battery, ThinkPad E565, ThinkPad E565(00CD), LENOVO [ThinkPad E565\(0HCD\)](#) Laptop Battery, ThinkPad E565(0NCD), ThinkPad E565(20EY000LCD), ThinkPad E565(20EYA002CD), ThinkPad E565(20EYA004CD), ThinkPad E565(20EYA00BCD), ThinkPad E565(20EYA00XCD), ThinkPad E56500CD, ThinkPad E5650HCD, ThinkPad E5650NCD, ThinkPad E56520EY000LCD, ThinkPad E56520EYA002CD, ThinkPad E56520EYA004CD, ThinkPad E56520EYA00BCD, ThinkPad E56520EYA00XCD, ThinkPad E570, ThinkPad E570(20H5005ECD), ThinkPad E570(20H5005PCD), ThinkPad E570(20H5A005CD), ThinkPad E570(20H5A00ECD), ThinkPad E570(20H5A014CD), ThinkPad E570(20H5A01NCD), LENOVO [ThinkPad E570\(20H5A01PCD\)](#) Laptop Battery, ThinkPad E570(20H5A01RCD), ThinkPad E570c, THINKPAD E570P, ThinkPad E575, LENOVO [ThinkPad E580](#) Laptop Battery, ThinkPad E580 I5-8250U UHD 620 SSD, ThinkPad E580 Series, ThinkPad E580(16CD), ThinkPad E580(20KS0001CD), ThinkPad E580(20KS0027CD), ThinkPad E580(20KS0028CD), ThinkPad E580(20KS002BCD), ThinkPad E580(20KS002KCD), ThinkPad E580(20KS002MCD), ThinkPad E580(20KSA001CD), ThinkPad E580(20KSA002CD), LENOVO [ThinkPad E580\(20KSA00FCD\)](#) Laptop Battery, ThinkPad E580(20KSA00HCD), ThinkPad E580(20KSA00LCD), ThinkPad E580(20KSA00MCD), ThinkPad E580(20KSA00PCD), ThinkPad E580(20KSA00RCD), ThinkPad E580(20KSA01ACD), ThinkPad E580(20KSA01PCD), ThinkPad E580(20KSA01QCD), ThinkPad E580(i5-8250U UHD 620 SSD), ThinkPad E580-20KS001RGE, ThinkPad E58016CD, ThinkPad E5801JCD, ThinkPad E58020KS0001CD, ThinkPad E58020KS0027CD, ThinkPad E58020KS0028CD, ThinkPad E58020KS002BCD, ThinkPad E58020KS002KCD, ThinkPad E58020KS002MCD, ThinkPad E58020KSA001CD, ThinkPad E58020KSA002CD, ThinkPad E58020KSA00FCD, ThinkPad

E58020KSA00HCD, ThinkPad E58020KSA00LCD, ThinkPad E58020KSA00MCD, ThinkPad E58020KSA00PCD, ThinkPad E58020KSA00RCD, LENOVO [ThinkPad E58020KSA019CD](#) Laptop Battery, ThinkPad E58020KSA01ACD, ThinkPad E58020KSA01HCD, ThinkPad E585, ThinkPad E585 Series, LENOVO [ThinkPad E585\(0MCD\)](#) Laptop Battery, ThinkPad E585(0QCD), ThinkPad E585(20KV), ThinkPad E585(20KV0006GE), ThinkPad E585(20KV0008GE), ThinkPad E585(20KV000JCD), ThinkPad E585(20KV000QCD), LENOVO [ThinkPad E5850MCD](#) Laptop Battery, ThinkPad E5850QCD, ThinkPad E58520KV, ThinkPad E58520KV0006GE, ThinkPad E58520KV0008GE, ThinkPad E58520KV000JCD, ThinkPad E58520KV000QCD, ThinkPad E590, ThinkPad E590 Series, ThinkPad Edge 0196-3EB, ThinkPad Edge 0578-47B, ThinkPad Edge 11, Thinkpad Edge 11 0328, Thinkpad Edge 11 2545, ThinkPad Edge 11 Inch, Thinkpad Edge 11 Inch Nvy4lfr, Thinkpad Edge 11 Inch Nvz24fr, Thinkpad Edge 11 Inch Nvz3bge, ThinkPad Edge 11 NVY4LFR, ThinkPad Edge 11 NVZ24FR, ThinkPad Edge 11 NVZ3BGE, ThinkPad Edge 11" NVY4LFR, ThinkPad Edge 11" NVZ24FR, ThinkPad Edge 11" NVZ3BGE, ThinkPad Edge 13, ThinkPad Edge 14, ThinkPad Edge 14 05787UJ, ThinkPad Edge 14 05787VJ, ThinkPad Edge 14 05787WJ, ThinkPad Edge 14 05787XJ, ThinkPad Edge 14 05787YJ, ThinkPad Edge 14 Inch, ThinkPad Edge 14" 05787UJ, ThinkPad Edge 14" 05787VJ, ThinkPad Edge 14" 05787WJ, ThinkPad Edge 14" 05787XJ, ThinkPad Edge 14" 05787YJ, THINKPAD Edge 15, THINKPAD EDGE 15 0301, ThinkPad Edge 15 Inch, ThinkPad Edge 15", ThinkPad Edge 15-inch, ThinkPad Edge E10, ThinkPad Edge E120 Series, ThinkPad Edge E125 Series, ThinkPad Edge E130 Series, ThinkPad Edge E145, ThinkPad Edge E220S, ThinkPad Edge E30, ThinkPad Edge E31, ThinkPad Edge E320 Series, ThinkPad Edge E325 Series, Thinkpad Edge E330, ThinkPad Edge E335, ThinkPad Edge E420, ThinkPad Edge E420s, Thinkpad Edge E425, ThinkPad Edge E430, ThinkPad Edge E470, ThinkPad Edge E520, ThinkPad Edge E525, THINKPAD EDGE E535, ThinkPad Edge E555 Series, ThinkPad Edge S230u, ThinkPad Edge S420, ThinkPad Edge S430, THINKPAD G700, Thinkpad Helix, Thinkpad Helix (Type 3xxx), ThinkPad Helix 2, ThinkPad Helix 3697-CTO, ThinkPad Helix(20CG004JCD), ThinkPad Helix(20CGA00XCD), ThinkPad Helix(20CGA01PCD), ThinkPad Helix(20CGA01QCD), ThinkPad Helix(20CGA01RCD), ThinkPad iT510, ThinkPad K2450, ThinkPad K26, LENOVO [ThinkPad K27](#) Laptop Battery, ThinkPad K29, ThinkPad L380, ThinkPad L380 Yoga, ThinkPad L380 Yoga-20M7001BGE, ThinkPad L380 Yoga20M7001BGE, ThinkPad L380-20M5000WGE, LENOVO [ThinkPad L38020M5000WGE](#) Laptop Battery, ThinkPad L410, THINKPAD L412, THINKPAD L420, THINKPAD L421, ThinkPad L430, ThinkPad L440, ThinkPad L440 20AT004QGE, ThinkPad L440(20ASA18ECD), ThinkPad L440(20ASA18SCD), ThinkPad L440(20ASA1BWCD), ThinkPad L440(20AT000YCD), ThinkPad L440(20AT0016CD), ThinkPad L440(20AT0019CD), ThinkPad L440(20AT001BCD), ThinkPad L440(20AT001CCD), ThinkPad L440(20AT001DCD), ThinkPad L440(20AT001ECD), ThinkPad L440(3550M), ThinkPad L450, ThinkPad L450 20DS0005, ThinkPad L450 20DSA01YCD, ThinkPad L450 20DT0000, ThinkPad L450(20DSA01YCD), ThinkPad L450(20DSA02JCD), ThinkPad L450(20DSA02MCD), ThinkPad L450(20DSA02RCD), ThinkPad L450(20DSA03DCD), ThinkPad L450(20DSA061CD), ThinkPad L450(20DSA063CD), ThinkPad L450(20DSA065CD), LENOVO [ThinkPad L450\(20DSA078CD\)](#) Laptop Battery, ThinkPad L450(20DSA079CD), ThinkPad L450(20DSA07ACD), ThinkPad L460, ThinkPad L460(20FVS01400), ThinkPad L470(20J4/20J5), LENOVO [ThinkPad L470\(20J4000KGE\)](#) Laptop Battery, ThinkPad L470(20J4000WGE), ThinkPad L480, ThinkPad L480-20LS001AGE, ThinkPad L48020LS001AGE, ThinkPad L490, THINKPAD L510, THINKPAD L512, THINKPAD L520, ThinkPad L530, ThinkPad L540, ThinkPad L560, ThinkPad L560(20F1001YGE), ThinkPad L560(20F10022GE), ThinkPad L560(20F10025GE), ThinkPad L560(20F10026GE), ThinkPad L560(20F10032GE), ThinkPad L560(20F2A007CD), ThinkPad L560(20F2A06ACD), ThinkPad L560(20F2A0J1CD), ThinkPad L56020F1001YGE, ThinkPad

L56020F10022GE, ThinkPad L56020F10025GE, ThinkPad L56020F10026GE, ThinkPad L56020F10032GE, ThinkPad L56020F2A007CD, ThinkPad L56020F2A06ACD, ThinkPad L56020F2A0J1CD, Thinkpad L570, ThinkPad L570 20J8/20J9, ThinkPad L570 20J80019GE, ThinkPad L570 20J8001AMZ, LENOVO [ThinkPad L570 20J8001BGE](#) Laptop Battery, ThinkPad L570 20J8001BMZ, ThinkPad L570 20J8001EIX, ThinkPad L570 20J8001JMZ, ThinkPad L570 20J8001LGE, ThinkPad L570 20J8001MGE, ThinkPad L570 20J8001XXM, ThinkPad L570 20J8002JGE, Thinkpad L570 20J9S01600, ThinkPad L570 20J9S11200, ThinkPad L570 20JQ/20JR, ThinkPad L570 20JQ000PGE, LENOVO [ThinkPad L570 20JQ000PMZ](#) Laptop Battery, ThinkPad L570 20JRS08800, ThinkPad L580, ThinkPad L590, LENOVO [ThinkPad Mini 10](#) Laptop Battery, ThinkPad N24 Series, ThinkPad New S1 2018, ThinkPad New S1 201820LK0000CD, ThinkPad New S1 201820LK0001CD, ThinkPad New S1 201820LK0006CD, ThinkPad New S1 201820LK000DCD, ThinkPad New S1 201820LK000GCD, ThinkPad New S1 201820LKA000CD, Thinkpad New S2, ThinkPad New S2 2018, ThinkPad New S2 2018(OPCD), ThinkPad New S2 2018(20L1A000CD), ThinkPad New S2 2018(20L1A001CD), ThinkPad New S2 2018(20L1A002CD), ThinkPad New S2 2018(20L1A005CD), ThinkPad New S2 2018(20L1A006CD), ThinkPad New S2 2018(20L1A007CD), ThinkPad New S2 2018(20L1A008CD), ThinkPad New S2 2018(20L1A009CD), LENOVO [ThinkPad New S2 2018\(20L1A00ACD\)](#) Laptop Battery, ThinkPad New S2 2018(20L1A00CCD), ThinkPad New S2 2018(20L1A00DCD), ThinkPad New S2 2018(20L1A00HCD), ThinkPad New S2 2018(20L1A00JCD), ThinkPad New S2 20GUA004CD, ThinkPad New S2 20GUA005CD, ThinkPad New X1 Carbon, ThinkPad New X1 Carbon 20A7A04ACD, ThinkPad New X1 Carbon 20BTA01TCD, LENOVO [ThinkPad New X1 Carbon 20BTA01UCD](#) Laptop Battery, ThinkPad New X1 Carbon 20BTA06CCD, ThinkPad New X1 Carbon 20BTA06DCD, ThinkPad New X1 Carbon 20BTA06ECD, ThinkPad New X1 Carbon 20BTA06FCD, ThinkPad New X1 Carbon 20BTA07BCD, ThinkPad New X1 Carbon 20BTA07CCD, ThinkPad New X1 Carbon 20BTA0AMCD, ThinkPad New X1 Carbon 20BTA0ANCD, ThinkPad New X1 Carbon 20BTA0FLCD, ThinkPad New X1 Carbon 20BTA0FMCD, ThinkPad New X1 Carbon 20BTA0M400, ThinkPad New X1 Carbon20A7A02MCD, ThinkPad New X1 Carbon20A7A03NCD, ThinkPad New X1 Carbon20A7A049CD, ThinkPad New X1 Carbon20A7A04ACD, ThinkPad New X1 Carbon20A7A058CD, ThinkPad New X1 Carbon20A7S00000, ThinkPad New X1 Carbon20A7S00100, LENOVO [ThinkPad New X1 Carbon20A7S00900](#) Laptop Battery, ThinkPad New X1 Carbon20A7S00C00, ThinkPad New X1 Carbon20A7S00D00, ThinkPad New X1 Carbon20A7S00E00, ThinkPad New X1 Carbon20A7S00H00, ThinkPad New X1 Carbon20A7S00S00, ThinkPad New X1 Carbon20A8A09900, ThinkPad New X1 Carbon20A8A0AM00, LENOVO [ThinkPad New X1 Carbon20A8A0AN00](#) Laptop Battery, ThinkPad New X1 Carbon20A8A0SACD, ThinkPad New X1 Carbon20A8A0SB00, ThinkPad New X1 Carbon20A8A0SCCD, ThinkPad New X1 Carbon20A8A0WS00, ThinkPad New X1 Carbon20A8A0X2CD, ThinkPad New X1 Carbon20A8A0X3CD, ThinkPad New X1 Carbon20A8A0X4CD, ThinkPad New X1 Carbon20A8A0X6CD, ThinkPad New X1 Carbon20A8A0Y2CD, ThinkPad New X1 Carbon20A8S00809, ThinkPad New X1 Carbon20BTA06CCD, ThinkPad New X1 Carbon20BTA06DCD, ThinkPad New X1 Carbon20BTA06ECD, ThinkPad New X1 Carbon20BTA06FCD, ThinkPad New X1 Carbon20BTA07BCD, ThinkPad New X1 Carbon20BTA07CCD, ThinkPad New X1 Carbon20BTA0ANCD, ThinkPad P1, LENOVO [ThinkPad P1 2019](#) Laptop Battery, ThinkPad P1 2019-20QT000RGE, ThinkPad P1-20MD002LUS, ThinkPad P1-20MDA00DCD, ThinkPad P120MD0001GE, ThinkPad P120MD000DGE, ThinkPad P120MD000NGE, ThinkPad P120MD000SGE, ThinkPad P40 Yoga, ThinkPad P40 Yoga(20GQ), ThinkPad P40 Yoga(20GQ0004GE), ThinkPad P40 Yoga(20GQ000KGE), ThinkPad P40 Yoga(20GR), ThinkPad P40

Yoga(20GR000BPB), ThinkPad P50, ThinkPad P50 Mobile Workstation, ThinkPad P50 Mobile Xeon Workstation, ThinkPad P50 Series, THINKPAD P50S, ThinkPad P50s (20FKS00400), ThinkPad P50s(20FLA004CD), ThinkPad P50s(20FLA005CD), ThinkPad P50s(20FLA006CD), ThinkPad P50s(20FLA007CD), ThinkPad P50s(20FLA008CD), ThinkPad P50s(20FLA00DCD), ThinkPad P50s(20FLA00ECD), ThinkPad P50s(20FLA00FCD), ThinkPad P50s(20FLA00HCD), ThinkPad P50s(20FLA00JCD), ThinkPad P50s(20FLA00VCD), ThinkPad P51, ThinkPad P51 20HH0016GE, ThinkPad P51 20HHA005CD, ThinkPad P51 20HHA00QCD, ThinkPad P51 20HHA00RCD, ThinkPad P51 20HHA00SCD, ThinkPad P51 20HHA01RCD, ThinkPad P51 20HHA01SCD, ThinkPad P51 20HHA01VCD, ThinkPad P51 20HHA01WCD, ThinkPad P51 20HHA01XCD, LENOVO [ThinkPad P51 20HHA01YCD](#) Laptop Battery, ThinkPad P51 20HHA021CD, ThinkPad P51 20HHA02SCD, ThinkPad P51 20HHA02XCD, ThinkPad P51 20HHA03JCD, ThinkPad P51 20HJS1FA0V, ThinkPad P51(20HJS1FA0V), Thinkpad P52, ThinkPad P52 C00, ThinkPad P52 K00, ThinkPad P52 L00, ThinkPad P52 M00, ThinkPad P52 N00, ThinkPad P52 P00, ThinkPad P52 R00, ThinkPad P52 W00, ThinkPad P5220M9A000CD, ThinkPad P5220M9A001CD, ThinkPad P5220M9A002CD, ThinkPad P5220M9A003CD, ThinkPad P5220M9A005CD, ThinkPad P5220M9A008CD, ThinkPad P5220M9A009CD, ThinkPad P5220M9A00BCD, ThinkPad P5220M9A00CCD, ThinkPad P5220M9A00DCD, ThinkPad P5220M9A00SCD, LENOVO [ThinkPad P5220M9A010CD](#) Laptop Battery, ThinkPad P52s, ThinkPad P52s DHK, ThinkPad P52s EHK, ThinkPad P52s V00, ThinkPad P52s(18CD), ThinkPad P52s(20LB 20LC), ThinkPad P52s(20LB000AMZ), ThinkPad P52s(20LB000AUK), ThinkPad P52s(20LB000BPB), ThinkPad P52s(20LB000FMZ), ThinkPad P52s(20LB000HGE), ThinkPad P52s(20LB000JGE), ThinkPad P52s(20LB000JMZ), ThinkPad P52s(20LB000KGE), ThinkPad P52s(20LB000PGE), ThinkPad P52s(20LB001TCD), ThinkPad P52s(20LBA000CD), LENOVO [ThinkPad P52s\(20LBA001CD\)](#) Laptop Battery, ThinkPad P52s(20LBA002CD), ThinkPad P52s(20LBA003CD), ThinkPad P52s(20LBA004CD), LENOVO [ThinkPad P52s\(20LBA005CD\)](#) Laptop Battery, ThinkPad P52s(20LBA006CD), ThinkPad P52s(20LBA007CD), ThinkPad P52s(20LBA008CD), ThinkPad P52s(20LBA009CD), ThinkPad P52s(20LBA00VCD), ThinkPad P52s(20LBA00WCD), ThinkPad P52s(20LBS01800), ThinkPad P52s-20LB000HGE, ThinkPad P52S-20LB001FUS, ThinkPad P52s18CD, ThinkPad P52s20LB 20LC, ThinkPad P52s20LB000AMZ, LENOVO [ThinkPad P52s20LB000AUK](#) Laptop Battery, ThinkPad P52s20LB000BPB, ThinkPad P52s20LB000FMZ, ThinkPad P52s20LB000HGE, ThinkPad P52s20LB000JGE, ThinkPad P52s20LB000JMZ, ThinkPad P52s20LB000KGE, ThinkPad P52s20LB000PGE, ThinkPad P52s20LB001TCD, ThinkPad P52s20LBA000CD, ThinkPad P52s20LBA001CD, ThinkPad P52s20LBA002CD, ThinkPad P52s20LBA003CD, ThinkPad P52s20LBA004CD, ThinkPad P52s20LBA005CD, ThinkPad P52s20LBA006CD, ThinkPad P52s20LBA007CD, ThinkPad P52s20LBA008CD, ThinkPad P52s20LBA009CD, ThinkPad P52s20LBA00VCD, ThinkPad P52s20LBA00WCD, ThinkPad P52s20LBS01800, ThinkPad P53, ThinkPad P53 20QNA00TCD, ThinkPad P53 Mobile Workstation, ThinkPad P53(20QNA006CD), ThinkPad P53(20QNA007CD), ThinkPad P53(20QNA008CD), ThinkPad P53(20QNA009CD), ThinkPad P53(20QNA00WCD), ThinkPad P70, ThinkPad P70(20ER000BGE), ThinkPad P70(20ER000CGE), ThinkPad P70(20ER000EGE), ThinkPad P70(20ER002KUS), ThinkPad P70(20ER003LGE), ThinkPad P70(20ER003MGE), ThinkPad P70(20ER003NGE), ThinkPad P70(20ER003PGE), ThinkPad P70(20ER003QGE), ThinkPad P70(20ERA004CD), ThinkPad P70(20ERA005CD), ThinkPad P70(20ERA006CD), ThinkPad P70(20ERA007CD), ThinkPad P70(20ES/20ER), ThinkPad P71, THINKPAD P71 (20HKCTO1WW), ThinkPad P71(0FCD), ThinkPad P71(20HK/20HL), ThinkPad P71(20HK0000GE), ThinkPad P71(20HK0001GE), LENOVO [ThinkPad P71\(20HK0003GE\)](#) Laptop Battery, ThinkPad P71(20HK0004GE), ThinkPad P71(20HK0005GE),

ThinkPad P71(20HKA000CD), ThinkPad P71(20HKA001CD), ThinkPad P71(20HKA002CD), ThinkPad P71(20HKA00ECD), ThinkPad P71(20HKA00FCD), ThinkPad P71(20HKA01XCD), ThinkPad P71-20HK0004GE, ThinkPad P72, ThinkPad P7220MB0000GE, ThinkPad P7220MB0005GE, ThinkPad P7220MB000EGE, ThinkPad P7220MB000JGE, ThinkPad P7220MB002UGE, ThinkPad P7220MB20MC, ThinkPad P7220MBA004CD, ThinkPad P7220MBA006CD, ThinkPad R32, ThinkPad R40, ThinkPad R400, ThinkPad R400 7443, ThinkPad R400 Series, ThinkPad R480, ThinkPad R480 Series, ThinkPad R4800NCD, ThinkPad R48016CD, ThinkPad R4801ACD, ThinkPad R4801CCD, ThinkPad R48020KR0006CD, ThinkPad R48020KRA000CD, ThinkPad R48020KRA001CD, ThinkPad R48020KRA002CD, ThinkPad R48020KRA003CD, ThinkPad R48020KRA004CD, ThinkPad R48020KRA006CD, ThinkPad R48020KRA009CD, ThinkPad R48020KRA00ACD, ThinkPad R48020KRA00BCD, ThinkPad R48020KRA00ECD, ThinkPad R48020KRA00FCD, ThinkPad R48020KRA00LCD, ThinkPad R48020KRA00VCD, ThinkPad R48020KRA00WCD, ThinkPad R48020KRA01JCD, ThinkPad R500, ThinkPad R500 Series, THINKPAD R51E, ThinkPad R580 Series, ThinkPad R60, ThinkPad R61, ThinkPad R61 7732, ThinkPad R61 7733, ThinkPad R61 7734, ThinkPad R61 7735, ThinkPad R61 7736, ThinkPad R61 7737, ThinkPad R61 7738, ThinkPad R61 7742, ThinkPad R61 7743, ThinkPad R61 7744, ThinkPad R61 7751, ThinkPad R61 7753, ThinkPad R61 7754, ThinkPad R61 7755, ThinkPad R61 8914, LENOVO [ThinkPad R61 8918](#) Laptop Battery, ThinkPad R61 8932, ThinkPad R61 8942, ThinkPad R61 8943, ThinkPad R61 Series, ThinkPad R61 SERIES (14.1 15.0 15.4 SCREEN), ThinkPad R61 Series(14.1" and 15.0" standard screens and 15.4" widescreen), ThinkPad R61e 7649, ThinkPad R61e 7650, ThinkPad R61e Series (15.4, ThinkPad R61E SERIES (15.4 SCREEN), THINKPAD R61E SERIES 15.4 SCREEN, ThinkPad R61e Series(15.4" widescreen), ThinkPad R61i, ThinkPad R61i 7650, ThinkPad R61i 7732, ThinkPad R61i 7742, ThinkPad R61i 8918, ThinkPad R61i 8932, ThinkPad R61i 8943, ThinkPad R61i Series, LENOVO [ThinkPad R61i Series \(14.1](#) Laptop Battery, ThinkPad Reserve Edition 8748, ThinkPad S1 2018, ThinkPad S1 Yoga, ThinkPad S1 Yoga 20CD0051CD, ThinkPad S1 Yoga 20CD0053CD, ThinkPad S1 Yoga 20CD0060CD, ThinkPad S1 Yoga 20CDA067CD, ThinkPad S1 Yoga 20CDA068CD, LENOVO [ThinkPad S1 Yoga 20CDA06LCD](#) Laptop Battery, ThinkPad S1 Yoga 20CDA06PCD, ThinkPad S1 Yoga 20CDA06RCD, ThinkPad S1 Yoga 20CDA06SCD, ThinkPad S1 Yoga 20CDA06TCD, ThinkPad S1 Yoga 20CDA07XCD, ThinkPad S1 Yoga 20CDS00000, ThinkPad S1 Yoga 20CDS00100, ThinkPad S1 Yoga 20CDS00200, ThinkPad S1 Yoga 20CDS00500, ThinkPad S1 Yoga 20CDS00600, LENOVO [ThinkPad S1 Yoga 20CDS00700](#) Laptop Battery, ThinkPad S1 Yoga 20CDS00800, ThinkPad S1 Yoga 20CDS00900, ThinkPad S1 Yoga 20DL005KCD, ThinkPad S1 Yoga 20DL005LCD, ThinkPad S1 Yoga 20DLA00ACD, ThinkPad S1 Yoga 20DLA00BCD, ThinkPad S1 Yoga 20DLA00CCD, ThinkPad S1 Yoga 20DLA00SCD, ThinkPad S1 Yoga 20DLA00VCD, ThinkPad S1 Yoga 20DLA010CD, ThinkPad S1 Yoga 20DLA01UCD, LENOVO [ThinkPad S1 Yoga\(20CD0051CD\)](#) Laptop Battery, ThinkPad S1 Yoga(20CD0053CD), ThinkPad S1 Yoga(20CD0057CD), ThinkPad S1 Yoga(20CDA067CD), ThinkPad S1 Yoga(20CDA068CD), ThinkPad S1 Yoga(20CDA06HCD), ThinkPad S1 Yoga(20CDA06LCD), ThinkPad S1 Yoga(20CDA06MCD), ThinkPad S1 Yoga(20CDA06NCD), ThinkPad S1 Yoga(20CDA06RCD), ThinkPad S1 Yoga(20CDA06SCD), ThinkPad S1 Yoga(20CDA06TCD), ThinkPad S1 Yoga(20CDA07XCD), ThinkPad S1 Yoga(20CDS00000), ThinkPad S1 Yoga(20CDS00100), ThinkPad S1 Yoga(20CDS00500), ThinkPad S1 Yoga(20CDS00600), ThinkPad S1 Yoga(20CDS00900), ThinkPad S1 Yoga(20DLA009CD), ThinkPad S1 Yoga(20DLA00BCD), Thinkpad S2, ThinkPad S2 2018, ThinkPad S2 2018 I5-8250U, ThinkPad S2 2018 I58250U, ThinkPad S2 20GKS06300, ThinkPad S2 Yoga 2018, THINKPAD S230 TWIST, ThinkPad S230u, LENOVO [ThinkPad S230u Twist](#) Laptop Battery, ThinkPad S230u Twist 33473QC, Thinkpad S3 S431, ThinkPad S3 Touch(20AY0036CD), ThinkPad S3 Touch(20AY0039CD), ThinkPad S3 Touch(20AY005FCD),

ThinkPad S3 Touch(20AY005HCD), ThinkPad S3 Touch(20AYA05DCD), ThinkPad S3 Touch(20AYA05ECD), ThinkPad S3 Touch(20AYS00000), ThinkPad S3 Touch(20AYS00200), ThinkPad S3 Touch(20AYS00300), LENOVO [ThinkPad S3 Yoga](#) Laptop Battery, ThinkPad S3 Yoga 14 20DM, ThinkPad S3 Yoga 14 20DM003RGE, ThinkPad S3 Yoga 14 20DM003WGE, ThinkPad S3 Yoga 14 20DM008EGE, ThinkPad S3 Yoga 14 20DM009KGE, ThinkPad S3 Yoga 14 20DM009NGE, ThinkPad S3 Yoga 14 20DM00APGE, ThinkPad S3 Yoga 14 20DM00AQGE, ThinkPad S3 Yoga(20AYA07TCD), ThinkPad S3 Yoga(20DM0004CD), ThinkPad S3 Yoga(20DM000ACD), ThinkPad S3 Yoga(20DM000CCD), ThinkPad S3 Yoga(20DM000ECD), ThinkPad S3 Yoga(20DM000RCD), ThinkPad S3 Yoga(20DM006SCD), ThinkPad S3 Yoga(20DM006UCD), ThinkPad S3 Yoga(20DMA000CD), ThinkPad S3 Yoga(20DMA001CD), ThinkPad S3 Yoga(20DMA005CD), LENOVO [ThinkPad S3 Yoga\(20DMA008CD\)](#) Laptop Battery, ThinkPad S3 Yoga(20DMA012CD), ThinkPad S3 Yoga(20DMA014CD), ThinkPad S3 Yoga(20DMA015CD), ThinkPad S3 Yoga(20DMA01HCD), ThinkPad S3 Yoga(20DMA024CD), ThinkPad S3 Yoga(20DMA025CD), ThinkPad S3 Yoga(20DMA026CD), ThinkPad S3 Yoga(20DMA06WCD), ThinkPad S3(20AX0006CD), ThinkPad S3(20AX0007CD), ThinkPad S3(20AX000ACD), ThinkPad S3(20AX000BCD), ThinkPad S3(20AX000CCD), ThinkPad S3(20AX000DCD), ThinkPad S3(20AX000ECD), ThinkPad S3(20AX000FCD), ThinkPad S3(20AX005PCD), ThinkPad S3(20AX005RCD), ThinkPad S3(20AXA00GCD), LENOVO [ThinkPad S3\(20AXA00HCD\)](#) Laptop Battery, ThinkPad S3(20AXS00100), ThinkPad S3(20AXS00500), ThinkPad S3(20AXS00900), ThinkPad S3(20AXS00B00), ThinkPad S3(20AXS00C00), ThinkPad S3(20AXS00E00), ThinkPad S3(20AY0035CD), ThinkPad S3(20AY003BCD), ThinkPad S3(20AY003ECD), ThinkPad S3(20AYA05SCD), ThinkPad S3(20AYA05UCD), ThinkPad S3(20AYA06UCD), ThinkPad S3(20AYA070CD), ThinkPad S3(20AYA071CD), ThinkPad S3(20AYA079CD), ThinkPad S3(20AYA07ACD), ThinkPad S3(20AYA07FCD), ThinkPad S3(20AYA07GCD), ThinkPad S3(20AYA07JCD), LENOVO [ThinkPad S3\(20AYA07UCD\)](#) Laptop Battery, ThinkPad S3(20AYA07VCD), ThinkPad S3(20AYA081CD), ThinkPad S3(20AYA084CD), ThinkPad S3(20AYS00A00), Thinkpad S3-S431, Thinkpad S3-S440, ThinkPad S431, ThinkPad S440, Thinkpad S440 20AY, LENOVO [Thinkpad S440 20AY-001DMS](#) Laptop Battery, ThinkPad S5, ThinkPad S5 E560P, ThinkPad S5 Yoga, ThinkPad S5 Yoga(20B3A03LCD), ThinkPad S5 Yoga(20DQ000ACD), ThinkPad S5 Yoga(20DQ002BCD), ThinkPad S5 Yoga(20DQ002FCD), ThinkPad S5 Yoga(20DQ002RCD), ThinkPad S5 Yoga(20DQ002SCD), ThinkPad S5 Yoga(20DQ002TCD), ThinkPad S5 Yoga(20DQA00JCD), ThinkPad S5 Yoga(20DQA00KCD), ThinkPad S5 Yoga(20DQA00LCD), ThinkPad S5 Yoga(20DQA00MCD), ThinkPad S5 Yoga(20DQA00NCD), ThinkPad S5 Yoga(20DQA00PCD), ThinkPad S5 Yoga(20DQA00SCD), LENOVO [ThinkPad S5\(20B0000PCD\)](#) Laptop Battery, ThinkPad S5(20B0000QCD), ThinkPad S5(20B0000SCD), ThinkPad S5(20B0000XCD), ThinkPad S5(20B00010CD), ThinkPad S5(20B0001ACD), ThinkPad S5(20B0001BCD), ThinkPad S5(20B0001CCD), ThinkPad S5(20B0001DCD), ThinkPad S5(20B0001ECD), ThinkPad S5(20B0001FCD), ThinkPad S5(20B0001GCD), ThinkPad S5(20B0001HCD), ThinkPad S5(20B0S00100), ThinkPad S5(20B0S00400), ThinkPad S5(20B3A022CD), ThinkPad S5(20B3A023CD), ThinkPad S5(20B3A02WCD), ThinkPad S5(20B3A02XCD), ThinkPad S5(20B3A036CD), LENOVO [ThinkPad S5\(20B3A037CD\)](#) Laptop Battery, ThinkPad S5(20B3A03BCD), ThinkPad S5(20B3S00200), ThinkPad S5(20G4A000CD), ThinkPad S5(20G4A001CD), ThinkPad S5(20G4A003CD), ThinkPad S5(20G4A004CD), ThinkPad S5(20G4A008CD), ThinkPad S5(20G4A009CD), ThinkPad S5(20G4A00MCD), ThinkPad S5(20G4A00NCD), ThinkPad S5(20G4S00000), ThinkPad S5(20G4S00100), ThinkPad S531, ThinkPad S540, ThinkPad series, THINKPAD SL 510, ThinkPad SL300, ThinkPad SL300 273867B, LENOVO

[ThinkPad SL400](#) Laptop Battery, ThinkPad SL410, ThinkPad SL410 2842, ThinkPad SL410 2874, ThinkPad SL410 Series, ThinkPad SL410K, ThinkPad SL410k 2842, ThinkPad SL500, ThinkPad SL510, ThinkPad SL510 2847, ThinkPad SL510 2847RE4, ThinkPad SL510 2875, ThinkPad SL510 Series, ThinkPad T400, ThinkPad T400 2764, LENOVO [ThinkPad T400 2765](#) Laptop Battery, ThinkPad T400 6473, ThinkPad T400 7417, ThinkPad T400 Series, ThinkPad T400s, ThinkPad T400s 2801, ThinkPad T400s 2808, ThinkPad T400s 2809, ThinkPad T400s 2815, ThinkPad T400s 2823, LENOVO [ThinkPad T400s 2824](#) Laptop Battery, ThinkPad T400s 2825, ThinkPad T410, ThinkPad T410 2516, ThinkPad T410 2518, ThinkPad T410 2519, ThinkPad T410 2522, ThinkPad T410 2537, ThinkPad T410 2538, ThinkPad T410 2539, ThinkPad T410-i5, LENOVO [ThinkPad T410-i7](#) Laptop Battery, ThinkPad T410i, ThinkPad T410i 2516, ThinkPad T410i 2518, ThinkPad T410s, ThinkPad T410SI, Thinkpad T42 2373, ThinkPad T420, ThinkPad T420 (4236FJ1), ThinkPad T420(4179A47), ThinkPad T420(4179AC8), ThinkPad T420(4179AC9), LENOVO [ThinkPad T420\(4179GVC\)](#) Laptop Battery, ThinkPad T420(4179GWC), ThinkPad T420(418062C), ThinkPad T420(418065C), ThinkPad T420(4180A65), ThinkPad T420(4180AE3), ThinkPad T420(4180AE4), ThinkPad T420(4180AE5), ThinkPad T420(4180AF1), ThinkPad T420(4180AV5), ThinkPad T420(4180AV6), ThinkPad T420(4180AY1), ThinkPad T420(4180AY2), ThinkPad T420(4180BR3), ThinkPad T420(4180CR7), ThinkPad T420(4180CR8), LENOVO [ThinkPad T420\(4180ES4\)](#) Laptop Battery, ThinkPad T420(4180ET9), ThinkPad T420(4180EU1), ThinkPad T420(4180EV5), ThinkPad T420(4180F11), ThinkPad T420(4180FR5), ThinkPad T420(4180G31), ThinkPad T420(4180G67), ThinkPad T420(4180G68), ThinkPad T420(4180HB8), ThinkPad T420(4180HN6), ThinkPad T420(4180J4C), ThinkPad T420(4180K17), ThinkPad T420(4180LZC), ThinkPad T420(4180MMC), ThinkPad T420(4180N5C), ThinkPad T420(4180N9C), ThinkPad T420(4180NC5), ThinkPad T420(4180PKC), ThinkPad T420(4180PLC), ThinkPad T420(4180PMC), ThinkPad T420(4180PNC), ThinkPad T420(4180PPC), ThinkPad T420(4180PQC), ThinkPad T420(4180PSC), ThinkPad T420(4180Q7C), ThinkPad T420(4180Q8C), ThinkPad T420(4180Q9C), ThinkPad T420(4180RW1), ThinkPad T420(42364N7), LENOVO [ThinkPad T420\(423664C\)](#) Laptop Battery, ThinkPad T420(4236DZ4), ThinkPad T420(4236ED8), ThinkPad T420(4236EJ1), ThinkPad T420(4236EZ7), ThinkPad T420(4236FZ3), ThinkPad T420(4236H20), LENOVO [ThinkPad T420\(4236HQ6\)](#) Laptop Battery, ThinkPad T420(4236HY2), ThinkPad T420(4236L56), ThinkPad T420(4236PRC), ThinkPad T4204179A47, ThinkPad T4204179AC8, ThinkPad T4204179AC9, ThinkPad T4204179GVC, ThinkPad T4204179GWC, ThinkPad T420418062C, ThinkPad T420418065C, ThinkPad T4204180A65, LENOVO [ThinkPad T4204180AE3](#) Laptop Battery, ThinkPad T4204180AE4, ThinkPad T4204180AE5, ThinkPad T4204180AF1, ThinkPad T4204180AV5, ThinkPad T4204180AV6, ThinkPad T4204180AY1, ThinkPad T4204180AY2, ThinkPad T4204180BR3, ThinkPad T4204180CR7, ThinkPad T4204180CR8, ThinkPad T4204180ES4, ThinkPad T4204180ET9, ThinkPad T4204180EU1, ThinkPad T4204180EV5, ThinkPad T4204180F11, ThinkPad T4204180FR5, ThinkPad T4204180G31, ThinkPad T4204180G67, ThinkPad T4204180G68, ThinkPad T4204180HB8, ThinkPad T4204180HN6, ThinkPad T4204180J4C, ThinkPad T4204180K17, ThinkPad T4204180LZC, ThinkPad T4204180MMC, ThinkPad T4204180N5C, LENOVO [ThinkPad T4204180N9C](#) Laptop Battery, ThinkPad T4204180NC5, ThinkPad T4204180PKC, ThinkPad T4204180PLC, LENOVO [ThinkPad T4204180PMC](#) Laptop Battery, ThinkPad T4204180PNC, ThinkPad T4204180PPC, ThinkPad T4204180PQC, ThinkPad T4204180PSC, ThinkPad T4204180Q7C, ThinkPad T4204180Q8C, ThinkPad T4204180Q9C, ThinkPad T4204180RW1, ThinkPad T42042364N7, ThinkPad T420423664C, ThinkPad T4204236DZ4, ThinkPad T4204236ED8, ThinkPad T4204236EJ1, ThinkPad T4204236EZ7, ThinkPad T4204236FZ3, ThinkPad T4204236H20, ThinkPad T4204236HQ6, ThinkPad T4204236HY2, ThinkPad T4204236L56, ThinkPad T4204236PRC, ThinkPad T420i, ThinkPad T420s, ThinkPad T420s 4170CTO, THINKPAD T420S 4173-CTO,

ThinkPad T420s Series, ThinkPad T420si, ThinkPad T420si Series, ThinkPad T430, ThinkPad T430 (2349I62), ThinkPad T430 2349-DL5, ThinkPad T430i, LENOVO [ThinkPad T430S](#) Laptop Battery, Thinkpad T430s 2352-CTO S, ThinkPad T430s Series, ThinkPad T430si Series, THINKPAD T430U Series, ThinkPad T430u Ultrabook, ThinkPad T431s, ThinkPad T440, ThinkPad T440 20B6, ThinkPad T440 20B6002, ThinkPad T440 20B6005, ThinkPad T440 20B6006, ThinkPad T440 20B6007, ThinkPad T440 20B6008, ThinkPad T440 20B6009, ThinkPad T440 20B7, ThinkPad T440 20B7003, ThinkPad T440 20B7004, ThinkPad T440 20B7005, ThinkPad T440 20B7006, THINKPAD T440 20B7008, ThinkPad T440 6005, ThinkPad T440 6006, LENOVO [ThinkPad T440 7000](#) Laptop Battery, ThinkPad T440 7003, ThinkPad T440 7004, ThinkPad T440(20B6002XCD), ThinkPad T440(20B6002YCD), LENOVO [ThinkPad T440\(20B60037CD\)](#) Laptop Battery, ThinkPad T440(20B6A03ECD), ThinkPad T440(20B6A03FCD), ThinkPad T440(20B6A03GCD), ThinkPad T440(20B6A03HCD), ThinkPad T440(20B6A03KCD), ThinkPad T440(20B6A03LCD), ThinkPad T440(20B6A03NCD), ThinkPad T440(20B6A03SCD), ThinkPad T440(20B6A04QCD), ThinkPad T440(20B6A04RCD), ThinkPad T440(20B6A04SCD), ThinkPad T440(20B6A04TCD), ThinkPad T440(20B6A04UCD), ThinkPad T440(20B6A04VCD), ThinkPad T440(20B6A050CD), ThinkPad T440(20B6A059CD), ThinkPad T440(20B6A05ACD), ThinkPad T440(20B6A05GCD), ThinkPad T440(20B6A069CD), ThinkPad T440(20B6A06PCD), ThinkPad T440(20B6A06TCD), ThinkPad T440(20B6A07SCD), ThinkPad T440(20B6A07TCD), ThinkPad T440(20B6A07UCD), ThinkPad T440(20B6A0BCCD), ThinkPad T440(20B6S00200), ThinkPad T440(20B6S00300), ThinkPad T440(20B6S00400), LENOVO [ThinkPad T440\(20B6S00G00\)](#) Laptop Battery, ThinkPad T440(20B6S00M00), ThinkPad T440(20B6S00N00), ThinkPad T440(20B6S00P00), ThinkPad T440(20B6S00Q00), ThinkPad T440(20B6S00T00), LENOVO [ThinkPad T440\(20B6S00U00\)](#) Laptop Battery, ThinkPad T440(20B6S00V00), ThinkPad T440(20B6S00W00), LENOVO [ThinkPad T440\(20B6S00X00\)](#) Laptop Battery, ThinkPad T440(20B6S01Y00), ThinkPad T440(20B6S02100), ThinkPad T440(20B6S02X00), ThinkPad T440(20B6S03900), ThinkPad T440(20B6S06T00), ThinkPad T440(20B7S0NT0E), ThinkPad T440(20B7S0PM0A), ThinkPad T440(20B7S1AA0H), ThinkPad T440(31P20B6S01W00), Thinkpad T440p, ThinkPad T440p 20AN-006VGE, ThinkPad T440p(20ANA079CD), ThinkPad T440p(20ANA07ACD), ThinkPad T440p(20ANA07NCD), ThinkPad T440p(20ANA07PCD), ThinkPad T440p(20ANA092CD), ThinkPad T440p(20ANA0A1CD), ThinkPad T440p(20ANA0AJCD), ThinkPad T440p(20ANA0AKCD), ThinkPad T440p(20ANA0ALCD), ThinkPad T440p(20ANA0AMCD), ThinkPad T440p(20ANA0DXCD), ThinkPad T440p(20ANA0E0CD), ThinkPad T440p(20ANA0E1CD), ThinkPad T440p(20ANA0N4CD), ThinkPad T440p(20ANS01Q00), ThinkPad T440p(20ANS04G00), ThinkPad T440p(20AW0009CD), ThinkPad T440p(20AW000GCD), ThinkPad T440p(20AWS0KN01), ThinkPad T440p(20AWS0KP01), ThinkPad T440p(20AWS0YB04), ThinkPad T440p-QCD, ThinkPad T440S, ThinkPad T440s 20AQ-S00500, ThinkPad T440s 20AR000, ThinkPad T440s 20AR0040, ThinkPad T440s(20AQ001FCD), ThinkPad T440s(20AQ0023CD), ThinkPad T440s(20AQ0024CD), ThinkPad T440s(20AQ0025CD), ThinkPad T440s(20AQ0026CD), ThinkPad T440s(20AQ0031CD), ThinkPad T440s(20AQA09GCD), ThinkPad T440s(20AQA09HCD), ThinkPad T440s(20AQA09KCD), ThinkPad T440s(20AQA0C5CD), ThinkPad T440s(20AQS01000), ThinkPad T440s(20AQS01100), ThinkPad T440s(20AQS01200), ThinkPad T440s(20AQS01300), LENOVO [ThinkPad T440s\(20AQS01400\)](#) Laptop Battery, ThinkPad T440s(20AR0017CD), ThinkPad T440s(20AR001ACD), ThinkPad T440s(20AR001JCD), ThinkPad T440s(20ARA0QHCD), ThinkPad T440s(20ARA0QJCD), ThinkPad T440s(20ARS0JM00), ThinkPad T440s(20ARS11402), ThinkPad T440s(20ARS152001), ThinkPad T440s(20ARS1Y002), ThinkPad T440s(20ARS23X0A), ThinkPad T450, ThinkPad T450 20BV, ThinkPad T450 20DJ, ThinkPad T450(20BUA0RNC), ThinkPad T450(20BV0033CD), ThinkPad T450(20BVA00TCD), ThinkPad T450(20BVA00YCD), ThinkPad

T450(20BVA010CD), ThinkPad T450(20BVA011CD), ThinkPad T450(20BVA012CD), ThinkPad T450(20BVA013CD), LENOVO [ThinkPad T450\(20BVA014CD\)](#) Laptop Battery, ThinkPad T450(20BVA016CD), ThinkPad T450(20BVA017C), ThinkPad T450(20BVA017CD), ThinkPad T450(20BVA01GCD), ThinkPad T450(20BVA01HCD), ThinkPad T450(20BVA01KCD), ThinkPad T450(20BVA01MCD), ThinkPad T450(20BVA024CD), ThinkPad T450(20BVA02ACD), ThinkPad T450(20BVA02NCD), ThinkPad T450(20BVA02PCD), ThinkPad T450(20BVA02QCD), ThinkPad T450(20BVA02RCD), ThinkPad T450(20BVA02SCD), ThinkPad T450(20BVA02TCD), ThinkPad T450(20BVA03KCD), ThinkPad T450(20BVA03LCD), ThinkPad T450(20BVA03MCD), ThinkPad T450(20BVA03NCD), LENOVO [ThinkPad T450\(20BVA03PCD\)](#) Laptop Battery, ThinkPad T450(20BVA03YCD), ThinkPad T450(20BVA043CD), ThinkPad T450(20BVA044CD), ThinkPad T450-3LCD, ThinkPad T450s, ThinkPad T450s 20BW000, ThinkPad T450s 20BX00, ThinkPad T450s(20BW000LCD), ThinkPad T450s(20BX002TCD), ThinkPad T450s(20BXA00RCD), ThinkPad T450s(20BXA00SCD), ThinkPad T450s(20BXA00UCD), ThinkPad T450s(20BXA00WCD), ThinkPad T450s(20BXA00XCD), ThinkPad T450s(20BXA010CD), ThinkPad T450s(20BXA011CD), ThinkPad T450s(20BXA012CD), ThinkPad T450s(20BXA022CD), ThinkPad T450s(20BXA03CCD), ThinkPad T460, ThinkPad T460 20FM00, ThinkPad T460 20FN002, ThinkPad T460 20FN003, LENOVO [ThinkPad T460\(20FM0034UK\)](#) Laptop Battery, ThinkPad T460(20FN003LGE), ThinkPad T460(20FN003NGE), ThinkPad T460(20FN003PGE), ThinkPad T460(20FNA01VCD), ThinkPad T460(20FNA01WCD), ThinkPad T460(20FNA01XCD), ThinkPad T460(20FNA01YCD), ThinkPad T460(20FNA020CD), ThinkPad T460(20FNA021CD), ThinkPad T460(20FNA022CD), ThinkPad T460(20FNA023CD), ThinkPad T460(20FNA024CD), ThinkPad T460(20FNA026CD), ThinkPad T460(20FNA027CD), ThinkPad T460(20FNA028CD), ThinkPad T460(20FNA029CD), ThinkPad T460(20FNA02ACD), ThinkPad T460(20FNA02BCD), ThinkPad T460(20FNA02DCD), LENOVO [ThinkPad T460\(20FNA02FCD\)](#) Laptop Battery, ThinkPad T460(20FNA02GCD), ThinkPad T460(20FNA036CD), ThinkPad T460(20FNA03DCD), ThinkPad T460(20FNA03ECD), ThinkPad T460(20FNA03YCD), ThinkPad T460(20FNA040CD), ThinkPad T460(20FNA04DCD), ThinkPad T460(20FNA068CD), ThinkPad T460(20FNA069CD), ThinkPad T460(20FNA06ACD), ThinkPad T460(20FNA06CCD), ThinkPad T460(20FNA06DCD), ThinkPad T460(20FNA06ECD), ThinkPad T460(20FNA06FCD), ThinkPad T460P, LENOVO [ThinkPad T460p 20FW000](#) Laptop Battery, ThinkPad T460P(20FW002UCD), ThinkPad T460P(20FWA00HCD), ThinkPad T460P(20FWA00JCD), ThinkPad T460P(20FWA00NCD), LENOVO [ThinkPad T460P\(20FWA00PCD\)](#) Laptop Battery, ThinkPad T460P(20FWA00TCD), ThinkPad T460P(20FWA00VCD), ThinkPad T460P(20FWA00WCD), ThinkPad T460P(20FWA00XCD), ThinkPad T460S, ThinkPad T460s (20F9-001QAU), ThinkPad T460s (20F9-0026AU), ThinkPad T460s (20F9-003MAU), ThinkPad T460s (20F9002YCD), ThinkPad T460s (20F9A02MCD), ThinkPad T460s (20F9A02NCD), ThinkPad T460s (20F9A02PCD), ThinkPad T460s (20F9A02RCD), ThinkPad T460s (20F9A031CD), ThinkPad T460s (20F9A032CD), ThinkPad T460s (20F9A033CD), ThinkPad T460s (20F9A034CD), ThinkPad T460s (20F9A03UCD), ThinkPad T460s (20FA-001AAU), ThinkPad T460s (20FA-001BAU), ThinkPad T460s (20FA-001EAU), ThinkPad T460s (20FA-001FAU), ThinkPad T460s (20FA-0026AU), ThinkPad T460s (20FA-002UAU), ThinkPad T460s (20FA-003YAU), ThinkPad T460s (20FA-A01EAU), LENOVO [ThinkPad T460s \(20FA-A01GAU\)](#) Laptop Battery, ThinkPad T460s (20FA-S05A01), ThinkPad T460s (20FA-S0BM00), ThinkPad T460s (20FA-S0KD00), ThinkPad T460s (20FA-S0KE00), ThinkPad T460s (20FA-S0NF00), ThinkPad T460s (20FA-S11300), ThinkPad T460s Series, ThinkPad T470, THINKPAD T470 20-HE-SOSS207, ThinkPad T470(0HDA004CD), ThinkPad T470(20HD002RCD), ThinkPad T470(20HD002TCD), ThinkPad T470(20HD002XCD), ThinkPad T470(20HD002YCD), ThinkPad T470(20HDA003CD), ThinkPad T470(20HDA004CD), ThinkPad T470(20HDA007CD),

ThinkPad T470(20HDA008CD), ThinkPad T470(20HDA00PCD), LENOVO [ThinkPad T470\(20HDA00QCD\)](#) Laptop Battery, ThinkPad T470(20HDA01FCD), ThinkPad T470(20HDA01LCD), ThinkPad T470(20HDA01VCD), ThinkPad T470(20HDA02ACD), ThinkPad T470(20HDA030CD), ThinkPad T470(20HDA03FCD), ThinkPad T470(20HDA03GCD), ThinkPad T470(20HDA03KCD), ThinkPad T470(20JMA004CD), ThinkPad T470(20JMA006CD), ThinkPad T470(20JMA009CD), ThinkPad T470(20JMA00BCD), ThinkPad T470(20JMA00CCD), ThinkPad T470(20JMA00ECD), ThinkPad T470(20JMA01HCD), ThinkPad T470(20JMA01KCD), ThinkPad T470p, ThinkPad T470p(20HDA01VCD), ThinkPad T470p(20J6002YCD), ThinkPad T470p(20J6A012CD), ThinkPad T470p(20J6A018CD), ThinkPad T470p(20J6A019CD), ThinkPad T470p(20J6A01CCD), ThinkPad T470s, ThinkPad T470s (20HF0000GE), ThinkPad T470s (20HF0001GE), ThinkPad T470s (20HF0016GE), ThinkPad T470s (20HF0047GE), ThinkPad T470s (20HF004UGE), ThinkPad T470s (20HGS00V00), ThinkPad T480, ThinkPad T480 0HH, ThinkPad T480 8HK, ThinkPad T480 EHH, ThinkPad T480 UHH, ThinkPad T480(20L5001RCD), ThinkPad T480(20L5001SCD), ThinkPad T480(20L5001TCD), ThinkPad T480(20L5001YCD), ThinkPad T480(20L50021CD), ThinkPad T480(20L5A000CD), ThinkPad T480(20L5A001CD), ThinkPad T480(20L5A003CD), ThinkPad T480(20L5A004CD), ThinkPad T480(20L5A005CD), ThinkPad T480(20L5A006CD), ThinkPad T480(20L5A007CD), ThinkPad T480(20L5A008CD), ThinkPad T480(20L5A009CD), ThinkPad T480(20L5A00DCD), ThinkPad T480(20L5A00ECD), ThinkPad T480(20L5A00HCD), ThinkPad T480(20L5A00JCD), ThinkPad T480(20L5A00KCD), ThinkPad T480(20L5A00LCD), ThinkPad T480(20L5A00MCD), ThinkPad T480(20L5A00NCD), ThinkPad T480(20L5A00PCD), ThinkPad T480(20L5A00QCD), ThinkPad T480(20L5A00VCD), ThinkPad T480(20L5A00WCD), ThinkPad T480(20L5A00XCD), ThinkPad T480(20L5A01KCD), ThinkPad T480(20L5A01LCD), LENOVO [ThinkPad T480\(20L5A02NCD\)](#) Laptop Battery, ThinkPad T480(20L5A04SCD), ThinkPad T480(20L5A054CD), ThinkPad T480(20L5A057CD), ThinkPad T480s, ThinkPad T480s-20L8S02D00, ThinkPad T480s20L7002LCD, ThinkPad T480s20L7002XCD, ThinkPad T480s20L7A006CD, LENOVO [ThinkPad T480s20L7A00TCD](#) Laptop Battery, ThinkPad T480s20L7A00UCD, ThinkPad T480s20L7A011CD, ThinkPad T480s20L7A01WCD, ThinkPad T480s20L8S02D00, ThinkPad T490s, ThinkPad T490s(20NX000RCD), LENOVO [ThinkPad T490s\(20NX0015CD\)](#) Laptop Battery, ThinkPad T490s-20NYS02A00, ThinkPad T500, ThinkPad T500 Series, LENOVO [ThinkPad T510](#) Laptop Battery, ThinkPad T510 4313, ThinkPad T510 4314, ThinkPad T510 4339, ThinkPad T510 4349, LENOVO [ThinkPad T510 4384](#) Laptop Battery, ThinkPad T510 4484, ThinkPad T510 4873, ThinkPad T510i, ThinkPad T510i 4313, ThinkPad T510i 4314, ThinkPad T520, ThinkPad T520i, ThinkPad T530, ThinkPad T530 2429, LENOVO [ThinkPad T530i](#) Laptop Battery, Thinkpad T540P, ThinkPad T540p(20BF002FCD), ThinkPad T540p(20BF002VCD), ThinkPad T540p(20BFA0Y200), LENOVO [ThinkPad T540p\(20BFA0Y300\)](#) Laptop Battery, ThinkPad T540p(20BFA0Y400), ThinkPad T540p(20BFA0Y500), ThinkPad T540p(20BFA0YX00), ThinkPad T540p(20BFA1AR00), ThinkPad T540p(20BFS01C00), ThinkPad T540p(20BFS01L00), ThinkPad T540p(20BFS01M00), ThinkPad T540p(20BFS02J00), ThinkPad T540p(20BFS02MCD), ThinkPad T540p(20BFS02N00), ThinkPad T540p(20BFS03F00), ThinkPad T540p(20BFS03H00), ThinkPad T540p(20BFS06X00), ThinkPad T540p(20BFS07000), ThinkPad T540p(20BFS0B800), ThinkPad T540p(20BFS0BA00), ThinkPad T540p(20BFS0BT00), LENOVO [ThinkPad T540p\(20BFS0BV00\)](#) Laptop Battery, ThinkPad T550, ThinkPad T550 20CJ, ThinkPad T550 20CK, ThinkPad T550 20CK0000, ThinkPad T550 20CK002, ThinkPad T550(20CJ-J0007AU), LENOVO [ThinkPad T550\(20CJ-J0008AU\)](#) Laptop Battery, ThinkPad T550(20CJ-J0009AU), ThinkPad T550(20CJ-J000DAU), ThinkPad T550(20CJ-J000FAU), ThinkPad T550(20CJ-J000HAU), ThinkPad T550(20CJ-J000JAU), ThinkPad T550(20CJ-J000KAU), ThinkPad T550(20CJ-J000XAU), ThinkPad T550(20CJ-J000YAU), ThinkPad

T550(20CJ-J0010AU), ThinkPad T550(20CJ-J0011AU), ThinkPad T550(20CJ-J0012AU), ThinkPad T550(20CJ-J0013AU), ThinkPad T550(20CJ-J0019AU), ThinkPad T550(20CJ-J001AAU), ThinkPad T550(20CJ-J001BAU), ThinkPad T550(20CJ-J001CAU), ThinkPad T550(20CJ-J001DAU), ThinkPad T550(20CJ-J001EAU), ThinkPad T550(20CJ-J001FAU), LENOVO [ThinkPad T550\(20CJ-J001GAU\)](#) Laptop Battery, ThinkPad T550(20CJ-J001HAU), ThinkPad T550(20CJ-J001JAU), ThinkPad T550(20CJ-J001KAU), ThinkPad T550(20CJ-J001LAU), ThinkPad T550(20CJ-J001MAU), ThinkPad T550(20CJ-J001NAU), ThinkPad T550(20CJ-J001PAU), ThinkPad T550(20CJ-J001QAU), ThinkPad T550(20CJ-J001RAU), ThinkPad T550(20CJ-J001SAU), ThinkPad T550(20CJ-J001TAU), ThinkPad T550(20CJ-J001UAU), ThinkPad T550(20CJ-J001VAU), ThinkPad T550(20CJ-J001WAU), ThinkPad T550(20CJ-J001XAU), ThinkPad T550(20CJ-JA002AU), ThinkPad T550(20CJ-JA00BAU), ThinkPad T550(20CJ-JA00DAU), ThinkPad T550(20CJ-JA00EAU), LENOVO [ThinkPad T550\(20CJ-JA00GAU\)](#) Laptop Battery, ThinkPad T550(20CJ-JA00RAU), ThinkPad T550(20CJ-JA00VAU), ThinkPad T550(20CJ-JA00WAU), ThinkPad T550(20CJ-JA01AAU), ThinkPad T550(20CJ-JA01HAU), ThinkPad T550(20CJ-JA01QAU), ThinkPad T550(20CJ-JA026AU), ThinkPad T550(20CJ-JA027AU), ThinkPad T550(20CJ-JA02AAU), ThinkPad T550(20CJ-JA03QAU), ThinkPad T550(20CJ-JA03YAU), ThinkPad T550(20CJ0007RI), ThinkPad T550(20CK-K000YAU), ThinkPad T550(20CK-K0010AU), ThinkPad T550(20CK-K0011AU), ThinkPad T550(20CK-K0012AU), ThinkPad T550(20CK-K0013AU), ThinkPad T550(20CK-K0014AU), ThinkPad T550(20CK-K0015AU), ThinkPad T550(20CK-K0026AU), LENOVO [ThinkPad T550\(20CK-K0027AU\)](#) Laptop Battery, ThinkPad T550(20CK-K0028AU), ThinkPad T550(20CK-K0029AU), ThinkPad T550(20CK-K002AAU), ThinkPad T550(20CK-K002BAU), ThinkPad T550(20CK-K002CAU), ThinkPad T550(20CK-K002DAU), ThinkPad T550(20CK-K002EAU), ThinkPad T550(20CK-K002FAU), ThinkPad T550(20CK-K002GAU), ThinkPad T550(20CK-K002HAU), ThinkPad T550(20CK-K002JAU), ThinkPad T550(20CK-K002KAU), ThinkPad T550(20CK-K002LAU), ThinkPad T550(20CK-K002MAU), ThinkPad T550(20CK-K002NAU), ThinkPad T550(20CK-K002PAU), ThinkPad T550(20CK-K002QAU), ThinkPad T550(20CK-K002RAU), ThinkPad T550(20CK-KA007AU), LENOVO [ThinkPad T550\(20CK-KA008AU\)](#) Laptop Battery, ThinkPad T550(20CK-KA00AAU), ThinkPad T550(20CK0000GE), Thinkpad T550(20CK0002GE), ThinkPad T550(20CK0004GE), ThinkPad T550(20CK000VGE), ThinkPad T550(20CK003EGE), ThinkPad T550(20CK003FGE), LENOVO [ThinkPad T550\(20CK003LGE\)](#) Laptop Battery, ThinkPad T550(20CKA00DCD), ThinkPad T550(20CKA00ECD), ThinkPad T550(20CKA00FCD), ThinkPad T550(20CKA00GCD), ThinkPad T550(20CKA00HCD), ThinkPad T550(20CKA00QCD), ThinkPad T550(20CKA00TCD), ThinkPad T550(20CKA00UCD), ThinkPad T550S, THINKPAD T560, ThinkPad T560 20FH002, ThinkPad T560(20FH, ThinkPad T560(20FH 20FJ, ThinkPad T560(20FH0019CD), ThinkPad T560(20FH001EGE), ThinkPad T560(20FH0022GE), ThinkPad T560(20FHA00CCD), ThinkPad T560(20FHA00DCD), ThinkPad T560(20FHA00FCD), ThinkPad T560(20FHA00HCD), ThinkPad T560(20FHA00JCD), ThinkPad T560(20FJ0023GE), ThinkPad T560(20FJS27D00), ThinkPad T570, ThinkPad T570(20H90038CD), ThinkPad T570(20H9003ACD), ThinkPad T570(20H9003BCD), ThinkPad T570(20H9A001CD), ThinkPad T570(20H9A009CD), ThinkPad T570(20H9A00BCD), ThinkPad T570(20H9A00PCD), ThinkPad T570(20H9A00QCD), ThinkPad T570(20H9A00SCD), ThinkPad T570(20H9A00TCD), ThinkPad T570(20H9A00XCD), ThinkPad T570(20JWA005CD), ThinkPad T570-20HAS01E00, ThinkPad T57020HAS01E00, ThinkPad T580, ThinkPad T580-20LAS01H00, ThinkPad T60, ThinkPad T60 Series, ThinkPad T60P, ThinkPad T60p Series, ThinkPad T61, ThinkPad T61 1959, ThinkPad T61 6377, ThinkPad T61 6378, ThinkPad T61 6379, ThinkPad T61 6457, ThinkPad T61 6460, ThinkPad T61 6466, ThinkPad T61 6480, ThinkPad T61 6481, ThinkPad T61 7658, ThinkPad T61 7659, ThinkPad T61 7660, ThinkPad T61 7661, ThinkPad T61 7662,

LENOVO [ThinkPad T61 7663](#) Laptop Battery, ThinkPad T61 7664, ThinkPad T61 7665, LENOVO [ThinkPad T61 8889](#) Laptop Battery, ThinkPad T61 8891, ThinkPad T61 8895, ThinkPad T61 8897, ThinkPad T61 8898, ThinkPad T61 SERIES, ThinkPad T61 Series (14.1, ThinkPad T61 Series(14.1" standard screens and 15.4" widescreen), ThinkPad T61p, ThinkPad T61p 6459, ThinkPad T61p 6460, ThinkPad T61p 8889, ThinkPad T61p 8891, ThinkPad T61p Series (14.1, ThinkPad T61P SERIES (14.1 15.4 SCREEN), ThinkPad T61p Series(14.1" standard screens and 15.4" widescreen), LENOVO [Thinkpad Tablet 1](#) Laptop Battery, ThinkPad Tablet 10, Thinkpad Tablet 8, THINKPAD TP00064B, THINKPAD TYPE 0301-CTO, ThinkPad V4400U, ThinkPad W500, ThinkPad W500 Series, ThinkPad W510, ThinkPad W510 4318, ThinkPad W510 4319, ThinkPad W510 4387, ThinkPad W510 4389, ThinkPad W510 4391, ThinkPad W510 4875, ThinkPad W510 4876, ThinkPad W510(43192KM), ThinkPad W510(43193GC), ThinkPad W510(43193PC), ThinkPad W510(4319A16), ThinkPad W510(4319A17), ThinkPad W510(4319A18), ThinkPad W510(4319A19), ThinkPad W510(4319A21), ThinkPad W510(4319A28), ThinkPad W510(4319A29), ThinkPad W510(4319A31), ThinkPad W510(4319A35), ThinkPad W510(4319A36), ThinkPad W510(4319A37), ThinkPad W510(4391B48), ThinkPad W510(4391D54), ThinkPad W51043192KM, ThinkPad W51043193GC, ThinkPad W51043193PC, LENOVO [ThinkPad W5104319A16](#) Laptop Battery, ThinkPad W5104319A17, ThinkPad W5104319A18, ThinkPad W5104319A19, ThinkPad W5104319A21, ThinkPad W5104319A28, ThinkPad W5104319A29, ThinkPad W5104319A31, ThinkPad W5104319A35, ThinkPad W5104319A36, ThinkPad W5104319A37, ThinkPad W5104391B48, ThinkPad W5104391D54, THINKPAD W520, ThinkPad W530, ThinkPad W540, ThinkPad W540(20BH002FCD), ThinkPad W540(20BH002GCD), ThinkPad W540(20BH002NCD), ThinkPad W540(20BH002PCD), ThinkPad W540(20BHA0C8CD), ThinkPad W540(20BHS08HCD), ThinkPad W540(20BHS09N01), ThinkPad W540(20BHS0JJ00), ThinkPad W540(20BHS0M800), ThinkPad W540(20BHS0M900), ThinkPad W540(20BHS0MA00), ThinkPad W540(20BHS0MB00), ThinkPad W540(20BHS0MC00), ThinkPad W540(20BHS0MD00), ThinkPad W540(20BHS0ME00), ThinkPad W540(20BHS0MF00), ThinkPad W540(20BHS0N900), ThinkPad W541, ThinkPad W541(20EG000ACD), ThinkPad W541(20EG000BCD), ThinkPad W541(20EGS0HLOF), ThinkPad W550s, ThinkPad W550s 20E2000, ThinkPad W700, ThinkPad W700 2752, ThinkPad W700 2757, ThinkPad W700 2758, ThinkPad W700 Series, ThinkPad W700ds, ThinkPad W700ds 2757, ThinkPad W700ds 2758, ThinkPad W700ds Series, ThinkPad X1, ThinkPad X1 1286 CTO, THINKPAD X1 1291, ThinkPad X1 1291-26U, THINKPAD X1 1291-CTO, ThinkPad X1 129127u, Thinkpad X1 1294-3DA, THINKPAD X1 20A7, ThinkPad X1 Carbon, ThinkPad X1 Carbon (20A7-70004AU), THINKPAD X1 CARBON 1ST GEN, ThinkPad X1 Carbon 2015, ThinkPad X1 Carbon 201520BTA06CCD, ThinkPad X1 Carbon 201520BTA06DCD, ThinkPad X1 Carbon 201520BTA06ECD, ThinkPad X1 Carbon 201520BTA06FCD, ThinkPad X1 Carbon 201520BTA07BCD, ThinkPad X1 Carbon 201520BTA07CCD, ThinkPad X1 Carbon 201520BTA0AMCD, ThinkPad X1 Carbon 201520BTA0ANCD, ThinkPad X1 Carbon 201520BTA0M400, LENOVO [ThinkPad X1 Carbon 201520BTA0S4CD](#) Laptop Battery, ThinkPad X1 Carbon 2016, LENOVO [ThinkPad X1 Carbon 2016\(20FBA009CD\)](#) Laptop Battery, ThinkPad X1 Carbon 2016(20FBA00ACD), ThinkPad X1 Carbon 2016(20FBA00DCD), ThinkPad X1 Carbon 2016(20FBA00XCD), ThinkPad X1 Carbon 2016(20FBA010CD), ThinkPad X1 Carbon 2016(20FBA011CD), ThinkPad X1 Carbon 2016(20FBA01MCD), ThinkPad X1 Carbon 2016(20FBA01YCD), ThinkPad X1 Carbon 2016(20FBA05VCD), ThinkPad X1 Carbon 2016(20FBA06UCD), ThinkPad X1 Carbon 2016(20FCA0C0CD), ThinkPad X1 Carbon 2017, THINKPAD X1 CARBON 2017 5THGEN, LENOVO [ThinkPad X1 Carbon 2018](#) Laptop Battery, ThinkPad X1 Carbon 2018 20KGS03900, ThinkPad X1 Carbon 2018 G6 1HK, ThinkPad X1 Carbon 2018 G6 KHK, ThinkPad X1 Carbon 2018 G6 LHK, ThinkPad X1 Carbon 2018-20KGS03900, ThinkPad

X1 Carbon 201820KGA0BRCD, ThinkPad X1 Carbon 201820KH0009CD, ThinkPad X1 Carbon 201820KH000BCD, ThinkPad X1 Carbon 201820KH000HCD, ThinkPad X1 Carbon 201820KH000JCD, ThinkPad X1 Carbon 201820KH0025CD, ThinkPad X1 Carbon 201820KH0027CD, ThinkPad X1 Carbon 201820KHA000CD, ThinkPad X1 Carbon 201820KHA001CD, ThinkPad X1 Carbon 201820KHA003CD, LENOVO [ThinkPad X1 Carbon 201820KHA004CD](#) Laptop Battery, ThinkPad X1 Carbon 201820KHA005CD, ThinkPad X1 Carbon 201820KHA00GCD, ThinkPad X1 Carbon 201820KHA02FCD, ThinkPad X1 Carbon 201820KHA02GCD, ThinkPad X1 Carbon 201820KHA02JCD, ThinkPad X1 Carbon 2019, ThinkPad X1 Carbon 2019 LTE, ThinkPad X1 Carbon 2019-20QE000VGE, ThinkPad X1 Carbon 20A8S3A300, Thinkpad X1 Carbon 20BS-CT01WW, ThinkPad X1 Carbon 20BS003HMH, ThinkPad X1 Carbon 20FB, ThinkPad X1 Carbon 20FB-005XUS, ThinkPad X1 Carbon 20HR000GUS, ThinkPad X1 Carbon 3444, ThinkPad X1 Carbon 3444 Series, ThinkPad X1 Carbon 3444 Series Win8, ThinkPad X1 Carbon 3448, ThinkPad X1 Carbon 3448 Series, ThinkPad X1 Carbon 3448 Series Win8, ThinkPad X1 Carbon 3448-5S4, ThinkPad X1 Carbon 3460, ThinkPad X1 Carbon 3460 Series Win8, LENOVO [ThinkPad X1 Carbon 3460-CLG](#) Laptop Battery, ThinkPad X1 Carbon 3460Series, ThinkPad X1 Carbon 4th, ThinkPad X1 Carbon 4th Gen, ThinkPad X1 Carbon 4th(20FB-001XAU), ThinkPad X1 Carbon 4th(20FB-0029AU), ThinkPad X1 Carbon 4th(20FB-002MAU), ThinkPad X1 Carbon 4th(20FB-A003AU), ThinkPad X1 Carbon 4th(20FB-A004AU), ThinkPad X1 Carbon 4th(20FB001XAU), ThinkPad X1 Carbon 4th(20FB0029AU), ThinkPad X1 Carbon 4th(20FB002MAU), ThinkPad X1 Carbon 4th(20FBA003AU), ThinkPad X1 Carbon 4th(20FBA004AU), ThinkPad X1 Carbon 4th(20FC-000FAU), ThinkPad X1 Carbon 4th(20FC-0015AU), ThinkPad X1 Carbon 4th(20FC-001DAU), LENOVO [ThinkPad X1 Carbon 4th\(20FC-001VAU\)](#) Laptop Battery, ThinkPad X1 Carbon 4th(20FC-001WAU), ThinkPad X1 Carbon 4th(20FC-0023AU), ThinkPad X1 Carbon 4th(20FC-0029AU), ThinkPad X1 Carbon 4th(20FC-A00B00), ThinkPad X1 Carbon 4th(20FC-A00CAU), ThinkPad X1 Carbon 4th(20FC-S00Y01), ThinkPad X1 Carbon 4th(20FC-S05700), ThinkPad X1 Carbon 4th(20FC000FAU), ThinkPad X1 Carbon 4th(20FC0015AU), ThinkPad X1 Carbon 4th(20FC001DAU), ThinkPad X1 Carbon 4th(20FC001VAU), ThinkPad X1 Carbon 4th(20FC001WAU), ThinkPad X1 Carbon 4th(20FC0023AU), ThinkPad X1 Carbon 4th(20FC0029AU), ThinkPad X1 Carbon 4th(20FCA00B00), ThinkPad X1 Carbon 4th(20FCA00CAU), ThinkPad X1 Carbon 4th(20FCS00Y01), ThinkPad X1 Carbon 4th(20FCS05700), ThinkPad X1 Carbon 7th, ThinkPad X1 Carbon 7th Gen, ThinkPad X1 Carbon G6, ThinkPad X1 Carbon G6 2018, ThinkPad X1 Carbon G6-20KG0025UK, ThinkPad X1 Carbon G6-20KH006MGE, ThinkPad X1 Carbon Gen 2 20A7, ThinkPad X1 Carbon Gen 2 20A8, ThinkPad X1 Carbon Gen 7, ThinkPad X1 carbon Ne, ThinkPad X1 Carbon(20A7-70000AU), ThinkPad X1 Carbon(20A7-70001AU), LENOVO [ThinkPad X1 Carbon\(20A7-70003AU\)](#) Laptop Battery, ThinkPad X1 Carbon(20A7-70005AU), ThinkPad X1 Carbon(20A7-70006AU), ThinkPad X1 Carbon(20A7-70007AU), ThinkPad X1 Carbon(20A7-70008AU), ThinkPad X1 Carbon(20A8-8000UAU), ThinkPad X1 Carbon(20A8-80019AU), ThinkPad X1 Carbon(20A8-8005KAU), ThinkPad X1 Carbon(20A8-8005NAU), ThinkPad X1 Carbon(20A8-8006LAU), LENOVO [ThinkPad X1 Carbon\(20A8-8A0K7AU\)](#) Laptop Battery, ThinkPad X1 Carbon(20A8-8S00803), ThinkPad X1 Carbon(20A8-8S00PAU), ThinkPad X1 Carbon(20A8-8S03J0S), ThinkPad X1 Carbon(20A8-8S03Y13), ThinkPad X1 Carbon(20A8-8S04604), ThinkPad X1 Carbon(20A8-8S04C0B), ThinkPad X1 Carbon(20A8-8S04X0D), LENOVO [ThinkPad X1 Carbon\(20A8-8S05002\)](#) Laptop Battery, ThinkPad X1 Carbon(20A8-8S35T00), ThinkPad X1 Carbon(20A8-8S37Q00), ThinkPad X1 Carbon(20A8-8S3BA00), ThinkPad X1 Carbon(20A8-8S3BD00), ThinkPad X1 Carbon(20A8-8S3CS00), ThinkPad X1 Carbon(20A8-8Z05RUS), ThinkPad X1 Carbon(20A8-8Z05TUS), ThinkPad X1 Carbon(20A8-8Z05VUS), ThinkPad X1 Carbon(20BT-T002SAU), ThinkPad X1 Carbon(20BT-

T002TAU), ThinkPad X1 Carbon(20BT-T002UAU), ThinkPad X1 Carbon(20BT-T002VAU), ThinkPad X1 Carbon(20BT-T002WAU), ThinkPad X1 Carbon(20BT-T002XAU), ThinkPad X1 Carbon(20BT-T002YAU), ThinkPad X1 Carbon(20BT-T0030AU), ThinkPad X1 Carbon(20BT-T0031AU), ThinkPad X1 Carbon(20BT-T0032AU), ThinkPad X1 Carbon(20BT-T0033AU), ThinkPad X1 Carbon(20BT-T0034AU), ThinkPad X1 Carbon(20BT-T0035AU), ThinkPad X1 Carbon(20BT-T0036AU), ThinkPad X1 Carbon(20BT-T0037AU), ThinkPad X1 Carbon(20BT-T0038AU), ThinkPad X1 Carbon(20BT-T0039AU), ThinkPad X1 Carbon(20BT-T003AAU), ThinkPad X1 Carbon(20BT-T003BAU), ThinkPad X1 Carbon(20BT-T003CAU), ThinkPad X1 Carbon(20BT-T003DAU), ThinkPad X1 Carbon(20BT-T003EAU), ThinkPad X1 Carbon(20BT-T003FAU), ThinkPad X1 Carbon(20BT-T003GAU), ThinkPad X1 Carbon(20BT-T003HAU), ThinkPad X1 Carbon(20BT-T003JAU), ThinkPad X1 Carbon(20BT-T003KAU), ThinkPad X1 Carbon(20BT-T003LAU), ThinkPad X1 Carbon(20BT-T003MAU), ThinkPad X1 Carbon(20BT-T003NAU), ThinkPad X1 Carbon(20BT-T003PAU), ThinkPad X1 Carbon(20BT-T003QAU), ThinkPad X1 Carbon(20BT-T003RAU), ThinkPad X1 Carbon(20BT-T003VAU), ThinkPad X1 Carbon(20BT-T003XAU), ThinkPad X1 Carbon20A8-8S35W03), ThinkPad X1 Carbon3, ThinkPad X1 Extreme, ThinkPad X1 Extreme-20MF000XGE, ThinkPad X1 Helix, THINKPAD X1 HYBRID 1286CTO, ThinkPad X1 MT3697, THINKPAD X1 SERIES, ThinkPad X1 Tablet, ThinkPad X1 Tablet GEN 3, ThinkPad X1 YINSHI 20MFA000CD, ThinkPad X1 YINSHI 20MFA002CD, ThinkPad X1 Yoga, ThinkPad X1 Yoga 2017, ThinkPad X1 Yoga 2017(20JDA00DCD), ThinkPad X1 Yoga 2017(20JDA00ECD), ThinkPad X1 Yoga 2017(20JDA00FCD), LENOVO [ThinkPad X1 Yoga 2017\(20JDA00GCD\)](#) Laptop Battery, ThinkPad X1 Yoga 2017(20JDA00HCD), ThinkPad X1 Yoga 2017(20JES3AF1M), ThinkPad X1 Yoga 2017(20JES4M43H), ThinkPad X1 Yoga 2017(20JFA007CD), ThinkPad X1 Yoga 2018, ThinkPad X1 Yoga 2019, ThinkPad X1 Yoga 2019-20QGS00A00, ThinkPad X1 Yoga Gen 4, ThinkPad X1 Yoga(20FQ-000QUS), ThinkPad X1 Yoga(20FQ-000VAU, ThinkPad X1 Yoga(20FQ-001PAU), ThinkPad X1 Yoga(20FQ-002JAU), ThinkPad X1 Yoga(20FQ-CTO1WW), ThinkPad X1 Yoga(20FQ000VAU, ThinkPad X1 Yoga(20FQ001PAU), ThinkPad X1 Yoga(20FQ0025GE), ThinkPad X1 Yoga(20FQ002JAU), ThinkPad X1 Yoga(20FQ0040GE), ThinkPad X1 Yoga(20FQ005TGE), LENOVO [ThinkPad X1 Yoga\(20FQ005UGE\)](#) Laptop Battery, ThinkPad X1 Yoga(20FQA00HCD), ThinkPad X1 Yoga(20FQA01NCD), ThinkPad X1 Yoga(20FQA065GE), ThinkPad X1 Yoga(20FQCTO1WW), ThinkPad X1 Yoga(20FR-000BAU), ThinkPad X1 Yoga(20FR-0017AU), ThinkPad X1 Yoga(20FR-001DAU), ThinkPad X1 Yoga(20FR-001LAU), ThinkPad X1 Yoga(20FR-001SAU), ThinkPad X1 Yoga(20FR-0024AU), ThinkPad X1 Yoga(20FR-0025AU), ThinkPad X1 Yoga(20FR-0026AU), ThinkPad X1 Yoga(20FR-002EAU), ThinkPad X1 Yoga(20FR-002VAU), ThinkPad X1 Yoga(20FR-002WAU), ThinkPad X1 Yoga(20FR-002XAU), ThinkPad X1 Yoga(20FR-CTO1WW), ThinkPad X1 Yoga(20FR-S03701), ThinkPad X1 Yoga(20FR-S03901), ThinkPad X1 Yoga(20FR-S05S00), ThinkPad X1 Yoga(20FR-S05T00), ThinkPad X1 Yoga(20FR-S0F700), ThinkPad X1 Yoga(20FR/20FQ), ThinkPad X1 Yoga(20FR000BAU), ThinkPad X1 Yoga(20FR0017AU), ThinkPad X1 Yoga(20FR001DAU), ThinkPad X1 Yoga(20FR001LAU), LENOVO [ThinkPad X1 Yoga\(20FR001SAU\)](#) Laptop Battery, ThinkPad X1 Yoga(20FR0024AU), ThinkPad X1 Yoga(20FR0025AU), ThinkPad X1 Yoga(20FR0026AU), ThinkPad X1 Yoga(20FR002EAU), LENOVO [ThinkPad X1 Yoga\(20FR002VAU\)](#) Laptop Battery, ThinkPad X1 Yoga(20FR002WAU), ThinkPad X1 Yoga(20FR002XAU), ThinkPad X1 Yoga(20FRCTO1WW), ThinkPad X1 Yoga(20FRS03701), ThinkPad X1 Yoga(20FRS03901), ThinkPad X1 Yoga(20FRS05S00), ThinkPad X1 Yoga(20FRS05T00), ThinkPad X1 Yoga(20FRS0F700), ThinkPad X1 Yoga(20JD0025GE), ThinkPad X1 Yoga(20JD0025MZ), ThinkPad X1 Yoga(20JD0026GE), ThinkPad X1 Yoga(20JD0050GE), ThinkPad X1 Yoga(20JD0051GE), ThinkPad X1 Yoga(20JD005WGE), ThinkPad X1 Yoga(20JDA00DCD), ThinkPad X1 Yoga(20JDA00ECD), ThinkPad X1

Yoga(20JDA00FCD), ThinkPad X1 Yoga(20JDA00GCD), ThinkPad X1 Yoga(20JDA00HCD), ThinkPad X1 Yoga(20JES03T00), ThinkPad X1 Yoga(20JES3AF1M), ThinkPad X1 Yoga(20JES42A00), ThinkPad X1 Yoga(20JF0027GE), ThinkPad X1 Yoga(20JFA007CD), ThinkPad X1 Yoga(20LD002HGE), ThinkPad X1 Yoga(20LD002HMZ), ThinkPad X1 Yoga(20LD002KGE), ThinkPad X1 Yoga(20LD002MGE), ThinkPad X1 Yoga(20LD002MMZ), ThinkPad X1 Yoga(20LD003JGE), ThinkPad X1 Yoga(20LDCTOLP1), ThinkPad X1 Yoga(20LDS0HC00), ThinkPad X1 Yoga(20LES01W00), ThinkPad X1 Yoga(20LF000TMZ), ThinkPad X1 Yoga(20LF000UGE), ThinkPad X1 Yoga(20LFS01V00), ThinkPad X1(20GGA00F00), ThinkPad X100e, Thinkpad X100e 2200, ThinkPad X100e 2876, ThinkPad X100e 3506, ThinkPad X100e 3507, ThinkPad X100e 3508, ThinkPad X100E Series, Thinkpad X110e, Thinkpad X120e, ThinkPad X120e Series, thinkpad X121e, ThinkPad X121e3045-563M, ThinkPad X121e3045-5CTO, ThinkPad X121e3045563M, ThinkPad X121e30455CTO, ThinkPad X121e3048-82LM, ThinkPad X121e3048-82MM, ThinkPad X121e3048-8CTO, ThinkPad X121e304882LM, ThinkPad X121e304882MM, LENOVO [ThinkPad X121e30488CTO](#) Laptop Battery, ThinkPad X130e, Thinkpad X131e, ThinkPad X131e3367-71Q1, ThinkPad X131e3367-71S4, ThinkPad X131e3367-71V7, ThinkPad X131e3367-72A9, ThinkPad X131e3367-72B8, ThinkPad X131e3367-72C1, ThinkPad X131e3367-72E7, ThinkPad X131e3367-72F3, ThinkPad X131e3367-72G0, ThinkPad X131e3367-72H6, ThinkPad X131e3367-72J0, ThinkPad X131e3367-72K5, ThinkPad X131e3367-72L0, ThinkPad X131e3367-72N0, ThinkPad X131e3367-72N1, ThinkPad X131e3367-72RM, ThinkPad X131e3367-72SM, ThinkPad X131e3367-72W0, ThinkPad X131e3367-72W1, ThinkPad X131e3367-73AU, ThinkPad X131e3367-73TM, ThinkPad X131e3367-73UM, ThinkPad X131e3367-73VM, ThinkPad X131e3367-73WM, ThinkPad X131e3367-762U, ThinkPad X131e3367-78AU, ThinkPad X131e3367-78XM, ThinkPad X131e3367-78ZM, ThinkPad X131e3367-792M, ThinkPad X131e3367-795M, ThinkPad X131e3367-797M, ThinkPad X131e3367-79AU, ThinkPad X131e3367-79HM, ThinkPad X131e3367-7A52, ThinkPad X131e3367-7A59, ThinkPad X131e3367-7AD3, ThinkPad X131e3367-7AD5, ThinkPad X131e3367-7AF9, ThinkPad X131e3367-7AH5, ThinkPad X131e3367-7AJ5, ThinkPad X131e3367-7AQ2, ThinkPad X131e3367-7AQ9, ThinkPad X131e3367-7CTO, ThinkPad X131e336771Q1, ThinkPad X131e336771S4, ThinkPad X131e336771V7, ThinkPad X131e336772A9, ThinkPad X131e336772B8, ThinkPad X131e336772C1, ThinkPad X131e336772E7, ThinkPad X131e336772F3, ThinkPad X131e336772G0, LENOVO [ThinkPad X131e336772H6](#) Laptop Battery, ThinkPad X131e336772J0, ThinkPad X131e336772K5, ThinkPad X131e336772L0, ThinkPad X131e336772N0, ThinkPad X131e336772N1, ThinkPad X131e336772RM, ThinkPad X131e336772SM, ThinkPad X131e336772W0, ThinkPad X131e336772W1, LENOVO [ThinkPad X131e336773AU](#) Laptop Battery, ThinkPad X131e336773TM, ThinkPad X131e336773UM, ThinkPad X131e336773VM, ThinkPad X131e336773WM, ThinkPad X131e3367762U, ThinkPad X131e336778AU, ThinkPad X131e336778XM, ThinkPad X131e336778ZM, ThinkPad X131e3367792M, LENOVO [ThinkPad X131e3367795M](#) Laptop Battery, ThinkPad X131e3367797M, ThinkPad X131e336779AU, ThinkPad X131e336779HM, ThinkPad X131e33677A52, ThinkPad X131e33677A59, ThinkPad X131e33677AD3, ThinkPad X131e33677AD5, ThinkPad X131e33677AF9, ThinkPad X131e33677AH5, LENOVO [ThinkPad X131e33677AJ5](#) Laptop Battery, ThinkPad X131e33677AQ2, ThinkPad X131e33677AQ9, ThinkPad X131e33677CTO, ThinkPad X131e3368-83AU, ThinkPad X131e3368-83UM, ThinkPad X131e3368-85AU, ThinkPad X131e3368-8CTO, ThinkPad X131e336883AU, ThinkPad X131e336883UM, ThinkPad X131e336885AU, ThinkPad X131e33688CTO, ThinkPad X131e3369-91A3, ThinkPad X131e3369-91A4, ThinkPad X131e3369-91L1, ThinkPad X131e3369-9A34, ThinkPad X131e3369-9A37, ThinkPad X131e3369-9A56, ThinkPad

X131e3369-9A62, ThinkPad X131e3369-9A66, ThinkPad X131e336991A3, ThinkPad X131e336991A4, LENOVO [ThinkPad X131e336991L1](#) Laptop Battery, ThinkPad X131e33699A34, ThinkPad X131e33699A37, ThinkPad X131e33699A56, ThinkPad X131e33699A62, ThinkPad X131e33699A66, ThinkPad X131e3372-22AU, ThinkPad X131e3372-23AU, ThinkPad X131e3372-2A11, ThinkPad X131e337222AU, ThinkPad X131e337223AU, ThinkPad X131e33722A11, ThinkPad X131e6283-31B0, ThinkPad X131e628331B0, Thinkpad X140e, ThinkPad X1c, ThinkPad X1C 2019, Thinkpad X200, ThinkPad X200 7454, Thinkpad X200 7455, ThinkPad X200 7458, THINKPAD X200 7459VYH, THINKPAD X200 7459W4N, ThinkPad X200 Tablet, ThinkPad X200 Tablet 2263, ThinkPad X200 Tablet 2266, ThinkPad X200 Tablet 4184, ThinkPad X200 Tablet 7448, ThinkPad X200 Tablet 7449, ThinkPad X200 Tablet 7450, ThinkPad X200 Tablet 7453, Thinkpad X200-7458, LENOVO [ThinkPad X200S](#) Laptop Battery, ThinkPad X200s 7465, Thinkpad X200S-7465, Thinkpad X201, Thinkpad X201I, Thinkpad X201S, ThinkPad X220, ThinkPad X220 Series, ThinkPad X220 Tablet Series, ThinkPad X220i, ThinkPad X220i Series, ThinkPad X220i Tablet Series, ThinkPad X220s Series, ThinkPad X220T, ThinkPad X230, ThinkPad X230 33C, ThinkPad X230 3AC, ThinkPad X230 3BC, ThinkPad X230 3CC, ThinkPad X230 44C, ThinkPad X230 45C, ThinkPad X230 4UC, ThinkPad X230 4ZC, ThinkPad X230 56C, ThinkPad X230 A23, ThinkPad X230 A34, ThinkPad X230 A35, ThinkPad X230 A36, ThinkPad X230 A37, ThinkPad X230 A38, ThinkPad X230 AF8, LENOVO [ThinkPad X230 B23](#) Laptop Battery, ThinkPad X230 B66, ThinkPad X230 BY3, ThinkPad X230 C3C, ThinkPad X230 F36, ThinkPad X230 IZ0, ThinkPad X230 KQC, ThinkPad X230 LB7, ThinkPad X230 Series, ThinkPad X230 SMY, ThinkPad X230(230643C), ThinkPad X230(23204CC), ThinkPad X230(2325YUK), ThinkPad X230i, ThinkPad X230i Series, ThinkPad X230s, ThinkPad X230s-20AH000ECD, ThinkPad X230T, ThinkPad X230t N2C2AGE, ThinkPad X230T Series Tablet, ThinkPad X240, ThinkPad X240 20AK, ThinkPad X240 20AL, ThinkPad X240 20AL00, ThinkPad X240 20AL001, ThinkPad X240 20AL008, ThinkPad X240 20AL009, ThinkPad X240 20AL00B, ThinkPad X240 20AL00C, ThinkPad X240 20AL00D, LENOVO [ThinkPad X240 20AL00F](#) Laptop Battery, ThinkPad X240 20AM, ThinkPad X240 20AM001, ThinkPad X240 20AM004, ThinkPad X240 20AM005, ThinkPad X240 20AM006, ThinkPad X240(20AL001GCD), ThinkPad X240(20AL001HCD), ThinkPad X240(20AL0020CD), ThinkPad X240(20AL0022CD), LENOVO [ThinkPad X240\(20AL0024CD\)](#) Laptop Battery, ThinkPad X240(20ALA0CQCD), ThinkPad X240(20ALA0CRCD), ThinkPad X240(20ALA0CSCD), ThinkPad X240(20ALA0CTCD), ThinkPad X240(20ALA0E4CD), ThinkPad X240(20ALA0EYCD), ThinkPad X240(20ALA0F0CD), ThinkPad X240(20ALA0F1CD), ThinkPad X240(20ALA0GVCD), ThinkPad X240(20ALA0GWCD), ThinkPad X240(20ALA0H4CD), ThinkPad X240(20ALA0H6CD), ThinkPad X240(20ALA0QKCD), ThinkPad X240(20ALS00A00), ThinkPad X240(20ALS00B00), ThinkPad X240(20ALS00D00), ThinkPad X240(20ALS00G00), ThinkPad X240(20ALS00J00), ThinkPad X240(20ALS00P00), LENOVO [ThinkPad X240\(20ALS00Q00\)](#) Laptop Battery, ThinkPad X240(20ALS00R00), ThinkPad X240(20ALS00S00), ThinkPad X240(20ALS00T00), ThinkPad X240(20ALS02100), ThinkPad X240(20ALS03300), ThinkPad X240(20ALS03X00), ThinkPad X240(20AM001LCD), ThinkPad X240(20AMA2VKCD), ThinkPad X240(20AMA2VLCD), ThinkPad X240(20AMA31PCD), ThinkPad X240(20AMA37DCD), ThinkPad X240(20AMA37ECD), ThinkPad X240(20AMA38XCD), ThinkPad X240(20AMA39MCD), ThinkPad X240(20AMA3A3CD), ThinkPad X240(20AMA449CD), ThinkPad X240(20AMA4DJCD), ThinkPad X240(20AMA4K4CD), ThinkPad X240(20AMA4VGCD), LENOVO [ThinkPad X240\(20AMA4W1CD\)](#) Laptop Battery, ThinkPad X240(20AMA53BCD), ThinkPad X240(20AMS0GY00), ThinkPad X240(20AMS0KF00), ThinkPad X240(20AMS0KG00), ThinkPad X240(20AMS0W602), ThinkPad X240(20AMS1DR03), ThinkPad X240(20AMS1UL00), ThinkPad X240(20AMS25H00), ThinkPad X240(20AMS29X03), ThinkPad X240(20AMS35M0H), ThinkPad X240(20AMS36W08), ThinkPad X240(20AMS3CJ1N), ThinkPad

X240(20AMS3K319), ThinkPad X240(20AMS5AB01), ThinkPad X240s, LENOVO [ThinkPad X240s\(20AJ000JCD\)](#) Laptop Battery, ThinkPad X240s(20AJ000KCD), ThinkPad X240s(20AJ000VCD), ThinkPad X240s(20AJ003BCD), ThinkPad X240s(20AJ003ECD), ThinkPad X240s(20AJ003TCD), ThinkPad X240s(20AJ003WCD), ThinkPad X240s(20AJ0040CD), ThinkPad X240s(20AJA03NCD), ThinkPad X240s(20AJA03PCD), ThinkPad X240s(20AJA04VCD), ThinkPad X240s(20AJA050CD), ThinkPad X240s(20AJA055CD), ThinkPad X240s(20AJA05WCD), ThinkPad X240s(20AJA05XCD), ThinkPad X240s(20AJA05YCD), ThinkPad X240s(20AJA063CD), ThinkPad X240s(20AJA064CD), ThinkPad X240s(20AJA06FCD), ThinkPad X240S(20AJA07SCD), LENOVO [ThinkPad X240s\(20AJS01600\)](#) Laptop Battery, ThinkPad X240s(20AK000ECD), ThinkPad X240s(20AKA00700), ThinkPad X240s(20AKA00800), ThinkPad X240s(20AKA00900), ThinkPad X240s(20AKA00A00), ThinkPad X240s(20AKA00B00), ThinkPad X240s(20AKA00CTO), ThinkPad X240s(31P20AJA04HCD), ThinkPad X240s-7VCD, ThinkPad X240s-7WCD, ThinkPad X250, ThinkPad X250 20CL001, ThinkPad X250 20CL00A, ThinkPad X250 20CLA01XCD, ThinkPad X250 20CLA01YCD, ThinkPad X250 20CLA021CD, ThinkPad X250 20CLA06BCD, ThinkPad X250 20CLA06CCD, ThinkPad X250 20CLA07NCD, ThinkPad X250 20CLA07PCD, ThinkPad X250 20CLA0GMCD, ThinkPad X250 20CM001, ThinkPad X250 20CM004, LENOVO [ThinkPad X250 20CM0050](#) Laptop Battery, ThinkPad X250 Ultrabook, ThinkPad X250(20CL001LCD), ThinkPad X250(20CLA01UCD), ThinkPad X250(20CLA01VCD, ThinkPad X250(20CLA01VCD), ThinkPad X250(20CLA01WCD), LENOVO [ThinkPad X250\(20CLA01XCD\)](#) Laptop Battery, ThinkPad X250(20CLA01YCD), ThinkPad X250(20CLA020CD), ThinkPad X250(20CLA021CD), ThinkPad X250(20CLA068CD), ThinkPad X250(20CLA06BCD), ThinkPad X250(20CLA06CCD), ThinkPad X250(20CLA07NCD), ThinkPad X250(20CLA07PCD), ThinkPad X250(20CLA08LCD), ThinkPad X250(20CLA0MBCD), ThinkPad X250(20CLA108CD), ThinkPad X250(20CLA109CD), ThinkPad X250(20CLA1KXCD), ThinkPad X250(20CLA1VFCD), ThinkPad X250(20CLA1VGCD), ThinkPad X250(20CLA25JCD), ThinkPad X250(20CLA260CD), ThinkPad X250(20CLA261CD), ThinkPad X250(20CLA262CD), LENOVO [ThinkPad X250\(20CLA272CD\)](#) Laptop Battery, ThinkPad X250(20CLA275CD), ThinkPad X250(20CLA276CD), ThinkPad X250(20CLA278CD), ThinkPad X250(20CLA2EVCD), ThinkPad X250(20CLA2EWCD), ThinkPad X250(20CLA2EXCD), ThinkPad X250(20CLA2EYCD), ThinkPad X250(20CLA2FJCD), ThinkPad X250(20CLA46UCD), ThinkPad X250(20CLS2FD06), ThinkPad X260, ThinkPad X260(20F6000NCD), ThinkPad X260(20F6A000CD), ThinkPad X260(20F6A001CD), ThinkPad X260(20F6A002CD), ThinkPad X260(20F6A003CD), ThinkPad X260(20F6A004CD), ThinkPad X260(20F6A007CD), ThinkPad X260(20F6A084CD), LENOVO [ThinkPad X260\(20F6A085CD\)](#) Laptop Battery, ThinkPad X260(20F6A08PCD), ThinkPad X260(20F6A08XCD), ThinkPad X260(20F6A094CD), ThinkPad X260(20F6A09KCD), Thinkpad X270, ThinkPad X270 20HM004, ThinkPad X270 20HN001, ThinkPad X270 20HN002, ThinkPad X270 20HN003, ThinkPad X270 20HN004, ThinkPad X270 20HN005, ThinkPad X270 20HN006, ThinkPad X270 20K5001, ThinkPad X270 20K6000, ThinkPad X270 20K6001, ThinkPad X270(20HNA000CD), ThinkPad X270(20HNA001CD), ThinkPad X270(20HNA003CD), ThinkPad X270(20HNA004CD), ThinkPad X270(20HNA005CD), ThinkPad X270(20HNA013CD), ThinkPad X270(20HNA01FCD), ThinkPad X270(20HNA01HCD), ThinkPad X270(20HNA01MCD), ThinkPad X270(20HNA01NCD), ThinkPad X270(20HNA01PCD), ThinkPad X270(20K6A000CD), ThinkPad X270(20K6A005CD), LENOVO [ThinkPad X270\(20K6A006CD\)](#) Laptop Battery, ThinkPad X270(20K6A009CD), ThinkPad X270(20K6A00ACD), ThinkPad X270(20K6A00CCD), ThinkPad X270(20K6A00DCD), ThinkPad X270(20K6A00ECD), ThinkPad X270-20HMS00T00, ThinkPad X270-20HNA005CD, ThinkPad X270-20K6A000CD, ThinkPad X270-20K6A006CD, ThinkPad X280, ThinkPad X280 AHK, ThinkPad X280 CHK, ThinkPad X280-20KES01S0, ThinkPad X280-20KES01S00, ThinkPad X28020KF000RCD,

ThinkPad X28020KFA000CD, ThinkPad X28020KFA001CD, ThinkPad X28020KFA002CD, ThinkPad X28020KFA003CD, ThinkPad X28020KFA004CD, LENOVO [ThinkPad X28020KFA007CD](#) Laptop Battery, ThinkPad X28020KFA008CD, ThinkPad X28020KFA009CD, ThinkPad X28020KFA00ACD, ThinkPad X28020KFA00BCD, ThinkPad X28020KFA00CCD, ThinkPad X28020KFA01PCD, ThinkPad X28020KFA01UCD, ThinkPad X28020KFA01VCD, ThinkPad X28020KFA01WCD, ThinkPad X28020KFA02BCD, ThinkPad X28020KFA02FCD, ThinkPad X28020KFA02GCD, ThinkPad X28020KFA02MCD, ThinkPad X28020KFA02PCD, ThinkPad X2802CCD, ThinkPad X2802ECD, ThinkPad X2802FCD, ThinkPad X300, ThinkPad X300 2748, ThinkPad X300 2749, ThinkPad X300 6476, ThinkPad X300 6477, ThinkPad X300 6478, ThinkPad X300 Series, ThinkPad X301, Thinkpad X301 2774, Thinkpad X301 2776, Thinkpad X301 2777, Thinkpad X301 2778, Thinkpad X301 2779, Thinkpad X301 4057, ThinkPad X301 Series, ThinkPad X380 Yoga, ThinkPad X380 Yoga 20LJS02W00, ThinkPad X390, ThinkPad X390 20Q00039CD, ThinkPad X390 20Q0A000CD, ThinkPad X390 20Q0A001CD, ThinkPad X390 20Q0A002CD, ThinkPad X390 20Q0A00BCD, ThinkPad X390 20Q0A00CCD, ThinkPad X390 20Q0A00DCD, ThinkPad X390 20Q0A00ECD, ThinkPad X390 20Q0A00FCD, LENOVO [ThinkPad X390 20Q0A00GCD](#) Laptop Battery, ThinkPad X390 20Q0A00HCD, ThinkPad X390-20Q1S02M00, ThinkPad X41 Tablet 1866, ThinkPad X41 Tablet 1867, ThinkPad X41 Tablet 1869, ThinkPad X41 Tablet Series, ThinkPad X6 Ultrabase, ThinkPad X60 1702, ThinkPad X60 1703, ThinkPad X60 1704, ThinkPad X60 1705, ThinkPad X60 1706, ThinkPad X60 1707, ThinkPad X60 1708, ThinkPad X60 1709, ThinkPad X60 2509, ThinkPad X60 2510, ThinkPad X60 2533, THINKPAD X60 6366, ThinkPad X60 Series, ThinkPad X60 Tablet 6366L5U, LENOVO [ThinkPad X60 Tablet PC 6363](#) Laptop Battery, ThinkPad X60 Tablet PC 6364, ThinkPad X60 Tablet PC 6365, ThinkPad X60 Tablet PC 6366, ThinkPad X60 Tablet PC 6367, ThinkPad X60 Tablet PC 6368, ThinkPad X60 Tablet PC Series, ThinkPad X601704, ThinkPad X60s, ThinkPad X60s 1702, ThinkPad X60s 1703, ThinkPad X60s 1704, ThinkPad X60s 1705, ThinkPad X60s 1706, ThinkPad X60s 1707, LENOVO [ThinkPad X60s 1708](#) Laptop Battery, ThinkPad X60s 1709, ThinkPad X60s 2507, LENOVO [ThinkPad X60s 2508](#) Laptop Battery, ThinkPad X60s 2522, ThinkPad X60s 2524, ThinkPad X60s 2533, ThinkPad X60s Series, ThinkPad X61, ThinkPad X61 7673, ThinkPad X61 7674, ThinkPad X61 7675, ThinkPad X61 7676, ThinkPad X61 7678, ThinkPad X61 7679, Thinkpad X61 7764CTO, ThinkPad X61 Series, ThinkPad X61 Tablet 7763, ThinkPad X61 Tablet PC 7762, ThinkPad X61 Tablet PC 7764, ThinkPad X61 Tablet PC 7767, ThinkPad X61 Tablet PC Series, ThinkPad X617673, ThinkPad X61s, ThinkPad X61s 15th Anniversary Edition, ThinkPad X61s 7666, ThinkPad X61s 7667, ThinkPad X61s 7668, ThinkPad X61s 7669, ThinkPad X61s 7670, ThinkPad X61s 7671, ThinkPad X61s series, ThinkPad X61s15th, ThinkPad Yoga 11e, ThinkPad Yoga 11e 3rd Gen, ThinkPad Yoga 11e(20D9A006CD), ThinkPad Yoga 11e(20D9A007CD), ThinkPad Yoga 11e(20D9A008CD), ThinkPad Yoga 11e(20D9A009CD), ThinkPad Yoga 12(20DK-002UAU), ThinkPad Yoga 12(20DK-002WAU), ThinkPad Yoga 12(20DK-K0006AU), ThinkPad Yoga 12(20DK-K0007AU), ThinkPad Yoga 12(20DK-K0009AU), ThinkPad Yoga 12(20DK-K000AAU), ThinkPad Yoga 12(20DK-K000CAU), ThinkPad Yoga 12(20DK-K000DAU), ThinkPad Yoga 12(20DK-K000FAU), ThinkPad Yoga 12(20DK-K000GAU), ThinkPad Yoga 12(20DK-K000HAU), ThinkPad Yoga 12(20DK-K000JAU), ThinkPad Yoga 12(20DK-K000KAU), ThinkPad Yoga 12(20DK-K000LAU), LENOVO [ThinkPad Yoga 12\(20DK-K000MAU\)](#) Laptop Battery, ThinkPad Yoga 12(20DK-K000NAU), ThinkPad Yoga 12(20DK-K000PAU), ThinkPad Yoga 12(20DK-K000QAU), ThinkPad Yoga 12(20DK-K000RAU), ThinkPad Yoga 12(20DK-K000TAU), ThinkPad Yoga 12(20DK-K000UAU), ThinkPad Yoga 12(20DK-K000VAU), ThinkPad Yoga 12(20DK-K000WAU), ThinkPad Yoga 12(20DK-K000XAU), ThinkPad Yoga 12(20DK-K0010AU), ThinkPad Yoga 12(20DK-K0011AU), ThinkPad Yoga 12(20DK-K0013AU), ThinkPad Yoga 12(20DK-K0014AU), ThinkPad Yoga 12(20DK-

K0016AU), ThinkPad Yoga 12(20DK-K0017AU), ThinkPad Yoga 12(20DK-K0019AU), ThinkPad Yoga 12(20DK-K001AAU), ThinkPad Yoga 12(20DK-K003FAU), ThinkPad Yoga 12(20DK-K003GAU), ThinkPad Yoga 12(20DK-K003HAU), ThinkPad Yoga 12(20DK-K003JAU), ThinkPad Yoga 12(20DK-K003PAU), ThinkPad Yoga 12(20DK-K003QAU), ThinkPad Yoga 12(20DK-K003TAU), ThinkPad Yoga 12(20DK-K004NAU), ThinkPad Yoga 12(20DK-K004PAU), ThinkPad Yoga 12(20DK-K004QAU), ThinkPad Yoga 12(20DK-K004RAU), ThinkPad Yoga 12(20DK-K004SAU), ThinkPad Yoga 12(20DK-K004TAU), ThinkPad Yoga 12(20DK-KA00AAU), ThinkPad Yoga 12(20DK-KA00LAU), ThinkPad Yoga 12(20DK-KS00V00), ThinkPad Yoga 12(20DK-KS01T0A), ThinkPad Yoga 12(20DK-KS02F01), ThinkPad Yoga 12(20DK-KS06600), ThinkPad Yoga 12(20DK-KS0JL00), ThinkPad Yoga 12(20DK-KS14D01), LENOVO [ThinkPad Yoga 12\(20DK-KZ0VMUS\)](#) Laptop Battery, ThinkPad Yoga 12(20DKS0280D), ThinkPad Yoga 12(20DKS0GU0G), ThinkPad Yoga 12(20DL-L000MAU), ThinkPad Yoga 12(20DL-L000NAU), ThinkPad Yoga 12(20DL-L000QAU), ThinkPad Yoga 12(20DL-L000RAU), ThinkPad Yoga 12(20DL-L000SAU), ThinkPad Yoga 12(20DL-L000TAU), ThinkPad Yoga 12(20DL-L000UAU), LENOVO [ThinkPad Yoga 12\(20DL-L000VAU\)](#) Laptop Battery, ThinkPad Yoga 12(20DL-L000WAU), ThinkPad Yoga 12(20DL-L000XAU), ThinkPad Yoga 12(20DL-L0012AU), ThinkPad Yoga 12(20DL-L0013AU), ThinkPad Yoga 12(20DL-L0014AU), ThinkPad Yoga 12(20DL-L0015AU), ThinkPad Yoga 12(20DL-L0019AU), ThinkPad Yoga 12(20DL-L001BAU), LENOVO [ThinkPad Yoga 12\(20DL-L002BAU\)](#) Laptop Battery, ThinkPad Yoga 12(20DL-L003VAU), ThinkPad Yoga 12(20DL-L003WAU), ThinkPad Yoga 12(20DL-L003YAU), ThinkPad Yoga 12(20DL-L0040AU), ThinkPad Yoga 12(20DL-L0042AU), ThinkPad Yoga 12(20DL-L0043AU), ThinkPad Yoga 12(20DL-L0045AU), ThinkPad Yoga 12(20DL-L0046AU), ThinkPad Yoga 12(20DL-L0048AU), ThinkPad Yoga 12(20DL-L0049AU), ThinkPad Yoga 12(20DL-L0057AU), ThinkPad Yoga 12(20DL-L0058AU), ThinkPad Yoga 12(20DL-L0059AU), ThinkPad Yoga 12(20DL-L005AAU), ThinkPad Yoga 12(20DL-L005BAU), ThinkPad Yoga 12(20DL-L005CAU), ThinkPad Yoga 12(20DL-L005GAU), ThinkPad Yoga 12(20DL-L005HAU), ThinkPad Yoga 12(20DL-L005JAU), ThinkPad Yoga 12(20DL-LZ0VLUS), ThinkPad Yoga 14, ThinkPad Yoga 14 20DM 20DN, ThinkPad Yoga 14(20DM-M001XAU), ThinkPad Yoga 14(20DM-M001YAU), ThinkPad Yoga 14(20DM-M0020AU), ThinkPad Yoga 14(20DM-M0021AU), ThinkPad Yoga 14(20DM-M0022AU), ThinkPad Yoga 14(20DM-M0023AU), ThinkPad Yoga 14(20DM-M0024AU), LENOVO [ThinkPad Yoga 14\(20DM-M0025AU\)](#) Laptop Battery, ThinkPad Yoga 14(20DM-M0026AU), ThinkPad Yoga 14(20DM-M0027AU), ThinkPad Yoga 14(20DM-M0028AU), ThinkPad Yoga 14(20DM-M0029AU), ThinkPad Yoga 14(20DM-M002AAU), ThinkPad Yoga 14(20DM-M002BAU), ThinkPad Yoga 14(20DM-M002CAU), ThinkPad Yoga 14(20DM-M002DAU), ThinkPad Yoga 14(20DM-M002EAU), ThinkPad Yoga 14(20DM-M002FAU), ThinkPad Yoga 14(20DM-M002GAU), ThinkPad Yoga 14(20DM-M004FAU), ThinkPad Yoga 14(20DM-M004GAU), ThinkPad Yoga 14(20DM-M004HAU), ThinkPad Yoga 14(20DM-M004JAU), ThinkPad Yoga 14(20DM-M004KAU), ThinkPad Yoga 14(20DM-MA00TAU), ThinkPad Yoga 14(20DM-MZ0BLUS), ThinkPad Yoga 15, ThinkPad Yoga 15 20DQ, ThinkPad Yoga 15 20DQ0038GE, ThinkPad Yoga 15 20DQ003RGE, ThinkPad Yoga 15 20DR, ThinkPad Yoga 15 20DRS02AGE, ThinkPad Yoga 260, ThinkPad Yoga 260 20FD001XGE, ThinkPad Yoga 260(20FD-000SAU), ThinkPad Yoga 260(20FD-000XAU), ThinkPad Yoga 260(20FD-0010AU), ThinkPad Yoga 260(20FD-0014AU), ThinkPad Yoga 260(20FD-0016AU), ThinkPad Yoga 260(20FD-CTO1WW), ThinkPad Yoga 260(20FD000SAU), ThinkPad Yoga 260(20FD000XAU), ThinkPad Yoga 260(20FD0010AU), ThinkPad Yoga 260(20FD0014AU), LENOVO [ThinkPad Yoga 260\(20FD0016AU\)](#) Laptop Battery, ThinkPad Yoga 260(20FDCTO1WW), ThinkPad Yoga 260(20FE-0003AU), ThinkPad Yoga 260(20FE-000VAU), ThinkPad Yoga 260(20FE-000YAU), ThinkPad Yoga 260(20FE-0010AU), ThinkPad Yoga 260(20FE-0011AU), ThinkPad Yoga 260(20FE-002AAU), ThinkPad Yoga

260(20FE-002BAU), ThinkPad Yoga 260(20FE-002DAU), ThinkPad Yoga 260(20FE-0032AU), ThinkPad Yoga 260(20FE-0036AU), ThinkPad Yoga 260(20FE-0037AU), ThinkPad Yoga 260(20FE-A005AU), ThinkPad Yoga 260(20FE-A006AU), ThinkPad Yoga 260(20FE-A008AU), ThinkPad Yoga 260(20FE-A01YAU), ThinkPad Yoga 260(20FE-A02EAU), ThinkPad Yoga 260(20FE-S00100), ThinkPad Yoga 260(20FE-S00200), ThinkPad Yoga 260(20FE-S00A00), ThinkPad Yoga 260(20FE-S00C00), ThinkPad Yoga 260(20FE-S05401), ThinkPad Yoga 260(20FE-S08C00), ThinkPad Yoga 260(20FE-S08N01), ThinkPad Yoga 260(20FE-S08P01), ThinkPad Yoga 260(20FE-S0DG00), ThinkPad Yoga 260(20FE-S0DH00), ThinkPad Yoga 260(20FE0003AU), ThinkPad Yoga 260(20FE000VAU), ThinkPad Yoga 260(20FE000YAU), ThinkPad Yoga 260(20FE0010AU), ThinkPad Yoga 260(20FE0011AU), ThinkPad Yoga 260(20FE002AAU), ThinkPad Yoga 260(20FE002BAU), ThinkPad Yoga 260(20FE002DAU), LENOVO [ThinkPad Yoga 260\(20FE0032AU\)](#) Laptop Battery, ThinkPad Yoga 260(20FE0036AU), ThinkPad Yoga 260(20FE0037AU), ThinkPad Yoga 260(20FEA005AU), ThinkPad Yoga 260(20FEA006AU), ThinkPad Yoga 260(20FEA008AU), ThinkPad Yoga 260(20FEA01YAU), ThinkPad Yoga 260(20FEA02EAU), ThinkPad Yoga 260(20FES00100), ThinkPad Yoga 260(20FES00200), LENOVO [ThinkPad Yoga 260\(20FES00A00\)](#) Laptop Battery, ThinkPad Yoga 260(20FES00C00), ThinkPad Yoga 260(20FES05401), ThinkPad Yoga 260(20FES08C00), ThinkPad Yoga 260(20FES08N01), ThinkPad Yoga 260(20FES08P01), ThinkPad Yoga 260(20FES0DG00), ThinkPad Yoga 260(20FES0DH00), LENOVO [ThinkPad Yoga 26020FD/20FE](#) Laptop Battery, ThinkPad Yoga 26020FD001WGE, ThinkPad Yoga 26020FD001XGE, ThinkPad Yoga 26020FD0047GE, ThinkPad Yoga 26020FD0048GE, ThinkPad Yoga 26020FE000VAU, ThinkPad Yoga 26020GS/20GT, ThinkPad Yoga 26020GS0009US, ThinkPad Yoga 370, ThinkPad Yoga 370-20JH002KGE, LENOVO [ThinkPad Yoga 370-20JH002LGE](#) Laptop Battery, ThinkPad Yoga 370-20JH002NGE, ThinkPad Yoga 370-20JH002SGE, ThinkPad Yoga 370-20JH002TGE, ThinkPad Yoga 370-20JJS00100, ThinkPad Yoga 370-20JJS0DY00, ThinkPad Yoga 37020JH002KGE, ThinkPad Yoga 37020JH002KMZ, ThinkPad Yoga 37020JH002LGE, ThinkPad Yoga 37020JH002MMZ, ThinkPad Yoga 37020JH002NGE, ThinkPad Yoga 37020JH002SGE, ThinkPad Yoga 37020JH002SMZ, ThinkPad Yoga 37020JH002TGE, ThinkPad Yoga 37020JJS00100, ThinkPad Yoga 37020JJS0DY00, ThinkPad Yoga 460, ThinkPad Yoga 460 20EL, LENOVO [ThinkPad Yoga 460 20ELS039GE](#) Laptop Battery, ThinkPad Yoga 460 20ELS03A00, ThinkPad Yoga 460 20ELS03U00, ThinkPad Yoga 460 20EM, ThinkPad Yoga 460 20EM000QGE, ThinkPad Yoga 460 20EM000VGE, ThinkPad Yoga 460 20FY, ThinkPad Yoga 460 20FY0002US, ThinkPad Yoga 460 20G, ThinkPad Yoga 460 20G0, ThinkPad Yoga L380, ThinkPad Yoga L380-20M5000UGE, ThinkPad Yoga L380-20M50012GE, ThinkPad Yoga L380-20M50013GE, ThinkPad Yoga L380-20M7001HGE, ThinkPad Yoga L38020M5000UGE, ThinkPad Yoga L38020M50012GE, ThinkPad Yoga L38020M50013GE, ThinkPad Yoga L38020M7001HGE, ThinkPad Yoga S1-120, ThinkPad Yoga S1-S240, Thinkpad yoga s3, ThinkPad Yoga X380, ThinkPad Yoga X38020LH/20LJ, ThinkPad Yoga X38020LH000PGE, ThinkPad Yoga X38020LH000QGE, ThinkPad Yoga X38020LH000SGE, ThinkPad Yoga(20CD-DS02W02), ThinkPad Yoga(20CD-DS05000), ThinkPad Z400A, ThinkPad Z500, ThinkPad Z500A, ThinkPad Z51, ThinkPad Z51-70, ThinkPad Z60M, ThinkPad Z60T, ThinkPad Z61, ThinkPad-Edge-E220s, ThinkPad-Edge-E220s-5038, ThinkPad-Edge-E220s-50382KU, ThinkPad-Edge-E220s-50382NU, ThinkPad-Edge-E420s, ThinkPad-Edge-E420s-4401, ThinkPad-Edge-E420s-440128U, ThinkPad-Edge-E420s-440129U, Thinkpad13, ThinkPadT430, ThinkPadX60s 1709, Thinkpad E521, TianYi100-14, TianYi100-14IBD, TianYi100-15IBD, TINKPAD T480, U260, LENOVO [U30](#) Laptop Battery, U300, U300s, U300s-IFI, U300s-ISE, U31, U31-70, U31-70(80M5003CGE), U31-70(80M5003DGE), U31-70(80M5003EGE), U31-70(80M5006UGE), U31-70(80M5006WGE), U31-70(80M5006XGE), LENOVO [U31-70\(80M5008KGE\)](#) Laptop Battery, U31-70(80M500A9GE), U31-70(80M500ADGE),

U31-70(80M500AGGE), U31-70(80M500FLGE), U31-70(80M500FMGE), U31-70(80M500FSGE), U31-70(80M500FVGE), U31-70-IFI, U31-70-ITH, U31-70A, U330P, U400, U400-IFI, U400-ITH, U410, U430, U430P, U450 3389, U460, U470, V100-15ISK, V1000 FHD-ISE, V1000AT-ISE, V1070-FX-7500 4G, V1070-FXSE, V110-15, V110-15AST, V110-15AST-80TD, V110-15AST-80TD000FGE, V110-15AST-80TD004VGE, V110-15AST-80TD005HGE, V110-15AST80TD, V110-15IAP, V110-15IAP-80TG00VXGE, V110-15IAP-80TG00VYGE, V110-15IAP-80TG00W2GE, V110-15IAP-80TG00W2MZ, V110-15IAP-80TG00W3GE, V110-15IAP-80TG00W4GE, V110-15IAP-80TG00W5GE, V110-15IAP-80TG00W7GE, V110-15IAP-80TG00W8GE, V110-15IAP-80TG00XWGE, LENOVO [V110-15IAP-80TG00XXGE](#) Laptop Battery, V110-15IAP-80TG012HGE, V110-15IAP-80TG012KGE, V110-15IAP-80TG012MGE, V110-15IAP-80TG012NGE, V110-15IAP-80TG012PGE, V110-15IAP-80TG0138GE, V110-15IKB, V110-15IKB-80TH, V110-15IKB-80TH0011GE, V110-15IKB-80TH001TGE, V110-15IKB-80TH001UGE, V110-15IKB-80TH001WGE, V110-15IKB-80TH001YGE, V110-15IKB-80TH0021GE, V110-15IKB-80TH002DGE, V110-15IKB-80TH002VGE, V110-15IKB-80TH002WGE, V110-15IKB-80TL01B2GE, LENOVO [V110-15ISK](#) Laptop Battery, V110-15ISK-80TL, V110-15ISK-80TL000PMB, V110-15ISK-80TL000QMB, V110-15ISK-80TL000RMZ, V110-15ISK-80TL000VGE, V110-15ISK-80TL0010MX, V110-15ISK-80TL0010UK, V110-15ISK-80TL008SUS, V110-15ISK-80TL0098AU, LENOVO [V110-15ISK-80TL009UIH](#) Laptop Battery, V110-15ISK-80TL00A4GE, V110-15ISK-80TL00AAGE, V110-15ISK-80TL00ABGE, V110-15ISK-80TL00ACGE, V110-15ISK-80TL00AHGE, V110-15ISK-80TL00AJGE, V110-15ISK-80TL0116GE, V110-15ISK-80TL0168GE, V110-15ISK-80TL018EGE, V110-15ISK-80TL01A3GE, V110-15ISK-80TL01ALGE, V110-15ISK-80TL01AMGE, V110-15ISK-80TL01ANGE, V110-15ISK-80TL01B2GE, V110-15ISK-80TL01CVGE, V130-14igm, V130-14igm 81hm, V130-14ikb, V130-151KB, LENOVO [V130-15IGM](#) Laptop Battery, V130-15IGM81HL, V130-15IGM81HL001JGE, V130-15IGM81HL0025GE, V130-15IGM81HL002DGE, V130-15IGM81HL002QGE, V130-15IGM81HL002RGE, V130-15IGM81HL002SGE, V130-15IGM81HL002VGE, V130-15IGM81HL003EGE, V130-15IGM81HN, V130-15IGM81HN00E0GE, V130-15IGM81HN00E8GE, V130-15IGM81HN00EDGE, V130-15IGM81HN00F6GE, V130-15IGM81HN00FAGE, V130-15IGM81HN00FYGE, V130-15IGM81HN00GWGE, V130-15IGM81HN00H1GE, V130-15IGM81HN00H8GE, V130-15IKB, V130-15IKB 81HN, V2000-ISE, V3000-ISE, LENOVO [V310](#) Laptop Battery, V310-14, V310-14IKB, V310-14IKB-80T2004CSB, V310-14IKB-80V8, V310-14ISK, V310-14ISK-80SX000UHH, V310-14ISK-80SX000VHH, V310-14ISK-80SX002KUS, V310-14ISK-80UF, V310-14ISK-80UF0004BR, V310-15, V310-15-IFI, V310-15-ISE, V310-15IKB, V310-15IKB-80SY02YQPB, V310-15IKB-80T300A0PB, V310-15IKB-80T300D3CK, V310-15IKB-80T300JHTX, V310-15IKB-80T300R5TA, V310-15IKB80SY02YQPB, V310-15IKB80T300A0PB, V310-15IKB80T300D3CK, V310-15IKB80T300JHTX, LENOVO [V310-15IKB80T300R5TA](#) Laptop Battery, V310-15ISK, V310-15ISK-80SY, V310-15ISK-80SY000WRK, V310-15ISK-80SY00E8PB, V310-15ISK-80SY00ERP, V310-15ISK-80SY00MRHV, V310-15ISK-80SY00R0PB, V310-15ISK-80SY00TWYA, V310-15ISK-80SY00WXHV, V310-15ISK-80SY014YYA, V310-15ISK-80SY015FPB, V310-15ISK-80SY02CFHH, V310-15ISK-80SY02FYPB, V310-15ISK-80SY02G0PB, V310-15ISK-80SY02G1PB, V310-15ISK-80SY02GLRA, V310-15ISK-80SY02H9US, V330 14 IKB 14, LENOVO [V330 151KB](#) Laptop Battery, V330-14, V330-14 81B0-004M(81B0004MSP), V330-14 81B1-000F(81B1000FIX), V330-14ARR, V330-14arr 81B1001EUK, V330-14ARR(81B1),

V330-14ARR(81B1001EUK), V330-14arr(81B1001FUS), V330-14ARR(81B1001GUS), V330-14ARR(81B1002CCF), V330-14igm, V330-14IKB, V330-14IKB 15, V330-14ikb 81b0, V330-14IKB(81B0004MGE), V330-14IKB(81B0004MUK), V330-14IKB(81B0A001HH), V330-14IKB(81B0A04XIH), V330-14IKB-81B0, V330-14IKB-81B0004HMZ, V330-14IKB-81B0004MGE, V330-14IKB-81B0004RGE, V330-14isk, V330-14isk 81ay, V330-15, V330-15IGM, V330-15IKB, V330-15IKB 81AX, V330-15IKB81AX006BMZ, V330-15IKB81AX006DMZ, V330-15IKB81AX00ARGE, V330-15IKB81AX00FFGE, V330-15IKB81AX00FGGE, V330-15IKB81AX00FSMZ, V330-15IKB81AX00JUGE, V330-15IKB81AX81DE, V330-15IKB81DC001QGE, V330-15IKB81DE00LMGE, V330-15IKB81DE00LNGE, V330-15IKB81DE01HDGE, V330-ARR, V33014IKB15, V380, V385, LENOVO [V4400 Series](#) Laptop Battery, V4400A Series, V480, V480 Series, V480A-IFI, V480c Series, V480S, V480s Series, V480s-IFI, V480U, V480u Series, V485, LENOVO [v5-171](#) Laptop Battery, V510-14IKB, V510-14IKB-80WR, V510-14IKB-80WR016LGE, V510-14IKB-80WR016MGE, V510-15, V510-15IKB, V510-15IKB, V510-15IKB-80SV, V510-15IKB-80SV00QUGE, LENOVO [V510-15IKB-80VC001NGE](#) Laptop Battery, V510-15IKB-80WQ, V510-15IKB-80WQ0000GE, V510-15IKB-80WQ0000MX, LENOVO [V510-15IKB-80WQ0001GE](#) Laptop Battery, V510-15IKB-80WQ0002GE, V510-15IKB-80WQ005CGE, V510-15IKB-80WQ017LGE, V510-15IKB-80WQ01SVGE, V510-15IKB-80WQ01SWGE, V510-15IKB-80WQ01TJGE, V510-15IKB-80WQ01TMGE, V510-15IKB-80WQ01VRGE, V510-15IKB-80WQ01VTGE, V510-15IKB-80WQ01VUGE, V510-15IKB-80WQ01VVGE, V510-15IKB-80WQ01VWGE, V510-15IKB-80WQ01VYGE, V510-15IKB-80WQ01W0GE, V510-15IKB-80WQ0210GE, V510-15IKB-80WQ025YGE, V510-15IKB-80WQ0260GE, V510-15IKB-80WQ0261GE, V510-15IKB-80WQ0287GE, LENOVO [V510-15IKB-80WQ0288GE](#) Laptop Battery, V530-14, V530-15, V530-15IKB, V530s, V530S-14, LENOVO [V530s-14 I7 8550U/8GB/256GB](#) Laptop Battery, V530s-14(i5-8250U/12G/256GB), V530s-14(i5-8250U/16G/512GB), V530s-14(i5-8250U/8G/256GB), LENOVO [V530s-14\(i5-8250U/8G/512GB\)](#) Laptop Battery, V540S, V580, V580 Series, V580c Series, V585, V71, V71 Series, V720-14, V720-14-IFI, V720-14-ISE, V720-1480Y1, V730 720S-15, V730-13, V730-15, V730-15-IFI, V730-15-ISE, vs330, W530i, W541, WB0204130D, Winbook N22, X1 1286CTO, X1 4TH GENERATION, X1 CARBON, LENOVO [X1 carbon 1st Gen](#) Laptop Battery, X1 Carbon 2016, X1 Carbon 2017, X1 Carbon 2018, x1 carbon 3444-25u, LENOVO [X1 CARBON 3448 5S4](#) Laptop Battery, X1 Carbon 3448-3y2, X1 CARBON 3RD GEN, X1 Carbon 4th Gen 20FB-A, X1 CARBON 5TH GEN 2017, X1 CARBON 6TH GEN, X1 Carbon 7th-gen, X1 CARBON GEN 1, X1 Carbon Model 3444CTO, X1 Extreme, X1 New Carbon 2015, x1 series, X1 Tablet(20GGA00K00), X1 TABLET(20GGA00L00), X1 TABLET(20GGA00N00), X1 Type 1294, X1 Yoga, X1 Yoga 20FQ, X1 YOGA 2ND, X1 Yoga 4th-gen, X1 YOGA GEN1, X1E, X200 7459-M78, X201S, X220 4291-37G, X220T, X230S, X240, X240S, X250, X250S, X260, X260-20F60041GE, X280 20KE, LENOVO [Xiaoxin 5000](#) Laptop Battery, Xiaoxin 510S, Xiaoxin 7000-13, Xiaoxin Air 12, Xiaoxin Air 12 6Y30, LENOVO [Xiaoxin Air 12 6Y54](#) Laptop Battery, Xiaoxin Air 12 LTE, Xiaoxin Air 12 WiFi, Xiaoxin Air 13, Xiaoxin Air 14, Xiaoxin Air 14 Pro, Xiaoxin Air 14-2019, Xiaoxin Air 15, XIAOXIN AIR PRO, Xiaoxin Air14 2019, Xiaoxin Chao 5000, Xiaoxin S340, xiaoxin700, Y100, y100 series, Y200 Series, Y330 Series, Y40-70, LENOVO [Y40-70AT-IFI](#) Laptop Battery, Y40-70AT-IFI(D), Y40-70AT-ISE, Y40-80, Y40-80-IFI, Y40-80-IFI(H), Y40-80-ISE, Y40-80AT-ISE, Y400, Y410, Y480, Y480 Series, Y480A-ISE, Y480M-IFI, Y480N Series, Y480P, Y480P Series, LENOVO [Y485](#) Laptop Battery, Y485N Series, Y485P Series, LENOVO [Y490A](#) Laptop Battery, Y490M, Y490N, Y490P, Y50-70, Y50-70 Touch, Y50-70(20378), Y50-70(5941845), LENOVO [Y50-70\(59421847\)](#) Laptop Battery, Y50-70(59421855), Y50-70(59421863), Y50-70(59426157), Y50-70(59428452), Y50-70(59436786),

Y50-70(59436787), Y50-70-ISE, Y50-70-ISE(D), Y50-70AM-IFI, Y50-70AM-IFI(8GB/1TB), Y50-70AM-IFI(H), Y50-70AM-IFI(I), Y50-70AM-IFI(R), Y50-70AM-IFI(U), Y50-70AM-ISE, Y50-70AM-ISE(D), Y50-70AM-ISE(H), Y50-70AS-ISE, Y50p, LENOVO [Y50p-70-IFI](#) Laptop Battery, Y50p-70-ISE, Y50p-70-ISE(U), Y510, Y520, Y530 15ICH, Y580, Y580M, Y580N, Y580P, Y585, Y70-70, Y70-70 Touch, Y70-70touch, Y700, Y700 Touch-15ISK, Y700 Touch15ISK, Y700-14ISK, Y700-15ISK, LENOVO [Y700-15ISK-ISE](#) Laptop Battery, Y700-17ISK, Y700-ISE, Y7000, Y7000 I7 8750H, Y7000-1050TI, Y7000-1060, LENOVO [Y7000P](#) Laptop Battery, Y7000P I5 8300H, Y7000P I7 8750H, Y7000P-1050TI, Y7000P-1060, Y7000P1050TI, Y70015ISK, Y70015ISKISE, Y70017ISK, Y700ISE, Y720-15, Y720-15IKB, Y740-15ICHG, Y800, Y800 Series, Y810, Y810 Series, Y900, Y9000K, Y9000K 2019SE, Y9000X, Y910 IdeaPad Y910, YB04080433, YB05357172, LENOVO [YB1-X91F](#) Laptop Battery, YB1-X91L, Ybo1688167, YD01K482, YD02GGKP, Yoga 10 (B8000-F), YOGA 10 B8000, YOGA 10 B8000AH16GSL-IT, Yoga 10 B8000AH16GSL-SE, LENOVO [Yoga 1050](#) Laptop Battery, Yoga 11, Yoga 11e, LENOVO [Yoga 11e 20G8-A001AU](#) Laptop Battery, Yoga 11e 20G8-S03400, Yoga 11e Thinkpad, Yoga 11S, Yoga 12, Yoga 12 X260, Yoga 131KB, YOGA 14, Yoga 14 20DM000VUS, Yoga 14 20FY0002US, Yoga 2, Yoga 2 11, YOGA 2 13, Yoga 2 13 Type 20344, Yoga 2 13(80DM), YOGA 2 830F, YOGA 2 PRI YB04021987, Yoga 2 Pro, Yoga 2 Pro 13, Yoga 2 Pro 13 Y50-70AS-ISE, Yoga 2 Pro 13.3, Yoga 2 Pro 20266, Yoga 2 Pro 59410414, Yoga 2 Pro Ultrabook, Yoga 2 Pro(80AY), Yoga 2 Pro-13 59-382893, Yoga 2 Ultrabook, Yoga 2830F, YOGA 3 11, Yoga 3 11 80J8, Yoga 3 11 Convertible, Yoga 3 11 series, Yoga 3 11-5Y10, Yoga 3 11-5Y10(D), Yoga 3 11-5Y10c, Yoga 3 11-5Y10D, LENOVO [Yoga 3 11-5Y71](#) Laptop Battery, Yoga 3 1180J8, Yoga 3 1180J80015GE, Yoga 3 1180J80016GE, Yoga 3 1180J8001WGE, Yoga 3 1180J8001XGE, Yoga 3 1180J8001YGE, Yoga 3 1180J8005FGE, Yoga 3 1180J8005GGE, Yoga 3 1180J8005HGE, LENOVO [Yoga 3 14](#) Laptop Battery, YOGA 3 PRO, Yoga 3 Pro 1370, YOGA 3 PRO 1370 80 HE, Yoga 3 Pro 1370 Series, Yoga 3 Pro-1370 80HE, Yoga 3 Pro-11370, Yoga 3 Pro-5Y71, YOGA 3 Pro-I5Y51, LENOVO [YOGA 3 Pro-I5Y70](#) Laptop Battery, YOGA 3 Pro-I5Y70(D), YOGA 3 Pro-I5Y70(F), YOGA 3 Pro-I5Y70(L), YOGA 3 Pro-I5Y71, YOGA 300, Yoga 310 11iap, YOGA 310-11IAP, Yoga 310-11IAP-80U2, Yoga 310-11IAP-80U2001AHH, Yoga 310-11IAP-80U2001HPH, Yoga 310-11IAP-80U20042GE, YOGA 310-11IAP-80U2006HSP, YOGA 31011IAP, Yoga 31011IAP80U2, Yoga 31011IAP80U2001AHH, LENOVO [Yoga 31011IAP80U2001HPH](#) Laptop Battery, Yoga 31011IAP80U20042GE, YOGA 31011IAP80U2006HSP, YOGA 314, Yoga 330-11IGM, Yoga 330-11IGM-81A6, Yoga 330-11IGM-81A6001MGE, Yoga 330-11IGM-81A6001NGE, Yoga 330-11IGM-81A6001PGE, Yoga 330-11IGM-81A60058MZ, Yoga 330-11IGM-81A6005QGE, Yoga 330-11IGM-81A6005UGE, YOGA 360, Yoga 370, YOGA 4 PRO, YOGA 4 Pro(YOGA900), LENOVO [Yoga 460](#) Laptop Battery, Yoga 460 20EM-CT01WW, YOGA 5 Pro, YOGA 5 Pro(512G), YOGA 5 Pro512G, LENOVO [yoga 500](#) Laptop Battery, Yoga 500 14ISK, YOGA 500 14ISK 80R5, YOGA 500-141SK, Yoga 500-14ACL, Yoga 500-14ACL80NA, Yoga 500-14ACL80NA0001IX, Yoga 500-14ACL80NA001EGE, Yoga 500-14ACL80NA003RGE, Yoga 500-14ACZ, Yoga 500-14IBD, Yoga 500-14IBD (80N4) Serie, Yoga 500-14IBD (80N400BQGE), LENOVO [Yoga 500-14IBD \(80N400BRGE\)](#) Laptop Battery, Yoga 500-14IBD (80N400BSGE), Yoga 500-14IBD (80N400JKGE), Yoga 500-14IBD (80N400T4GE), Yoga 500-14IBD (80N400T9GE), Yoga 500-14IBD (80N4012VGE), Yoga 500-14IBD (80N4013JGE), Yoga 500-14IBD (80N40142GE), Yoga 500-14IBD (80N4015QGE), Yoga 500-14IBD (80N4015UGE), Yoga 500-14IBD (80NE) Serie, Yoga 500-14IBD (80NE0008BR), LENOVO [Yoga 500-14IHW](#) Laptop Battery, Yoga 500-14IHW (80N5) Serie, Yoga 500-14IHW (80N50069GE), Yoga 500-14IHW80N5, Yoga 500-14IHW80N50069GE, Yoga 500-14ISK, Yoga 500-14ISK (80R5/80S7) Serie, Yoga 500-14ISK (80R5007UGE), Yoga 500-14ISK (80R5007VGE), Yoga 500-14ISK (80R50097SC), Yoga 500-14ISK (80R500AKGE), Yoga 500-14ISK (80R500E1GE), Yoga 500-14ISK (80R500EHGE), Yoga

500-14ISK (80S7002JGE), yoga 500-14sk, Yoga 500-15, Yoga 500-151BD, Yoga 500-15ACL, LENOVO [Yoga 500-15IBD](#) Laptop Battery, Yoga 500-15IBD(80N6), Yoga 500-15IBD(80N60019GE), Yoga 500-15IBD(80N6001JGE), Yoga 500-15IBD(80N6001KGE), Yoga 500-15IBD(80N60089GE), Yoga 500-15IBD(80N6008AGE), Yoga 500-15IBD(80N600GNGE), Yoga 500-15IBD(80N600GWGE), LENOVO [Yoga 500-15IBD\(80N600HQGE\)](#) Laptop Battery, YOGA 500-15IHW, LENOVO [Yoga 500-15IHW80N7](#) Laptop Battery, Yoga 500-15IHW80N7000CGE, Yoga 500-15IHW80N70025GE, Yoga 500-15IHW80N700CGE, Yoga 500-15ISK, Yoga 500-15ISK80R6, Yoga 500-15ISK80R60015GE, Yoga 500-15ISK80R60016GE, Yoga 500-15ISK80R60023GE, Yoga 500-15ISK80R60026GE, Yoga 500-15ISK80R6004AGE, Yoga 500-15ISK80R6004BGE, Yoga 500-15ISK80R60057GE, Yoga 500-15ISK80R60058GE, Yoga 500-15ISK80R60059GE, Yoga 500-15ISK80R6007SGE, Yoga 500-15ISK80R6008NGE, Yoga 500-15ISK80R600ADGE, Yoga 50014IBD, Yoga 50015, Yoga 510, Yoga 510 - 14isk, YOGA 510 14 ISK, Yoga 510 14AST, Yoga 510 14isk, YOGA 510 SERIES, YOGA 510-141SK, Yoga 510-14AST, YOGA 510-14AST 80S9, Yoga 510-14AST(80S9), Yoga 510-14AST(80S9000LGE), Yoga 510-14AST(80S9002MGE), Yoga 510-14AST(80S90030GE), Yoga 510-14IKB, YOGA 510-14IKB 80VB, YOGA 510-14IKB 80YM, Yoga 510-14IKB(80VB), Yoga 510-14IKB(80VB004DGE), Yoga 510-14IKB(80VB004RMJ), Yoga 510-14IKB(80VB0059PB), LENOVO [Yoga 510-14IKB\(80VB005LGE\)](#) Laptop Battery, LENOVO [Yoga 510-14IKB\(80VB006NGE\)](#) Laptop Battery, Yoga 510-14IKB(80VB0081GE), Yoga 510-14IKB(80VB008NGE), Yoga 510-14IKB(80VB008PGE), Yoga 510-14IKB-80VB004DGE, YOGA 510-14ISK, YOGA 510-14ISK 80S7, Yoga 510-14ISK 80S700GLGE, YOGA 510-14ISK 80UK, Yoga 510-14ISK(80S7), Yoga 510-14ISK(80S70016GE), Yoga 510-14ISK(80S7002LGE), Yoga 510-14ISK(80S7006CGE), Yoga 510-14ISK(80S700ADGE), Yoga 510-14ISK(80S700DEGE), Yoga 510-14ISK(80S700FDGE), Yoga 510-14ISK(80S700FUGE), Yoga 510-14ISK(80S700K4GE), Yoga 510-14ISK-80S700ADGE, Yoga 510-15IKB, Yoga 510-15IKB(80VC), Yoga 510-15IKB(80VC000WGE), Yoga 510-15IKB(80VC000XGE), Yoga 510-15IKB(80VC001NGE), Yoga 510-15IKB(80VC0037GE), YOGA 510-15ISK, Yoga 510-15ISK(80S8/80SR), Yoga 510-15ISK(80S8000FGE), Yoga 510-15ISK(80S80012GE), Yoga 510-15ISK(80SR00DWMB), Yoga 510-15ISK(80SR00EBMB), Yoga 51014AST, Yoga 51014IKB, LENOVO [Yoga 51014IKB80VB004DGE](#) Laptop Battery, Yoga 51014ISK 80S700GLGE, yoga 51014isk L15L2PB1, Yoga 51014ISK80S700ADGE, Yoga 51015IKB, YOGA 51015ISK, Yoga 510S 141SK, Yoga 520, YOGA 520 14IKB, YOGA 520 80X8, Yoga 520-14ast, Yoga 520-14IK(80X80097GE), YOGA 520-14IKB, Yoga 520-14IKB(80X8/81C8/80YM), Yoga 520-14IKB(80X8001TGE), Yoga 520-14IKB(80X80098GE), Yoga 520-14IKB(80X80099GE), LENOVO [Yoga 520-14IKB\(80X8009AGE\)](#) Laptop Battery, Yoga 520-14IKB(80X8009BGE), Yoga 520-14IKB(80X8009DGE), Yoga 520-14IKB(80X8009FGE), Yoga 520-14IKB(80X8009GGE), Yoga 520-14IKB(80X800JKGE), Yoga 520-14IKB(80X800KHGE), Yoga 520-14IKB(80X800MGGE), Yoga 520-14IKB(80X800MHGE), Yoga 520-14IKB(80X800RDGE), Yoga 520-14IKB(80X800REGE), Yoga 520-14IKB(80X800RGGE), Yoga 520-14IKB(80X800RHGE), Yoga 520-14IKB(80X800RJGE), Yoga 520-14IKB(80X800WVGE), Yoga 520-14IKB(80X800YVGE), Yoga 520-14IKB(80X800YXGE), Yoga 520-14IKB(80X80166GE), Yoga 520-14IKB(81C8001DGE), Yoga 520-14IKB(81C800H1GE), Yoga 520-14IKB(81C800H2GE), Yoga 520-14IKB-80X8006KSP, Yoga 520-14IKB-81C8001DGE, Yoga 520-14isk, YOGA 530, YOGA 530 14IKB, Yoga 530-14IKB 81EK, YOGA 6 PRO, YOGA 6 Pro-13, YOGA 6 Pro-13IKB, YOGA 7 Pro, YOGA 7 Pro-13IKB, Yoga 700, Yoga 700 11inch, Yoga 700 11isk 80QE, Yoga 700-111sk, Yoga 700-11ISK, Yoga 700-14ISK, Yoga 710, YOGA 710-14, Yoga 710-14IKB, Yoga 710-14IKB 80V40000HH, Yoga 710-14IKB 80V40001HH, Yoga 710-14IKB 80V4002HGE, Yoga 710-14IKB 80V4002JGE, LENOVO [Yoga 710-14IKB 80V40034RA](#) Laptop

Battery, Yoga 710-14IKB 80V40036RA, Yoga 710-14IKB 80V4003ARA, Yoga 710-14IKB 80V4003RPB, Yoga 710-14IKB 80V40048MH, Yoga 710-14IKB 80V4004BGE, Yoga 710-14IKB 80V4004JGE, Yoga 710-14IKB 80V4004KGE, Yoga 710-14IKB 80V4004NMH, Yoga 710-14IKB 80V4006FGE, Yoga 710-14ISK, Yoga 710-14ISK 80TY000QGE, Yoga 710-14ISK 80TY000RGE, Yoga 710-14ISK 80TY000SGE, Yoga 710-14ISK 80TY000TGE, Yoga 710-14ISK 80TY003GCK, Yoga 710-14ISK 80TY003HCK, YOGA 710-14ISK-IFI, YOGA 710-14ISK-ISE, YOGA 710-151SK, Yoga 710-15IKB, Yoga 710-15IKB(80V5), Yoga 710-15IKB(80V50000US), Yoga 710-15IKB(80V50009US), Yoga 710-15IKB(80V5000JRK), Yoga 710-15ISK, Yoga 710-15ISK(80U0), Yoga 710-15ISK(80U00005US), Yoga 710-15ISK(80U00006US), Yoga 710-15ISK(80U0000HRA), Yoga 710-15ISK(80UD01AMGE), YOGA 71014IKB, Yoga 720, Yoga 720 13, Yoga 720 13-IKB, YOGA 720-12, Yoga 720-12IKB, YOGA 720-12IKB 81B5, Yoga 720-12IKB(81B5), Yoga 720-12IKB(81B5001BGE), Yoga 720-12IKB(81B5001CGE), Yoga 720-12IKB(81B5004TGE), Yoga 720-12IKB(81B50057GE), Yoga 720-12IKB(81B5005PMZ), Yoga 720-12IKB-81B5003WSP, Yoga 720-13IKB, Yoga 720-13IKB 80X6, Yoga 720-13IKB 80X6001QGE, Yoga 720-13IKB 80X6001RGE, Yoga 720-13IKB 80X6001SGE, LENOVO [Yoga 720-13IKB 80X6001TGE](#) Laptop Battery, YOGA 720-13IKB 80X6004HHH, Yoga 720-13IKB 80X60050GE, Yoga 720-13IKB(81C3), Yoga 720-13IKB(81C3002JGE), Yoga 720-13IKB(81C3002KGE), Yoga 720-13IKB(81C3002LGE), Yoga 720-13IKB(81C3002MGE), Yoga 720-13IKB(81C3002NGE), Yoga 720-13IKB(81C3002PGE), Yoga 720-13IKB(81C30060GE), Yoga 720-13IKB(81C30061GE), Yoga 720-13IKB(81C30062GE), LENOVO [Yoga 720-13IKB\(81C3006TMZ\)](#) Laptop Battery, Yoga 720-13IKB(81C3008MGE), Yoga 720-13IKB(81C3008NGE), Yoga 720-13IKB(81C3008RGE), Yoga 720-13IKBR, Yoga 720-13IKBR(81C3), Yoga 720-13IKBR(81C3008PGE), Yoga 720-13IKBR(81C3008QGE), Yoga 720-15, Yoga 720-15Ikb, Yoga 720-15IKB-80X7, Yoga 720-15IKB80X7, Yoga 720-15IKB80X70041GE, Yoga 720-15IKB80X70042GE, Yoga 720-15IKB80X70043GE, Yoga 720-15IKB80X70058GE, Yoga 720-15IKB80X7005BGE, Yoga 720-15IKB80X7005CGE, Yoga 720-15IKB80X7007CMZ, Yoga 720-15IKB80X70091GE, Yoga 720-15IKB80X70092GE, Yoga 720-15IKB80X70093GE, Yoga 720-15IKB80X70094GE, Yoga 720-15IKB80X700BQGE, Yoga 720-15IKB80X700BRGE, Yoga 72013IKB, Yoga 72013IKB 80X6, Yoga 72013IKB 80X6001QGE, Yoga 72013IKB 80X6001RGE, Yoga 72013IKB 80X6001SGE, Yoga 72013IKB 80X6001TGE, YOGA 72013IKB 80X6004HHH, Yoga 72013IKB 80X60050GE, Yoga 730, Yoga 730 15, YOGA 730 151KB, Yoga 730 15Ikb, Yoga 730-13, Yoga 730-13IKB, Yoga 730-13IKB(81CT), Yoga 730-13IKB(81CT0018MZ), Yoga 730-13IKB(81CT005NMZ), Yoga 730-13IKB(81CT007YGE), Yoga 730-13IKB(81CT0080GE), Yoga 730-13IKB-81CT, YOGA 730-15, YOGA 730-151KB, Yoga 730-15IBK, LENOVO [Yoga 730-15IKB](#) Laptop Battery, Yoga 730-15IKB(81CU), Yoga 730-15IKB(81CU0011GE), Yoga 730-15IKB(81CU002UGE), Yoga 730-15IKB(81CU003XMZ), Yoga 730-15IKB(81CU0043GE), LENOVO [Yoga 730-15IKB\(81CU0044GE\)](#) Laptop Battery, Yoga 730-15IKB81CU, Yoga 730-15IKB81CU0011GE, Yoga 730-15IKB81CU002UGE, Yoga 730-15IKB81CU003XMZ, Yoga 730-15IKB81CU003XMZ Series, Yoga 730-15IKB81CU0043GE, Yoga 730-15IKB81CU0044GE, Yoga 730-15IWL, Yoga 730-15IWL-81JS, LENOVO [Yoga 730-15IWL-81JS000EGE](#) Laptop Battery, Yoga 730-15IWL-81JS000FGE, Yoga 730-15IWL-81JS000GGE, Yoga 730-15IWL-81JS000TMZ, Yoga 730-15IWL-81JS0011GE, Yoga 730-15IWL-81JS0022GE, Yoga 730-15IWL-81JS0023GE, Yoga 730-15IWL-81JS002EMZ, Yoga 730-15IWL-81JS002TGE, YOGA 73015, Yoga 73015IBK, Yoga 73015IKB, Yoga 73015IKB81CU, Yoga 73015IKB81CU0011GE, Yoga 73015IKB81CU002UGE, Yoga 73015IKB81CU003XMZ, Yoga 73015IKB81CU0043GE, Yoga 73015IKB81CU0044GE, Yoga 73015IWL, Yoga 73015IWL81JS, Yoga 73015IWL81JS000EGE, Yoga 73015IWL81JS000FGE, Yoga 73015IWL81JS000GGE, Yoga

73015IWL81JS000TMZ, Yoga 73015IWL81JS0011GE, Yoga 73015IWL81JS0022GE, Yoga 73015IWL81JS0023GE, Yoga 73015IWL81JS002EMZ, Yoga 73015IWL81JS002TGE, YOGA 830F, YOGA 900, Yoga 900 - 13ISK, Yoga 900 12ISK, Yoga 900-13ISK, Yoga 900-13ISK, Yoga 900-13ISK (80MK002FGE), Yoga 900-13ISK (80MK002GGE), Yoga 900-13ISK (80MK003YGE), Yoga 900-13ISK (80MK0040GE), Yoga 900-13ISK (80MK0041GE), Yoga 900-13ISK (80MK0072GE), Yoga 900-13ISK (80MK0073GE), Yoga 900-13ISK (80SD000HGE), Yoga 900-13ISK (80SD001PGE), LENOVO [Yoga 900-13ISK \(80SD001YMX\)](#) Laptop Battery, Yoga 900-13ISK (80SD002VGE), Yoga 900-13ISK (80SD0042GE), YOGA 900-IFI, YOGA 900-ISE, Yoga 900S, Yoga 900S 12ISK, Yoga 900S-12ISK 80ML001WGE, Yoga 900S-12ISK 80ML001XGE, Yoga 900S-12ISK 80ML001YGE, YOGA 900S-12ISK-6Y75, Yoga 910, YOGA 910 13IKB 80VF, Yoga 910-13, Yoga 910-13IKB, YOGA 910-13IKB (80VF), Yoga 910-13IKB (80VF00FQUS), Yoga 910-13IKB (80VF00FTUS), Yoga 910-13IKB (80VF00FUUS), LENOVO [YOGA 910-13IKB \(80VF00FWSB\)](#) Laptop Battery, Yoga 910-13IKB (80VF00LTUS), Yoga 910-13IKB (80VF00MBUS), YOGA 910-13IKB 80VF, Yoga 910-13IKB 80VG, Yoga 910-13IKB 80VG004AUS, Yoga 910-13IKB 80VG004BUS, LENOVO [Yoga 910-13IKB 80VGS00300](#) Laptop Battery, Yoga 910-13IKB(80VF/80VG), Yoga 910-13IKB(80VF002JUS), Yoga 910-13IKB(80VF0039US), Yoga 910-13IKB(80VF004BGE), Yoga 910-13IKB(80VF004CGE), Yoga 910-13IKB(80VF007TUS), Yoga 910-13IKB(80VF007UUS), Yoga 910-13IKB(80VF0091MZ), Yoga 910-13IKB(80VF009AMZ), Yoga 910-13IKB(80VF009BMZ), Yoga 910-13IKB(80VF00A8US), Yoga 910-13IKB(80VF00ACGE), Yoga 910-13IKB(80VF00B0HH), Yoga 910-13IKB(80VF00C3GE), Yoga 910-13IKB(80VF00C5GE), Yoga 910-13IKB(80VF00C6GE), Yoga 910-13IKB(80VF00DEGE), Yoga 910-13IKB(80VF00JJGE), LENOVO [Yoga 910-13IKB\(80VF00JLGE\)](#) Laptop Battery, Yoga 910-13IKB(80VF00JMGE), Yoga 910-13IKB(80VF00JNGE), Yoga 910-13IKB(80VF00JPGE), Yoga 910-13IKB(80VF00NJGE), Yoga 910-13IKB(80VGS00300), Yoga 910-13IKB-80VF00FHSP, Yoga 910-13IKB80VF/80VG, Yoga 910-13IKB80VF004BGE, Yoga 910-13IKB80VF004CGE, Yoga 910-13IKB80VF0091MZ, Yoga 910-13IKB80VF009AMZ, Yoga 910-13IKB80VF009BMZ, Yoga 910-13IKB80VF00ACGE, Yoga 910-13IKB80VF00C3GE, Yoga 910-13IKB80VF00C5GE, Yoga 910-13IKB80VF00C6GE, Yoga 910-13IKB80VF00DEGE, Yoga 910-13IKB80VF00JJGE, Yoga 910-13IKB80VF00JLGE, Yoga 910-13IKB80VF00JMGE, Yoga 910-13IKB80VF00JNGE, Yoga 910-13IKB80VF00JPGE, LENOVO [Yoga 910-13IKB80VF00NJGE](#) Laptop Battery, YOGA 910-13LKB, Yoga 910-15IKB, Yoga 91013IKB, YOGA 920, Yoga 920 13, Yoga 920 13-80Y70066US, Yoga 920-13IKB, Yoga 920-13IKB-80Y7, Yoga 920-13IKB-80Y7008RSP, Yoga 920-13IKB-80Y80029GE, Yoga 920-13IKB80Y7002XGE, Yoga 920-13IKB80Y7002YGE, Yoga 920-13IKB80Y70030GE, Yoga 920-13IKB80Y70031GE, Yoga 920-13IKB80Y70032GE, Yoga 920-13IKB80Y70033GE, Yoga 920-13IKB80Y70034GE, Yoga 920-13IKB80Y70035GE, Yoga 920-13IKB80Y70040MZ, LENOVO [Yoga 920-13IKB80Y70057GE](#) Laptop Battery, Yoga 920-13IKB80Y780Y8, Yoga 920-13IKB80Y8001AGE, Yoga 920-13IKB80Y8001BGE, Yoga 920-13IKB80Y80028GE, Yoga 920-13IKB80Y80029GE, YOGA 930-13IKB, Yoga B6000 8 inch Tablet, YOGA B8080-F, Yoga Book YB1-X90L, YOGA BOOK YB1-X91F, Yoga Book YB1-X91L, Yoga C640 13, Yoga C640 13IML, Yoga C740 14, Yoga C740-14IML, YOGA C740-15, Yoga C740-15IML, YOGA C930, YOGA C930-13EKB, YOGA C930-13IKB, Yoga C930-13IKB 81C4, YOGA C940, Yoga C940 14, Yoga C940 SP/A, Yoga C940-14IIL, Yoga C940-15, Yoga C940-15IRH, YOGA L851f, Yoga S1 20C0001HUS, Yoga S730, YOGA S730-13, YOGA S730-13IWL, Yoga S730-13IWL81J0, Yoga S730-13IWL81J0001GGE, Yoga S730-13IWL81J0001WGE, Yoga S730-13IWL81J0001XGE, Yoga S730-13IWL81J00029GE, Yoga S730-13IWL81J0002QGE, Yoga S740 14, YOGA S940 14, Yoga S940 81Q7, YOGA S940-14IWL, Yoga Tab 2-830F, Yoga Tab 3, Yoga Tab 3 Pro, Yoga Tab 3 Pro 10, Yoga Tab 3 Pro YT3-X90F, Yoga

Tab 3 Pro YT3-X90L, Yoga Tab 3 Pro YT3X90F, Yoga Tab 3 Pro YT3X90L, YOGA Tab 3 YT3-X50F, YOGA Tab 3 YT3-X50M, YOGA Tab 3 YT3X50F, YOGA Tab 3 YT3X50M, Yoga Tab3 Plus, YOGA Tab3 Plus-X703F, YOGA Tab3 Plus-X703L, YOGA TABLET 2, Yoga Tablet 2 1050F, Yoga Tablet 2 1051F, Yoga Tablet 2 1380F, LENOVO [YOGA TABLET 2 830L](#) Laptop Battery, YOGA TABLET 2 851F, Yoga Tablet 2 Pro 1380F, YOGA Tablet 2 Pro-1380F, Yoga Tablet 2 YT2-1051F, Yoga Tablet 2-1050F, YOGA Tablet 2-1051L, Yoga Tablet 3, Yoga Tablet 8, Yoga Tablet 8 60043, Yoga Tablet 8 B6000-F, Yoga Tablet 8 B6000-H, Yoga Tablet 8 B6000F, Yoga Tablet 8 B6000H, YOGA TABLET B8000, YOGA TABLET B8000-F, YOGA TABLET B8000-H, YOGA Tablet2 830L, YOGA Tablet2 830LC, YOGA X380, YOGA X390, Yoga X630, Yoga YT3-X50L, YOGA-15ISK (MODEL 80U0), Yoga11-TTH Tablet, YOGA2, Yoga2 11, Yoga2 13, Yoga3 11-5Y10c(U), Yoga3 11-5Y10cU, Yoga3 14 Series, Yoga3 14-IFI, Yoga3 14-IFI(D), Yoga3 14-ISE, yoga3 pro-1370, Yoga710, YOGABOOK YB1-X91F, YT-X703F, YT-X703L, YT2-830 Series, yt3 x50f, Yt3 X90, YT3-850F, YT3-850M, yt3-x50f, Yt3-X90, YT3-X90F, Yt3-x90l, YT3850F, YT3850M, Yt3X90, YT3X90F, YT3X90L, z 510, Z380, Z380 Series, Z385, Z40, Z40-59422614, Z40-70, Z40-75, Z400, Z400 TOUCH, Z41-70, Z41-70 (80K5002BUS), Z41-70 (80K5002DUS), Z41-70 (80K5002FUS), Z41-70 (80K5002GUS), Z41-70 (80K5003SUS), Z41-70 (80K5003TUS), Z41-70 (80K5003UUS), Z41-70 (80K5003VUS), LENOVO [Z41-70 \(80K5003XUS\)](#) Laptop Battery, Z41-70 (80K5003YUS), Z41-70 (80K50040CF), Z41-70 (80K50041CF), Z41-70 (80K50042CF), Z41-70 (80K50043CF), Z41-70 (80K50045CF), Z41-70 (80K50057US), Z41-70 (80K50058CF), Z41-70 (80K50059US), Z41-70 (80K5005AUS), Z41-70 (80K5005DUS), Z41-70 (80K5005EUS), Z41-70 (80K5005FCF), Z41-70 (80K5005GUS), Z41-70 (80K5005HCF), Z41-70 (80K5005JCF), Z41-70 (80K5005MCF), Z41-70 (80K5005NCF), Z410, Z460, LENOVO [Z470](#) Laptop Battery, Z480, Z480 Series, Z485, LENOVO [Z485 Series](#) Laptop Battery, Z485A-ASI, Z50, Z50 70, LENOVO [Z50-70](#) Laptop Battery, Z50-70 20354, Z50-75, Z500A-ISE, Z501, Z5070, Z51-70, LENOVO [Z51-70 \(80K6003PGE\)](#) Laptop Battery, Z51-70 (80K6003RGE), Z51-70 (80K6003SGE), Z51-70 (80K6003TGE), Z51-70 (80K6003UGE), Z51-70 (80K6003VGE), Z51-70 (80K6003WGE), Z51-70 (80K600GRGE), Z51-70 (80K600GSGE), Z51-70 (80K600NCGE), Z51-70 (80K600Q5GE), Z51-70 (80K600R1GE), Z51-70 (80K600R2GE), Z51-70 (80K600RSGE), Z51-70 (80K6015MGE), Z51-70 (80K6015TGE), Z51-70 (80K6017UGE), Z51-70 (80K6017VGE), z51-70 80k6, Z51-70 80K6003VGE, Z570 Ideapad 1024, Z580, Z580 Series, Z580-ISE, Z585, Z585 Series, Z585 Series., Z60 Series, Z70, Z70-80, Z710, Z710 Series, ZA0F0035AU, ZA16000-3JP, ZhaoYang K23,