

Lg Laptop Batteries (Replacement | Genuine)

[AU Laptop battery](#) >> [Au Laptop Computer Batteries](#) >> [LG Batteries](#)

By Brand: << [Prevpage](#) | [LEADER](#) | [LEMEL](#) | [LENOV](#) | [LENOVO](#) | LG | [LIFETEC](#) | [LION](#) | [LION SARASOTA](#) | [Nextpage](#) >>

All the Lg Laptop Batteries

1. [AU Genuine LG LBL111XE Battery 4ICR19/66 Rechargeable Li-ion 14.6V 43Wh](#)
2. [AU Genuine LG SJ13K Battery For XU100370-17008 13U580 Li-Polymer Rechargeable](#)
3. [AU Genuine LG NBP4B27 Battery A3226-H00J For X200 Series Li-ion 56Wh](#)
4. [AU New LBP7221E Battery For LG Gram 15ZD950 15ZD940 Series Laptop](#)
5. [AU BLT-17 Battery Li-Polymer LG BLT17 3.8v 4800mAh](#)
6. [AU SQU-1017 SQU-1007 Battery For LG XNOTE P420](#)
7. [AU LG A3222-H23 Battery Li-ion A3222H23 47Wh](#)
8. [AU LG LBN1220E Battery Li-Polymer 6850mah EAC62718303](#)
9. [AU LG LBR1223E Battery Li-Polymer 2ICP5/45/114-2 60wh](#)
10. [AU BL-T20 Battery For LG V520 V521 Tablet 4800mah](#)
11. [AU Genuine LG LBS1224E Battery For gram 14z980 series Laptop](#)
12. [AU LG L1P4128 Battery 7.4V 31Wh](#)
13. [AU Genuine LBP7221E Battery For LG Gram 15 Gram 15Z975 Series](#)
14. [AU Genuine LG BL-T10 Battery For Optimus GPad V500 Series](#)
15. [AU Genuine LG BL-T14 Battery For G Pad 8.0 V490](#)
16. [AU 41.44Wh Genuine LG LBB122UH Battery Pack 7.4V](#)
17. [AU Genuine LBF122KH Battery For LG Xnote P210 P220 P330](#)
18. [AU 30Wh Genuine LBG622RH Battery For LG XNOTE series](#)
19. [AU 30Wh Genuine LG LBG722VH Battery Pack 7.6V](#)
20. [AU Genuine LBH122SE Battery For LG U460 Ultrabook](#)
21. [AU 25.84Wh Genuine LBJ722WE Battery Pack For LG Laptop](#)
22. [AU Genuine LG LBK722WE Battery Pack 7.6V 4.8Ah](#)
23. [AU Genuine LG LBM722YE Battery 2ICP4/73/113 34.61Wh](#)
24. [AU battery for 4400mAh LG POLY TP300L](#)
25. [AU New SQU-804 SQU-904 SQU-805 SQU-807 Battery For LG R410 R470 R510 R570 R580 R590 3D RB510 Series Battery Black 6cell](#)
26. [AU battery for 2200mAh LG 15N53](#)
27. [AU Genuine LG BL-T12 G Pad 7.0 V400 V410 Tablet Battery](#)
28. [AU New BL-T13 Battery for LG G PAD VK700 10.1inch TABLET](#)
29. [AU LG Xnote P330 Laptop Battery LB6211NF LB6211NK 5200mAh](#)
30. [AU LG LB6211NF LB6211NK Battery for LG Xnote P330 Series 56Wh](#)
31. [AU Genuine LBG522QH Battery for LG Z360 Z360-GH60K 11.1V 4000mAh](#)
32. [AU battery for 0mAh LG SQU-1111](#)
33. [AU battery for 2600mAh LG 15N53](#)
34. [AU battery for 0mAh LG HP011214-PLP13G01](#)
35. [AU LB6211BE Battery For LG P300 P310 Laptop 5200mah 6 Cells](#)

36. [AU Laptop battery LG CQB918 CQB914 11.1V 57Wh](#)
37. [AU LG SQU-1003,3ICR19/65-2 Laptop Battery 4400MAH](#)
38. [AU SQU-804 SQU-904 SQU-805 SQU-807 Battery For LG R410 R470 R510 R570 R580 R590 3D RB510 Series](#)
39. [AU 916T2173F CQB914 SQU-1007 Battery for LG XNOTE P420 PD420](#)
40. [AU Genuine LB62117B battery for LG X100 X101 X Series Laptop 5200mah](#)
41. [AU New OEM SQU-524 Replacement Battery 6-Cell For LG F1 E500 Series Laptop](#)
42. [AU LG SQU-805, SQU-804, R410, R510 Laptop Battery 11.1V 6-Cell White](#)
43. [AU battery for 5200mAh LG A520 Series, T280 Series, SQU-914, A505 Series,](#)
44. [AU LG SQU-703 AL-096 4UR18650Y-QC-PL1A E510 Series Battery](#)
45. [AU LG LB65117E, A1 EXPRESS DUAL, A1-PB10A, A1-PP01A9, A1-PPRAG, A1 Series Replacement Laptop Battery](#)
46. [AU LG SQU-702 916C7030F 916C7010F EUP-P3-4-22 E510 Series Battery](#)
47. [AU LB65116B LB62116B Battery For LG TX-ADGAG TX-ADGDG TX-ADGEG TX-ADGFG TX Series Laptop](#)
48. [AU battery for 4400mAh LG E500, BTY-M66, E500-J.AP83C1,](#)
49. [AU battery for 4400mAh LG E500, BTY-M66, E500-J.AP83C1,](#)
50. [AU 6-Cells LBA211EH Battery for LG X120 Series](#)
51. [AU LG LBA211EH, X120 Series Replacement Laptop Battery](#)
52. [AU LG LBA211EH, X120 Series Replacement Laptop Battery 6600mAh 9-Cells](#)
53. [AU LG LBA211EH, X120 Series Replacement Laptop Battery 6600mAh White](#)
54. [AU LG LB52113B, LB52113D, LM40, LM50, LM60, LS, LS50, LW40, LW65, LW75, R1, R400, R405, RD400, S1, T1, V1 Series Battery](#)
55. [AU LG SQU-804 SQU-805 SQU-807 Battery For LG LGR41 R410 R510 R580](#)
56. [AU LG LB62115E, M1, P1, W1-D2RLV1, W1 Series Replacement Laptop Battery 4400mAh 11.1V](#)
57. [AU battery for 4800mAh LG E500, BTY-M66, E500-J.AP83C1,](#)
58. [AU Genuine LG SQU-805, SQU-804, R410, R510 Battery 4400mAh 11.1V 6-Cell](#)
59. [AU battery for 4400mAh LG E500-J.AP83C1, F1 Series, E500, BTY-M66,](#)
60. [AU battery for 6600mAh LG F1 Series,](#)
61. [AU LG BTY-M52, 925C2240F, 925C2310F, K1 Express Series Battery 4400mAh 6-Cell](#)
62. [AU battery for 5200mAh LG X110-L A7SBG, X110 Series, X110 10" UMPC series, x110g,](#)
63. [AU battery for 6600mAh LG X110-L A7SBG, X110 Series, X110 10" UMPC series, x110g,](#)
64. [AU battery for 6600mAh LG X110-L A7SBG, X110 Series, X110 10" UMPC series, x110g,](#)
65. [AU battery for 5200mAh LG X110 Series, X110 10" UMPC series, x110g, X110-G A7HBG,](#)

LG Notebook Batteries List By Battery Model

[1016T-006](#), [1049020050](#), [1510-0AXL000](#), [1544-7777](#), [2ICP4/73/113](#), [2ICP545114-2](#), [2ICP5451142](#), [3ICR19/65-2](#), [3UR18650-2-T0144](#), [3UR18650-2-T0188](#), [3UR18650-2-T0412](#), [4ICR19/66](#), [4UR18650F-QC-PL1A](#), [4UR18650F-QC-PL3](#), [4UR18650Y-2-QC-PL1](#), [4UR18650Y-2-QC-PL1A](#), [4UR18650Y-QC-PL1A](#), [6911B00068B](#), [906C5040F](#), [916C4950F](#), [916C5080F](#), [916C6110F](#), [916C7010F](#), [916C7030F](#), [916C7660F](#), [916C7830F](#), [916T2173F](#), [925C2240F](#), [925C2310F](#), [925C2590F](#), [957-1016T-005](#), [957-1016T-006](#), [A32-H13](#), [A3222-H13](#), [A3222-H23](#), [A3222H23](#), [A3226-H100J](#), [A3226-H13](#), [A4226-H43](#), [APB8C](#), [B2000](#), [BL-T10](#), [BL-T12](#), [BL-T13](#), [BL-T14](#), [BL-T17](#), [BLT10](#), [BLT14](#), [BLT17](#),

[BTY-L71](#), [BTY-M52](#), [BTY-M66](#), [CQB901](#), [CQB914](#), [CQB918](#), [E217462](#), [EAC34785411](#), [EAC60958201](#), [EAC61538601](#), [EAC6167900](#), [EAC61679004](#), [EAC62159101](#), [EAC62638401](#), [EAC62718303](#), [EUP-P3-4-22](#), [EUP-P5-1-22](#), [F4 YS-1](#), [GBM-BMS080AAA00](#), [GBM-BMS080ABA00](#), [GC02001H400](#), [HP011214-PLP13G01](#), [L0690E1](#), [L0690L1](#), [L0890L1](#), [L1P4128](#), [LABA03BLK](#), [LB12212A](#), [LB32111B](#), [LB3211EE](#), [LB3211LK](#), [LB3511EE](#), [LB42212C](#), [LB422168](#), [LB42216B](#), [LB52113B](#), [LB52113D](#), [LB52114B](#), [LB62114B](#), [LB62114E](#), [LB62115E](#), [LB62116B](#), [LB62117B](#), [LB621188](#), [LB62118B](#), [LB62118E](#), [LB62119E](#), [LB6211BE](#), [LB6211DE](#), [LB6211LK](#), [LB6211NF](#), [LB6211NK](#), [LB6211DE](#), [LB6411EH](#), [LB65116B](#), [LB65117E](#), [LB7511AB](#), [LBA211EA](#), [LBA211EH](#), [LBB122UH](#), [LBB722FH](#), [LBF122KH](#), [LBG522QH](#), [LBG622RH](#), [LBG722VH](#), [LBH122SE](#), [LBJ722WE](#), [LBK722WE](#), [LBL111XE](#), [LBM722YE](#), [LBN1220E](#), [LBP7221E](#), [LBR1223E](#), [LBS1224E](#), [LBT1115E](#), [LG7511AB](#), [LHBA06ANONE](#), [LIP4128](#), [LMBA06.AEX](#), [LRBA06BLU](#), [LSBA06.AEX](#), [MS991109-ZZP12G01](#), [MS991109ZZP12G01](#), [NBP4B27](#), [P210](#), [P220](#), [P330](#), [R410-G.ABMUV](#), [S91-030003M-SB3](#), [S91-0300140-W38](#), [S9N0182200-G43](#), [SJ13K](#), [SQU-1002](#), [SQU-1003](#), [SQU-1007](#), [SQU-1017](#), [SQU-1106](#), [SQU-1111](#), [SQU-503](#), [SQU-524](#), [SQU-702](#), [SQU-703](#), [SQU-804](#), [SQU-805](#), [SQU-807](#), [SQU-902](#), [SQU-904](#), [SQU-914](#), [SQU1007](#), [SQU1017](#), [SW8-3S4400-B1B1](#), [WT10536A4091](#), [XBA06LG-W20](#), [XBA06LG-W25](#),

LG Batteries List By LG Notebook Computer Model

13U580, 13z940, LG [13Z940-G.AT7WA](#) Laptop Battery, 13Z940-G.BK71P1, 13Z940-G.DK71P1, 13Z940-GH30K, LG [13Z940-GT70K](#) Laptop Battery, 13Z940G.BK71P1, LG [13Z940G.DK71P1](#) Laptop Battery, 13Z940GH30K, 13Z950, 13Z950-A.AA3WU1, 13Z980, 13Z990, 13Z990-V.AA33C, 13Z990-V.AA53C, 13ZD940-GX58K, 13ZD940GX58K, 14z950, 14Z950-A, 14Z950-A.AA3GU1, 14Z950-A.AA4GU1, 14Z950-G.BK71P1, 14Z950-G.DK71P1, 14Z950-LT1GK, 14Z950A, 14Z950G.BK71P1, 14Z950G.DK71P1, 14Z970, 14Z970-A.AAS5U1, 14Z980, 14Z990, 14Z990-H.AA75C, 14Z990-V.AA52C, 14Z990-V.AA53C, 14ZD960-GX5GK, 15N53, 15N540-A, 15N540-C, LG [15N540-E](#) Laptop Battery, 15N540-F, 15N540-G, 15N540-H, 15N540-K, 15N540-L, 15N540-M, 15N540-R, 15N540-U, 15N540-U.AT7SK, 15ND540, 15ND540-E, 15ND540-G, 15ND540-GX50K, 15ND540-GX5FK, 15ND540-U, 15ND540-UX50K, 15ND540-UX5SK, 15U340, LG [15U560-K](#) Laptop Battery, 15Z96, 15Z960-GA5BK, 15Z970-A.AAS7U1, 15Z970-GA50K, 15Z970-U.AAS5U1, 15Z980, 15Z990, 15Z990-H.AA75C, 15Z990-V.AA52C, 15Z990-V.AA53C, 15ZD970, LG [17Z990](#) Laptop Battery, 17Z990-V.AA53C, 17Z990-V.AA75C, A1 EXPRESS DUAL, A1 Series, A1-PB10A, A1-PP01A9, A1-PPRAG, A305, A310, A405 Series, A410 Series, A505 Series, A515 Series, A520 Series, A550, AA50K, AD510 Series, AD520 Series, AL-096, Aurora Xnote S430, Aurora Xnote S530, BL-T20, LG [C1 Series](#) Laptop Battery, C400 Series, C500, CD400 Series, CD500, E300, E310, E500, E500 Series, E500-J.AP83C1, E510 Series, EAC62198201, EAC62718301, EAC62718304, EASY NOTE MZ36, EasyNote Argo C, EasyNote MZ35, EasyNote MZ35-001, EasyNote MZ35-100, EasyNote MZ35-200, EasyNote MZ35-U-005, EasyNote MZ35-V-054, LG [EasyNote MZ35-V-057](#) Laptop Battery, EasyNote MZ35-V-060, EasyNote MZ35-V-080, EasyNote MZ35-V-081, EasyNote MZ35-V-106, EasyNote MZ36, EasyNote MZ36-R-017, EasyNote MZ36-T-015, EasyNote MZ36-T-019, EasyNote MZ36-U-001, EasyNote MZ36-U-038, EasyNote MZ36-U-086, EasyNote MZ36-V-107, EasyNote MZ36-V-113, EasyNote MZ36-V-117, EasyNote MZ36-V-120, EasyNote MZ36-V-122, F1 EXPRESS DUAL, F1 PRO EXPRESS DUAL, F1 Series, F1-2224A, F1-2225A9, LG [F1-2226A](#) Laptop Battery, F1-222EG, F1-2235A9, F1-2245A9, F1-224EG, F1-2255A9, F1-225EG, F1-225GY, F1-226EG, F1-227EG, F1-227GY, F1-228EG, F1-228GY,

F1-22PTV, F1-2324A, F1-2325A, F1-23MMV, F1-23PXV, F1-2A24A, F1-2A26A, LG [F1-2A27A](#) Laptop Battery, F1-2A36A, F1-2A3GY, F1-2A4GY, F1-2AE9G, F1-2ARNV, F1-2K25A9, G Pad 8.0 V490, G Pad X 80 V521, G PAG III 8.0, G410, GP2, GP2W, Gram 13 13Z990-V.AA33C, Gram 13 13Z990-V.AA53C, Gram 13Z940-AT5SA, Gram 13Z940-AT5WA, Gram 13Z940-G.AF5BL, Gram 13Z940-G.AFLGL, Gram 13Z940-G.AH30K, Gram 13Z940-G.AH3MK, Gram 13Z940-G.AH3PK, Gram 13Z940-G.AH50K, Gram 13Z940-G.AH70K, Gram 13Z940-G.AHSBL, Gram 13Z940-G.AT30K, Gram 13Z940-G.AT3BK, Gram 13Z940-G.AT3MK, Gram 13Z940-G.AT50K, Gram 13Z940-G.AT70K, Gram 13Z940-GH3BK, Gram 13Z940-GH3MK, Gram 13Z940-GH3PK, Gram 13Z940-GH50K, Gram 13Z940-GH5BK, Gram 13Z940-GH70K, Gram 13Z940-LT1PK, Gram 13Z980, Gram 13Z980-A, Gram 13Z980-G, Gram 13ZD940-G.AX30K, Gram 13ZD940-G.AX38K, Gram 13ZD940-G.AX3BL, Gram 13ZD940-G.AX50K, Gram 13ZD940-G.AX58K, LG [Gram 13ZD940-G.AX70K](#) Laptop Battery, Gram 13ZD940-GX30K, LG [Gram 13ZD940-GX50K](#) Laptop Battery, Gram 13ZD940-GX70K, GRAM 13ZD950, GRAM 13ZD950-GX50K, GRAM 13ZD950-GX70K, Gram 14, Gram 14z 980, Gram 14Z950-G.AR51B, LG [Gram 14Z950-GA3MK](#) Laptop Battery, Gram 14Z950-GR3GK, Gram 14Z950-GT3MK, Gram 14Z950-GT50K, Gram 14Z950-GT70K, Gram 14Z950-MFLGL, Gram 14Z950-MNDKL, Gram 14Z960, GRAM 14Z960-G.AH51A2, Gram 14Z970, Gram 14Z970-A.AAS5U1, Gram 14Z970-A.AAS7U1, Gram 14Z970-AAAS5U1, Gram 14Z970-AAAS7U1, Gram 14Z970-G, Gram 14Z970-G.AA52C, Gram 14Z970-G.AA53C, GRAM 14Z970-G.AA5BB, Gram 14Z970-G.AA75C, Gram 14Z970-G.AA76C, Gram 14Z970-GAA52C, Gram 14Z970-GAA53C, LG [Gram 14Z970-GAA75C](#) Laptop Battery, Gram 14Z970-GAA76C, Gram 14Z970-U.AP71U1, Gram 14Z970-UAP71U1, Gram 14Z970AAAS5U1, Gram 14Z970AAAS7U1, Gram 14Z970G, Gram 14Z970GAA52C, Gram 14Z970GAA53C, Gram 14Z970GAA75C, Gram 14Z970GAA76C, Gram 14Z970UAP71U1, Gram 14z980, Gram 14Z980-A.AAS7U1, Gram 14Z980-G.AA52A1, Gram 14Z980-G.AA52B, Gram 14Z980-U.AAW5U1, Gram 15, Gram 15 15Z990-H.AA75C, Gram 15 15Z990-V.AA52C, LG [Gram 15 15Z990-V.AA53C](#) Laptop Battery, Gram 15 LBP7221E, Gram 15Z950-GT30K, Gram 15Z950-GT3BK, Gram 15Z950-GT50K, Gram 15Z950-GT54K, Gram 15Z950-GT5BK, Gram 15Z950-GT5GK, Gram 15Z950-GT5SE, Gram 15Z950-GT70K, Gram 15Z950-LT10K, Gram 15Z970, Gram 15Z970-G.AA52C, Gram 15Z970-G.AA53C, Gram 15Z970-G.AA75C, Gram 15Z970-G.AA76C, Gram 15Z970-GAA52C, Gram 15Z970-GAA53C, Gram 15Z970-GAA75C, Gram 15Z970-GAA76C, Gram 15Z970GAA52C, Gram 15Z970GAA53C, Gram 15Z970GAA75C, Gram 15Z970GAA76C, Gram 15Z975, Gram 15Z980, Gram 15Z980-A.AAS7U1, Gram 15Z980-A.AAS8U1, Gram 15Z980-B.AA78B, Gram 15Z980-G.AA52, Gram 15ZD950, Gram 15ZD950-GX30K, Gram 15ZD950-GX32K, Gram 15ZD950-GX3BL, Gram 15ZD950-GX3HK, Gram 15ZD950-GX50K, Gram 15ZD950-GX51K, Gram 15ZD950-GX52K, Gram 15ZD950-GX58HK, Gram 15ZD950-GX58K, Gram 15ZD950-GX5BHK, Gram 15ZD950-GX5BK, Gram 15ZD950-GX5GHK, Gram 15ZD950-GX5GK, Gram 15ZD950-GX5HK, Gram 15ZD950-GX5WK, Gram 15ZD950-GX70HK, Gram 15ZD950-GX70K, Gram 15ZD950-GX7BHK, Gram 15ZD950-GX7BK, Gram 15ZD950-LX10K, Gram 17 17Z990, Gram 17 17Z990-V.AA53C, Gram 17 17Z990-V.AA75C, Gram 17Z990, Gram 17Z990-R.AAS7U1, Gram 2018 13Z980, Gram 2018 13Z980-G.AA53C, Gram 2018 14Z980, Gram 2018 14Z980-G.AA52C, Gram 2018 14Z980-G.AA53C, Gram 2018 14Z980-T.AA52C, Gram 2018 15Z980, Gram 2018 15Z980-G.AA52C, Gram 2018 15Z980-G.AA53C, Gram 2018 15Z980-G.AA75C, Gram 2018 15Z980-T.AA75C, K1 Express, K1 Express Series, K1 Series, K1-113PR, K1-2224A, K1-2225A8, K1-222CR, K1-222DR, K1-222EG, K1-222PR, K1-223MA, K1-223PR, K1-223VG, K1-223WG, K1-2245G, K1-2249A9, K1-225NG, K1-2333V, K1-23MXV, K1-23XPV, K1-311DR, LG [K1-322CR](#) Laptop Battery, K1-323DR, K1-323MA, K1-323WG, K1-333WG, K1-355DR, K1-422DR, LE50 Series, LG [LG X120](#) Laptop Battery, LG15Z96, LGP33,

LGR41, LGW6, LM Series, LM40 Series, LM50 Series, LM60, LM60 Express, LM60 Series, LM60-3B5C1, LM60-CBJA, LM70, LM70 Express, LM70 Series, LM70-QKXA, LS45, LS50, LS50 Series, LS50-AGHF1, LS50-AGHU1, LS55, LS55 Express, LS55 Series, LS55-1EFA, LS55-1GJA, LG [LS70](#) Laptop Battery, LS70 Express, LS70 Series, LS75, LS75 Express, LS75 Series, LT20, LU-20, LU20-56NA, LW20 Express, LW20 Series, LW20-12DU1, LW20-1333, LW20-1555, LG [LW20-1757](#) Laptop Battery, LW20-1777, LW20-2DDG, LW20-32DK, LW20-32DU1, LW20-3333, LW20-33MK, LW20-3555, LW20-3577, LW20-35MK, LW20-3777, LW20-72DK, LW20-72DU1, LW20-73MK, LW20-8DDG, LW20-ADMA, LW20-DOX2, LW20-EV2LK, LW20-EV3MK, LW20-J2MV2, LW237AJLS60981, LW25 Express Dual, LW25 Express Series, LG [LW25-ANHV1](#) Laptop Battery, LW25-ANHV2, LW25-B3HD, LW25-B4TK, LW25-B5600, LW25-B78A5, LW25-B7HD, LW25-B7HG, LW25-B7HV1, LW25-B7HV2, LW25-BDUO3, LW25-D38A9, LW25-DUO1, LW25-EV3HK, LW40, LW40 Express, LW40 Series, LW60, LW60 Express, LW60 Series, LW60-B3M44A, LW60-BAJA, LW60-D2JA, LW60-DBJA, LW60-QCMA, LW65, LW65 Express, LW65 Series, LG [LW70](#) Laptop Battery, LW70 Express, LW70 Series, LW70-QJMA, LW70-QLZA, LW75, LW75 Express, LW75 Series, LZ15Z96, M1 Express Dual, M1 Pro Express Dual, M1 Series, M1-3DGAG, M1-3DGBG, M1-3DGCG, M1-3DGDG, M1-5277V1, M1-5DGEG, M1-G222A, M1-G3C3A, M1-J001A9, LG [M1-J2ABV1](#) Laptop Battery, M1-J2NGV1, M1-J2YKV, M1-JDGAG, M1-JDGFG, M1-M2FTV1, MD95597, Megabook L710, Megabook L715, Megabook L720, Megabook L725, Megabook L730, Megabook L735, Megabook L740, Megabook L745, Megabook M520, Megabook M522, MZ36, notebook r490, Optimus GPad V500, P1 Express Dual, P1 Pro Express Dual, P1 Series, P1-5001A9, P1-5002A9, P1-52A7A, P1-52JJV1, P1-52SBV1, P1-J001A9, P1-J003A9, P1-J004A9, P1-J101A, P1-J102A, LG [P1-J24PV1](#) Laptop Battery, P1-J2A8A, P1-J2CJV1, P1-J2MXV1, P1-J2PAV1, P1-J2RRV1, P1-J2SDF, P1-J7P1A, P1-JDGAG, P1-JDGBG, P1-JDGCG, P1-JDGDG, P1-JDGFG, P1-JDGGG, P1-KPRAG, P1-KPRBG, P1-P282F, P1-P2LCF, P100 Series, P100 table, P100S table, P300, P310, P310 elini f9550, P330, P420, P420 Series, P430, P510, P530 Series, P530-KE40K, PAD V500, PD420, POLY TP300L, R1 Pro Express Dual, R1 Series, R1-C001A9, R1-C002A9, R310, R380, R400 Series, R400-5222A3, R400-52HGP1, R400-EP23A3, R400-MP22A3, R405, R405-G.CBB1A9, R405-G.CPB1A9, R405-G.CPBSA9, R405-GB02A9, R405-GP01A9, R405-S.CPCBG, R405-S.CPCDG, R405-SPCAG, R410, R470, R480, R490, R500, R500 S510-X Series, R500 Series, R510, R560, R570, R570 3D, R580, R590, R590 3D, RA380, RB380, RB410, RB510, RD310, RD310 Series, RD310-K.AD01, RD310-K.AD01C, RD310-K.AD32C, RD310-KADXXC, RD400, RD400-5D2A2, RD560, RD560-C.ADPME, RD560-C.ADPME3RD560-L.ADSBE3, RD560-C.ADPNE3, RD560-L.AD26E, RD560-L.AD33E, RD560-U.AD18E, RD580, RD580-U.AD18E, RD580-U.ADKSE, S1 Express Dual, LG [S1 Pro Express Dual](#) Laptop Battery, S1 Series, LG [S430](#) Laptop Battery, S525, S53, S530, S620 Series, S900, S900-G.C277A2, S900-G.CBMMV, S900-G.CP01A9, S900-G.CP33R, S900-G.CPB1A2, S900-G.CPEEV, S900-G.P7100K, S900-K.CP01A9, S900-K.CP02A9, S900-K.CP17V, S900-K.CPDDV, S900-K.CPRBY, S900-K.CPSCG, S900-K.CPU5A2, LG [S900-K.CPU6A2](#) Laptop Battery, S900-U.CBCJV, S900-U.CP001C, S900-U.CP002, S900-U.CP17R, S900-U.CP18R1, S900-U.CP28R1, S900-U.CP29R, S900-U.CP29R1, S900-U.CP38R, S900-U.CPCAG, S900-U.CPCBG, S900-U.CPRBG, S900-U.CPS1A, S900-U.CPYVYV, S900-U.P73K, S900U, LG [SB85](#) Laptop Battery, SB86, LG [Series](#) Laptop Battery, SIM2040, SIM2050, LG [SQU-601](#) Laptop Battery, T1 Express Dual, T1 Series, T280 Series, T290 Series, T380, TX EXPRESS, TX Series, TX-42RHV, TX-A2MSV, TX-A2MSV2, TX-A2MSV3, TX-ADGAG, TX-ADGDG, TX-ADGEG, LG [TX-ADGFG](#) Laptop Battery, U460 Ultrabook, U460-G.AH5SK Ultrabook, U460-K.AH50K Ultrabook, U460-K.AH5DK Ultrabook, LG [U460-M.AFB5L Ultrabook](#) Laptop Battery, U460G.AH5SK Ultrabook, U460K.AH50K Ultrabook,

U460K.AH5DK Ultrabook, U460M.AFB5L Ultrabook, UC-7308, LG [UC-7308u](#) Laptop Battery, UC-7807, UC-7807u, UC7308u, UC7807u, LG [V1 Series](#) Laptop Battery, V1-W4WHV, V400, V410, V490, LG [V500](#) Laptop Battery, V520, V521 Tablet, Vk500, VK700, Vk810, Vk815, W1 Pro Express Dual, W1 Series, W1-D2RLV1, LG [W1-D2STV1](#) Laptop Battery, W1-J2DTV1, W1-J2HDV1, W1-J334F, W1-JDGAG, W1-JDGBG, W1-KBBBV, W1-KBRAG, W1-KPCAG, W1-KPCBG, W1-KPCCG, W1-KPD1A, W1-KPRAG, X-Note X200 Series, X100, X101, X110, X110 10" UMPC series, X110 Series, X110-G A7HBG, X110-L A7SBG, x110g, X120, X120 Series, X130 Series, X140 Series, X170 Series, X200 Series, X300 Series, XD170 Series, XNOTE LGX30, Xnote P330, Xnote P330 Series, XNOTE P420, XNOTE P420 Series, Xnote P430, Xnote P530, XNOTE PD420, Xnote S430, Xnote S530, LG [XU100370-17008](#) Laptop Battery, Z1 Pro Express Dual, Z1 Series, Z1-A2007, Z1-A2E3V, Z1-A720K, Z1-APCAG, LG [Z1-B250K](#) Laptop Battery, Z1-BAR1A3, Z1-P2007, Z160, Z160-gh5wk, Z360, Z360-GH60K,